

[Manuals.plus](#) /

› [ACE4U](#) /

› ACE4U AP-12X Portable Vacuum Sealer Instruction Manual

ACE4U AP-12X

ACE4U AP-12X Portable Vacuum Sealer Instruction Manual

Model: AP-12X

1. INTRODUCTION

Thank you for choosing the ACE4U AP-12X Portable Vacuum Sealer. This device is designed to help preserve the freshness of your food by removing air and sealing bags, extending shelf life and reducing food waste. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use.



Image 1: The ACE4U AP-12X Portable Vacuum Sealer actively sealing a bag containing meat, demonstrating its primary function.

2. KEY FEATURES

- **Powerful Performance:** Operates at 135W, providing strong suction and efficient sealing for various food preservation needs.
- **Wide Compatibility:** Supports a maximum bag mouth width of 32cm (12.6 inches), suitable for larger food packaging bags.
- **Adjustable Temperature:** Features 5 temperature control modes for precise sealing based on different food types and requirements.
- **Advanced Vacuum Function:** Offers a vacuum degree of -60kPA for dry items and -35kPA for wet items, ensuring optimal freshness.
- **Fast and Efficient:** A vacuum speed of 3.2L/min ensures quick and effective sealing, reducing wait times.
- **5mm Widened Heating Wire:** Provides a strong and reliable seal compared to standard 3mm wires.

3. SAFETY INSTRUCTIONS

To prevent injury or damage to the appliance, please observe the following safety precautions:

- Read all instructions before use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep out of reach of children. Close supervision is necessary when used near children.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended attachments.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the lid is properly closed before operating.
- This appliance is for household use only.

4. PACKAGE CONTENTS

Upon unpacking, please verify that all items are present and in good condition:

- ACE4U AP-12X Portable Vacuum Sealer Unit
- Power Cord
- Instruction Manual
- (Optional: Starter pack of vacuum sealer bags)

5. PRODUCT OVERVIEW AND CONTROLS

Familiarize yourself with the components and control panel of your vacuum sealer:

Dry and
Wet

Mode and temperature selection

The correct choice of food with different properties (dry Dry/wet Wet) to achieve perfect sealing effect



Dryfood dry

[Dry] [Wet]
1 2 3 4 5



Wetfood wetness

[Dry] [Wet]
1 2 3 4 5



Food with more water

Multi-liquid

[Dry] [Wet]
1 2 3 4 5



Image 2: Detailed view of the control panel, highlighting the 'TEMP', 'SEAL', 'VAC', and 'VAC SEAL' buttons, along with indicators for dry, wet, and multi-liquid food settings.

- **TEMP Button:** Adjusts the sealing temperature (1-5 levels) based on bag thickness and food type.
- **SEAL Button:** Initiates a sealing-only process without vacuuming.
- **VAC Button:** Initiates a vacuum-only process (e.g., for vacuum canisters, not included).
- **VAC SEAL Button:** Initiates a full vacuum and seal cycle.
- **Dry/Wet Indicators:** Lights indicate the selected food mode (Dry, Wet, Multi-Liquid).
- **Push Button (Front):** Releases the lid after sealing.

6. SETUP

1. **Placement:** Place the vacuum sealer on a flat, stable, and dry surface.
2. **Power Connection:** Plug the power cord into the appliance and then into a standard electrical outlet (100-240V/50-60Hz).
3. **Pre-heating:** Allow the machine to pre-heat for a few seconds after plugging in.

7. OPERATING INSTRUCTIONS

7.1 Preparing the Bag

- Use only vacuum sealer bags designed for this appliance.
- Ensure the open end of the bag is clean, dry, and free from food particles or wrinkles.
- Leave at least 2-3 inches of space between the food and the top of the bag for proper sealing.

7.2 Selecting Food Mode and Temperature

Press the **TEMP** button to cycle through the 5 temperature settings. The appropriate setting depends on the bag material and desired seal strength. Refer to the indicators for Dry, Wet, or Multi-Liquid food types.

**Dry and wet oil powder pickles
flooded vegetables**

Pure water bag! All-through one-key vacuum sealing



Image 3: The vacuum sealer demonstrating its capability to seal both dry items like nuts and wet items like meat, highlighting its versatility.

- **Dry Food:** For items like nuts, grains, or dried fruits.
- **Wet Food:** For items with some moisture, such as fresh meats or marinated foods.

- **Multi-Liquid Food:** For items with significant liquid content, like soups or stews (requires specific bags and careful handling).

7.3 Vacuum Sealing (VAC SEAL)

1. Place the open end of the bag into the vacuum channel, ensuring it lies flat across the sealing strip. The maximum bag width is 32cm.
2. Close the lid firmly until both sides click into place.
3. Press the **VAC SEAL** button. The machine will automatically remove air from the bag and then seal it.
4. Once the process is complete, the indicator light will turn off. Press the "PUSH" button on the front to release the lid and remove the sealed bag.

7.4 Sealing Only (SEAL)

Use this function to create a seal without vacuuming, for example, to create custom-sized bags from a roll or to seal delicate items that might be crushed by vacuuming.

1. Place the open end of the bag across the sealing strip.
2. Close the lid firmly until both sides click into place.
3. Press the **SEAL** button. The machine will heat and seal the bag.
4. Once the sealing is complete, the indicator light will turn off. Press the "PUSH" button to release the lid and remove the sealed bag.

5 Mm widened heating wire sealing

Compared with the traditional 3mm heating wire, 5mm sealing effect is strong

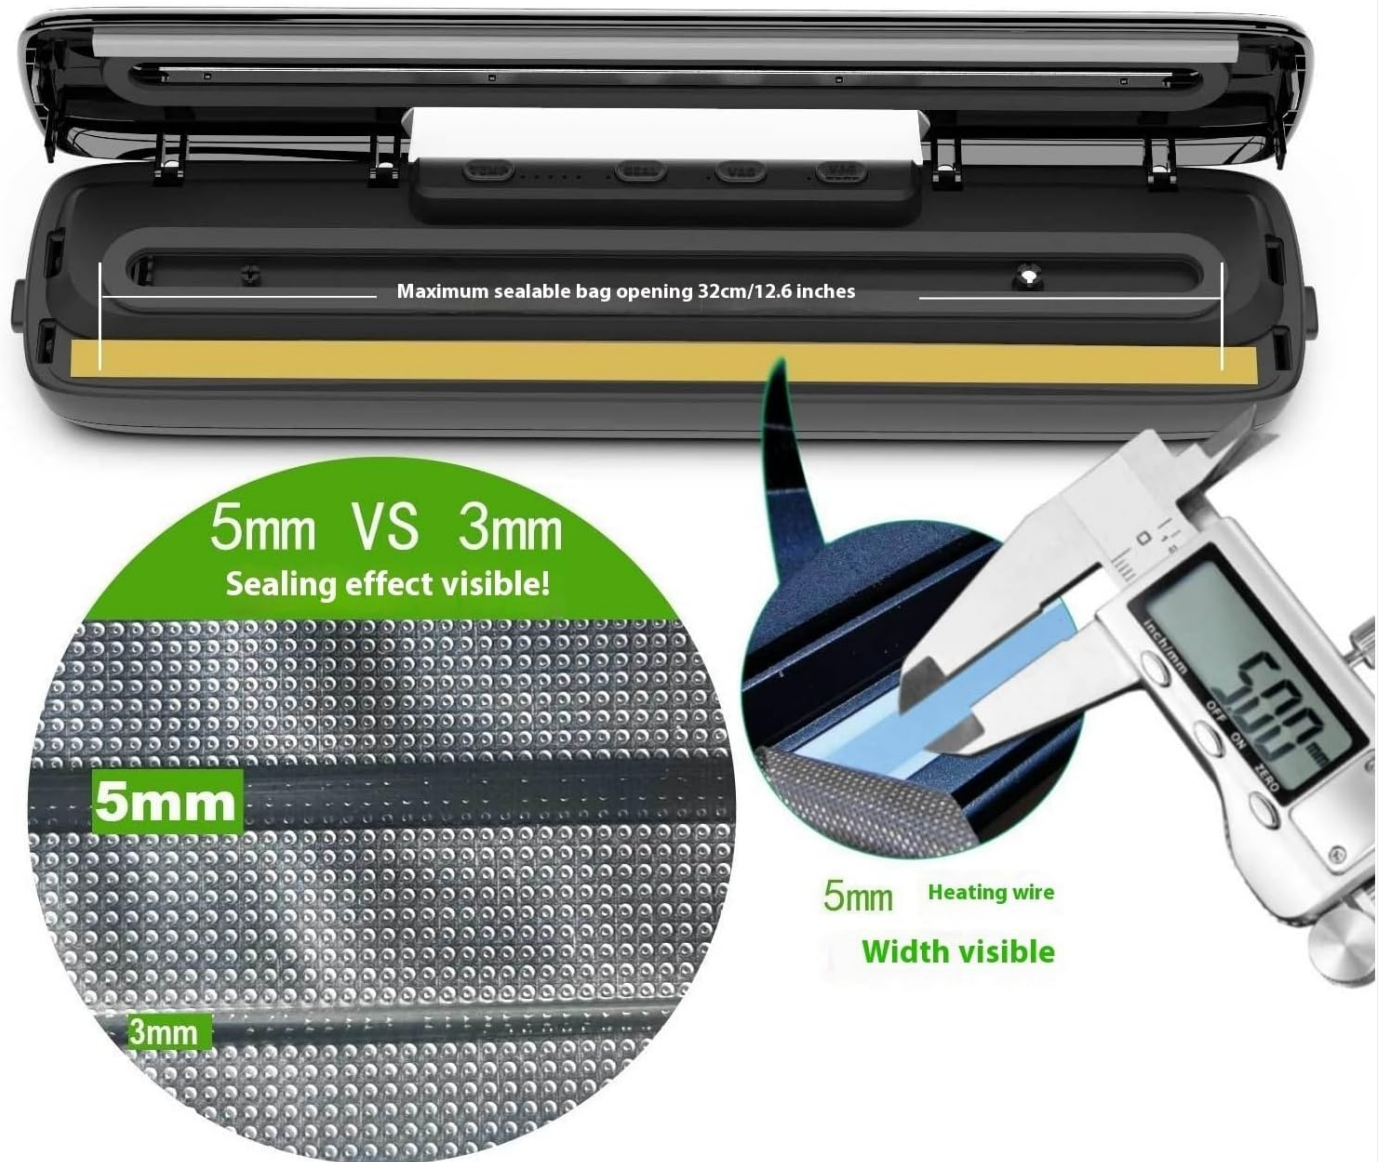


Image 4: A magnified view illustrating the 5mm widened heating wire, which ensures a strong and durable seal for food bags.

8. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your vacuum sealer.

- **Always unplug the appliance before cleaning.**
- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Clean the vacuum channel and sealing strip with a damp cloth to remove any food residue. Ensure these areas are completely dry before next use.
- The sealing strip may become hot during use; allow it to cool before cleaning.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet malfunction.	Ensure power cord is securely plugged in. Test outlet with another appliance.
Bag does not vacuum properly.	Bag not positioned correctly; lid not fully closed; bag is damaged; vacuum channel is dirty.	Reposition bag, ensuring it's flat. Close lid firmly until it clicks. Check bag for holes. Clean vacuum channel.
Bag does not seal.	Sealing strip is dirty or wet; temperature setting is too low; bag material is incompatible.	Clean and dry the sealing strip. Increase temperature setting. Use appropriate vacuum sealer bags.
Air leaks into sealed bag.	Seal is incomplete; food particles in seal area; sharp edges on food.	Re-seal the bag. Ensure seal area is clean. Pad sharp food edges with paper towel.

10. SPECIFICATIONS

- **Model:** AP-12X
- **Power:** 135W
- **Power Supply Voltage:** 100-240V / 50-60Hz
- **Max Bag Mouth Width:** 32cm (12.6 inches)
- **Heating Wire Width:** 5mm
- **Temperature Control Modes:** 5 levels
- **Heating Wire Voltage:** DC13.5V
- **Vacuum Degree (Dry):** -60kPA
- **Vacuum Degree (Wet):** -35kPA
- **Vacuum Speed:** 3.2 L/min
- **Product Dimensions:** 0.39 x 0.39 x 0.39 inches *(Note: This dimension may be a placeholder in source data and not reflect actual product size.)*
- **Item Weight:** 3.31 pounds (1500 Grams)
- **Manufacturer:** ACE4U

11. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact ACE4U customer support. If you encounter any issues or have questions regarding your AP-12X Portable Vacuum Sealer, please reach out to our customer service team for assistance. Contact information for support is typically found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FCFN5CQT>

More documents and user manuals: **<https://manuals.plus/>**