

## topzee TBT-320 Series

# Topzee 2-Slice Toaster (Model TBT-320 Series) Instruction Manual

Model: TBT-320 Series | Brand: Topzee

## 1. IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.

## 2. GETTING TO KNOW YOUR TOPZEE 2-SLICE TOASTER

The Topzee 2-Slice Toaster is designed for efficient and versatile toasting. It features wide slots, multiple function buttons, and a browning control dial to customize your toast to perfection.



Image: Topzee 2-Slice Toaster with controls visible, showcasing its sleek design and user interface.

### Key Components:

- **Wide Toasting Slots:** Accommodate various bread types, up to 1.5 inches wide.
- **High-Lift Lever:** For easy and safe retrieval of smaller items.
- **Browning Control Dial:** Adjusts toast shade from 1 (light) to 7 (dark).
- **Function Buttons:** Dedicated buttons for Bagel, Pastry, Waffle, English Muffin, Single, Defrost, Reheat, and Cancel.
- **Removable Crumb Tray:** Located at the bottom for easy cleaning.
- **Cord Storage:** Discreetly located at the bottom of the unit.

### 3. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials.

Ensure adequate ventilation around the toaster.

3. **First Use:** Before first use, operate the toaster without bread on the highest setting (7) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal.
4. **Plug In:** Insert the power plug into a standard 120V AC electrical outlet.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Function Buttons

The Topzee toaster offers 4-in-1 toasting functions to cater to your diverse needs:



Image: Topzee 2-Slice Toaster showcasing multiple toasting modes: Single, Reheat, Defrost, and Cancel.

- **BAGEL:** Toasts the cut side of bagels while gently warming the outer side.
- **PASTRY:** Optimized setting for pastries.
- **WAFFLE:** Optimized setting for waffles.
- **ENGLISH MUFFIN:** Optimized setting for English muffins.
- **SINGLE:** Activates toasting for only one slice of bread.
- **DEFROST:** Defrosts and toasts frozen bread.
- **REHEAT:** Warms up previously toasted bread without further browning.

- **CANCEL:** Stops the toasting cycle at any time.

## 4.2. Browning Control

Use the browning control dial to select your desired toast shade. The dial ranges from 1 (lightest) to 7 (darkest). Experiment to find your preferred setting.



Image: Topzee 2-Slice Toaster demonstrating 7-level browning precision with toast shades from 70s to 235s, powered by 900W for fast and even toasting.

## 4.3. High-Lift Lever

The high-lift lever allows you to safely retrieve smaller items like English muffins or small bread slices without burning your fingers. Simply push the lever upwards after the toast pops up.

# Durable Stainless Steel & High Lift

Safe & Odorless, Easy Access for Small Slices



*Image: Topzee 2-Slice Toaster highlighting its durable stainless steel construction and high-lift lever for safe retrieval of smaller items.*

## 5. BREAD TYPES AND TOASTING TIPS

---

The 1.5-inch wide slots of the Topzee toaster are designed to accommodate a variety of bread types, ensuring even toasting for each.

# For Various Breads

Slice-Side Toasting, True Bagel Mode



Image: Topzee 2-Slice Toaster with 1.5-inch wide slots, suitable for various bread types including English Muffins, White Bread, Grain Bread, Bagel, Pastry, and Waffle.

- **Bagels:** Use the BAGEL function for perfectly toasted bagels.
- **Thick Breads:** The wide slots are ideal for artisan breads, Texas toast, and other thicker slices.
- **Frozen Items:** Use the DEFROST function for frozen bread, waffles, or pastries.
- **Reheating:** The REHEAT function is perfect for warming up toast that has cooled down without further browning.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and longevity of your toaster.

# Effortless Cleaning

Wipe Clean in 5 Seconds



Image: Topzee 2-Slice Toaster illustrating effortless cleaning with a removable crumb tray and discreet cord storage.

## 6.1. Removable Crumb Tray

- Always unplug the toaster and allow it to cool completely before cleaning.
- Pull out the removable crumb tray located at the bottom of the toaster.
- Discard crumbs and wipe the tray clean with a damp cloth.
- Ensure the tray is completely dry before reinserting it into the toaster.

## 6.2. Exterior Cleaning

- Wipe the exterior of the toaster with a damp cloth and mild detergent.
- Do not use abrasive cleaners or scouring pads, as they may scratch the stainless steel finish.
- Ensure the toaster is completely dry before plugging it back in.

## 6.3. Cord Storage

The toaster features discreet cord storage on the bottom to keep your countertop tidy when not in use.

## 7. TROUBLESHOOTING

---

- **Toaster not working:** Ensure the toaster is properly plugged into a working electrical outlet. Check your circuit breaker.
- **Bread stuck:** Unplug the toaster immediately. Allow it to cool, then carefully remove the bread using non-metallic utensils. Never use metal objects.
- **Uneven toasting:** Ensure bread slices are centered in the slots. Adjust the browning control setting.
- **Smoke from toaster:** This may be due to crumbs accumulating in the crumb tray or food residue on the heating elements. Unplug, allow to cool, and clean the crumb tray.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	topzee
Model	TBT-320 Series
Color	White
Material	Stainless Steel
Product Dimensions	11.8"D x 6.3"W x 7.4"H
Specific Uses For Product	Bagel
Wattage	900 watts
Number of Slices	2
Style	Modern
UPC	850077788079
Item Weight	3.56 pounds

## 9. WARRANTY AND SUPPORT

---

For questions, concerns, or warranty information, please contact Topzee customer support:

- **Email:** [support@topzee.com](mailto:support@topzee.com)
- **Phone:** 1-800-770-5222
- **Web:** [www.topzee.com](http://www.topzee.com)