

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [PAXA](#) /

› PAXA Clipbuds7 Open Ear Earbuds User Manual

PAXA Clipbuds714

PAXA Clipbuds7 Open Ear Earbuds User Manual

Model: Clipbuds714

Brand: PAXA

INTRODUCTION

Thank you for choosing the PAXA Clipbuds7 Open Ear Earbuds. These earbuds are designed to provide a comfortable and immersive audio experience while maintaining awareness of your surroundings. Featuring a unique clip-on design with detachable butterfly earrings, Bluetooth 5.4 connectivity, and long battery life, the Clipbuds7 are ideal for daily wear, fitness, and work. Please read this manual carefully to ensure proper use and maintenance of your device.

PACKAGE CONTENTS

Please check the box for the following items:

- PAXA Clipbuds7 Open Ear Earbuds (Left and Right)
- Charging Case
- Detachable Butterfly-Style Ear Clips (Pre-attached or separate, depending on model variant)
- USB-C Charging Cable
- User Manual (This document)

Let Your Charisma Shine



Figure 1: Contents of the PAXA Clipbuds7 package.

PRODUCT OVERVIEW

The PAXA Clipbuds7 feature a unique design for comfort and style. Below is an overview of the main components.



Figure 2: PAXA Clipbuds7 Earbuds and Charging Case.

Your fashionable earbuds accessories, versatile style



Detachable earring design



Sparkling Crystal Butterfly Earrings



Figure 3: Detachable Butterfly Earring Design.

The butterfly ear clips are designed to be removable, allowing you to customize the look of your earbuds. To attach or detach the butterfly clip, gently slide it onto or off the designated slot on the earbud's C-bridge.

Your browser does not support the video tag.

Video 1: Demonstration of attaching and detaching the butterfly earring and wearing the earbuds.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case. Place the earbuds into the charging case and close the lid. Connect the USB-C charging cable to the charging port on the case and the other end to a USB power source (e.g., computer, wall adapter).

- The LED display on the charging case indicates the battery level.

- A full charge for the case takes approximately 0.5 hours.
- The earbuds provide up to 8 hours of listening time on a single charge, with an additional 36 hours from the charging case.

Long-Lasting Listening Experience

44 hours of battery life, you only need to charge it once a week

44 Hrs



Fast Charging ⚡ 10Mins Fast Charging = ▶ 3Hrs Playtime

Figure 4: Battery Life and Charging Information.

2. Bluetooth Pairing

To pair your PAXA Clipbuds7 with a device:

1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case lid. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on the earbuds (if applicable, refer to specific LED indicators in the quick start guide).
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings and turn Bluetooth on.
4. Search for "Clipbuds7" in the list of available devices and select it to connect.
5. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or solid LED light).

The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

Next-Gen Bluetooth 5.4

Stable connection with zero dropouts or lag across all your devices - phones, laptops, tablets



Figure 5: Bluetooth 5.4 Connectivity.

WEARING INSTRUCTIONS

 
The PAXA Clipbuds7 are designed for comfortable and secure open-ear wear. Follow these steps for optimal fit and sound quality:

1. **Open the Earcuff:** Gently open the C-shaped earcuff of the earbud.
2. **Clip onto Ear:** Position the earbud on the thinnest part of your ear, then gently clip it on.
3. **Adjust for Comfort:** Adjust the earbud slightly to align the sound outlet with your ear canal for optimal sound and a secure fit. The flexible C-bridge design adapts to various ear shapes.


Ergonomic Clip-On Earbuds for All-Day Comfort

Designed with a lightweight open-loop structure, these clip-on earbuds gently attach to your ears

Wearing Tips

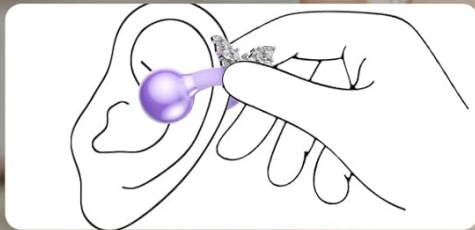

 
1. Clip the earbuds on the thinnest part of your ear

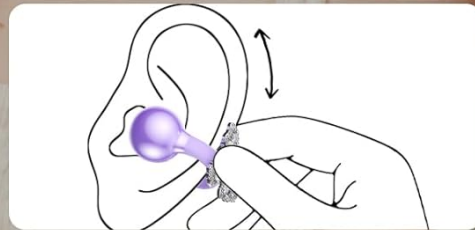

2. Adjust the earbud tip to align with your ear canal for optimal sound

Figure 6: Wearing Tips for PAXA Clipbuds7.

 
Let Your Charisma Shine

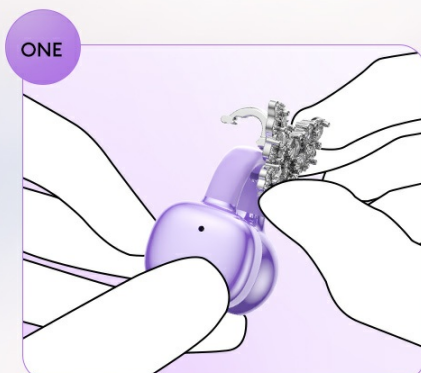

Step 1: Open the earcuff.



 Step 2: Clip onto the stem of the earbud.

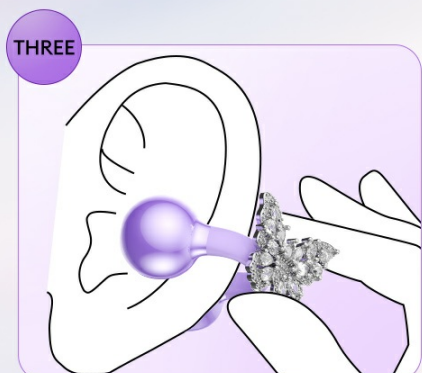

Step 3: Slip on and shine

Figure 7: Detailed Wearing Steps.

OPERATING INSTRUCTIONS

The PAXA Clipbuds7 feature touch controls for easy management of your audio and calls.

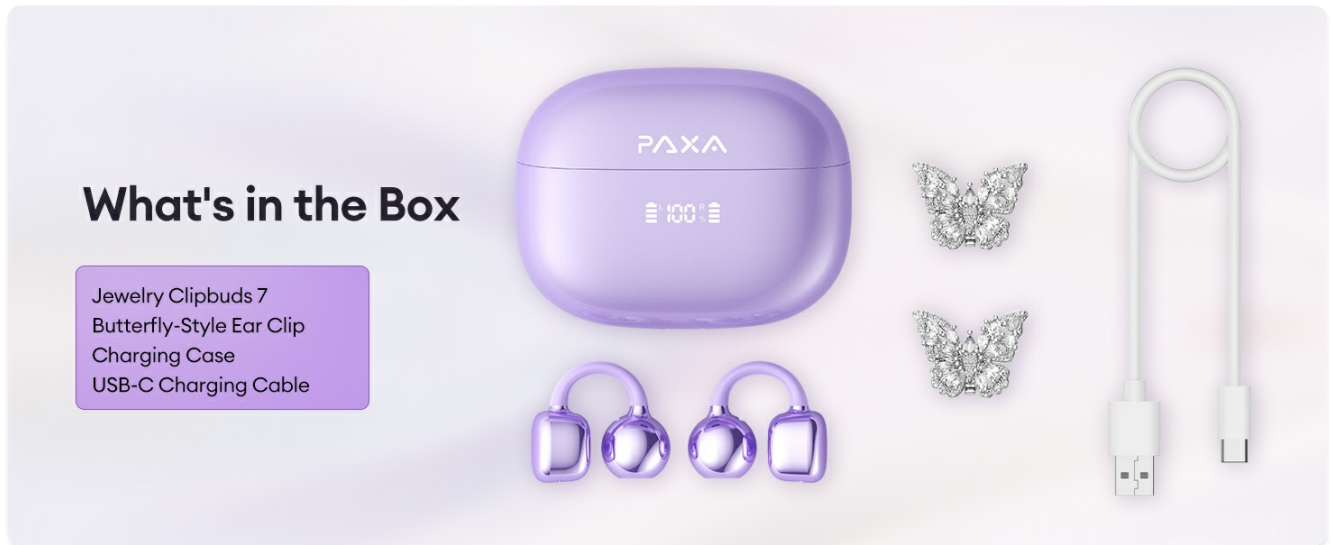 


Figure 8: Touch Control Functions.

Function	Action
Power On	Open the charging case lid.
Power Off	Place earbuds back into the charging case and close the lid.
Play/Pause Music	Double-click either earbud.
Next Song	Triple-click the right (R) earbud.
Previous Song	Triple-click the left (L) earbud.
Volume Up	Click the right (R) earbud.
Volume Down	Click the left (L) earbud.
Answer/End Call	Double-click either earbud.
Reject Call	Press and hold either earbud for 2 seconds.
Activate Voice Assistant	Hold both earbuds for 2 seconds.

MAINTENANCE & CARE

Proper care will extend the life of your PAXA Clipbuds7.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use harsh chemicals or abrasive materials.

- **Water Resistance:** The earbuds are IP45 waterproof, meaning they are protected against dust and low-pressure water jets. They are suitable for workouts and outdoor use but should not be submerged in water. Dry them thoroughly before placing them back in the charging case.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the earbuds and case frequently. Charge them regularly, even if not used for extended periods.

TROUBLESHOOTING

If you encounter issues with your PAXA Clipbuds7, try the following solutions:

Problem	Possible Solution
Earbuds not pairing	<ul style="list-style-type: none"> • Ensure earbuds are charged. • Turn off and on Bluetooth on your device. • Forget "Clipbuds7" from your device's Bluetooth list and re-pair. • Place earbuds back in case, close lid, wait 5 seconds, then open again to re-enter pairing mode.
Only one earbud working	<ul style="list-style-type: none"> • Ensure both earbuds are charged. • Place both earbuds back in the charging case, close the lid, and then open it again. • Try resetting the earbuds (refer to specific reset instructions if available in a separate quick start guide, or try holding touch controls for an extended period while in case).
Low volume or poor sound quality	<ul style="list-style-type: none"> • Adjust volume on both your device and the earbuds. • Ensure earbuds are worn correctly and securely in your ear. • Clean any debris from the earbud speakers. • Move closer to your connected device to avoid interference.
Charging case not charging	<ul style="list-style-type: none"> • Check the USB-C cable and power adapter. Try a different cable or adapter. • Ensure the charging port on the case is clean and free of debris.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	Clipbuds714
Brand	PAXA
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.4
Bluetooth Range	50 Feet
Ear Placement	Open Ear
Form Factor	Over Ear (Clip-on)
Noise Control	Hybrid Noise Cancellation (for mic, ENC)
Control Type	Touch Control
Water Resistance Level	IP45 Waterproof
Single Charge Playtime	Up to 8 hours
Total Playtime (with case)	Up to 44 hours
Carrying Case Battery Capacity	250 Milliamp Hours
Carrying Case Charging Time	0.5 Hours
Item Weight	2.39 ounces
Material	Plastic
Compatible Devices	Cellphones, Laptops, Tablets

WARRANTY AND SUPPORT

PAXA products are manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included in your product packaging or visit the official PAXA website. Please retain your proof of purchase for warranty claims.