

Basike BA-FON153

Basike BA-FON153 Bluetooth 5.4 Open-Ear Sport Earphones User Manual

Model: BA-FON153 | Brand: Basike

1. PRODUCT OVERVIEW

The Basike BA-FON153 Bluetooth 5.4 Open-Ear Sport Earphones are designed for comfort and performance during physical activities. Featuring an open-ear design, they allow you to stay aware of your surroundings while enjoying high-quality audio. The earphones come with a charging case that provides extended battery life and a real-time LED display.

Key Features:

- **Open-Ear & Lightweight Design:** Ear-hook structure that contours the ear without blocking the ear canal, weighing only 8g, comfortable and ideal for prolonged use with environmental awareness.
- **Fast Connection & Instant Pairing:** Equipped with a Bluetooth 5.4 chip for automatic connection after the first use and stable signal up to 15 meters. Simply open the case to connect quickly to your device.
- **Immersive Sound & Clear Voice:** 14mm drivers deliver powerful stereo sound with deep bass and crisp highs. Integrated HD microphone captures your voice precisely for clear calls.
- **Extended Playtime & LED Display:** Enjoy up to 36 hours of use with the fully charged case (6 hours per earphone session). The LED display shows real-time battery levels for earphones and case.
- **Smart Touch Controls:** Simple touch operations control music, calls, volume, and voice assistant with total practicality.
- **Sweat and Splash Resistant:** IPX4 rating, suitable for workouts and outdoor activities.

Package Contents:

- 1x Basike BA-FON153 Bluetooth Sport Earphones (OWS)
- 1x Charging Case with LED Display
- 1x USB Type-C Charging Cable
- 1x User Manual
- 1x Packaging Box

Product Diagram:

Refer to the image below for a visual representation of the Basike BA-FON153 earphones and charging case.



Figure 1: Basike BA-FON153 Earphones and Charging Case.

2. SPECIFICATIONS

Model Name	BA-FON153
Connectivity	Bluetooth 5.4
Wireless Range	Up to 15 meters (49 feet)
Audio Codecs	AAC, SBC
Speaker Driver Size	14 mm
Frequency Response	20Hz – 20kHz

Impedance	32 Ohms
Earphone Battery Capacity	2 x 40mAh
Charging Case Battery Capacity	400mAh
Earphone Playtime	Up to 6 hours
Total Playtime (with case)	Up to 36 hours
Call Time	Up to 5 hours
Standby Time	Up to 120 hours
Earphone Charging Time	Approx. 1 hour
Case Charging Time	Approx. 2 hours
Charging Port	USB Type-C
Water Resistance	IPX4 (Sweat and Splash Resistant)
Earphone Weight (each)	7g (0.25 oz)
Case Weight	50g (1.76 oz)
Case Dimensions	95 × 27.5 × 56 mm

3. SETUP

3.1 Charging the Earphones and Case

Before first use, fully charge the earphones and the charging case.

- Place the earphones into the charging case. Ensure they are correctly seated.
- Connect the provided USB Type-C cable to the charging port on the case and to a power source (e.g., USB wall adapter, computer USB port).
- The LED display on the charging case will show the battery level during charging.
- Charging time for earphones is approximately 1 hour. Charging time for the case is approximately 2 hours.



Figure 2: Charging Case with LED Display indicating battery status.

3.2 Pairing with a Device

The earphones support automatic pairing after the initial setup.

1. Ensure the earphones are charged.
2. Open the charging case. The earphones will automatically enter pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for available Bluetooth devices and select "BA-FON153" (or similar name) from the list.
5. Once connected, you will hear a confirmation sound, and the earphones will be ready for use.
6. For subsequent uses, simply open the charging case, and the earphones will automatically connect to the last paired device.



Mais rápido e mais estável



 **Bluetooth 5.4**
Sincronização De Imagem E Som

Figure 3: Earphones connected to a mobile device via Bluetooth 5.4.

4. OPERATING INSTRUCTIONS

4.1 Wearing the Earphones

The BA-FON153 earphones feature an open-ear hook design for a secure and comfortable fit.

1. Identify the left (L) and right (R) earphones.
2. Gently place the earphone over your ear, ensuring the ear hook sits comfortably behind your ear.
3. Adjust the earphone until the speaker is positioned correctly near your ear canal for optimal sound without blocking it.



Trava Giratória

Airbag de silicone que não agride a pele, macio e confortável

Use-o Por Um Longo Período Sem Dor

Figure 4: Proper wearing of the earphone with its flexible ear hook.

4.2 Touch Controls

The earphones are equipped with smart touch controls for easy management of music and calls.

Action	Function
Single Tap	Play/Pause music, Answer/End call
Double Tap (Right Earphone)	Next Track
Double Tap (Left Earphone)	Previous Track
Triple Tap (Right Earphone)	Volume Up
Triple Tap (Left Earphone)	Volume Down
Long Press (2 seconds)	Activate Voice Assistant, Reject Call

4.3 LED Display on Charging Case

The charging case features an LED display that indicates the battery level of both the case and the individual earphones. This allows for real-time monitoring of power status.

5. MAINTENANCE

5.1 Cleaning

- Regularly clean the earphones and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical sprays.
- Ensure charging contacts on both earphones and case are clean and free of debris to maintain proper charging.

5.2 Storage

- When not in use, store the earphones in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

5.3 Water Resistance (IPX4)

The earphones are rated IPX4, meaning they are resistant to sweat and splashes. They are not waterproof and should not be submerged in water or exposed to heavy rain. Ensure the earphones are dry before placing them back into the charging case to prevent damage.

6. TROUBLESHOOTING

Problem	Possible Solution
Earphones not pairing	<ul style="list-style-type: none">• Ensure earphones are charged.• Turn off and on Bluetooth on your device.• Forget "BA-FON153" from your device's Bluetooth list and try pairing again.• Place earphones back in the case, close, then open again to reset pairing mode.
No sound from one earphone	<ul style="list-style-type: none">• Ensure both earphones are charged.• Try resetting the earphones (refer to manual for specific reset instructions if available, otherwise try re-pairing).• Check audio balance settings on your device.
Charging issues	<ul style="list-style-type: none">• Check if the charging cable is securely connected.• Try a different USB Type-C cable or power adapter.• Ensure charging contacts on earphones and case are clean.

Poor sound quality	<ul style="list-style-type: none">• Ensure earphones are properly worn and positioned.• Move closer to your paired device to avoid interference.• Check the audio source quality.
--------------------	---

7. ADDITIONAL RESOURCES

The following video provides a visual overview of the Basike earphones, including unboxing and usage demonstrations. Please note that the video may feature a slightly different model (Ba-FON001) but demonstrates similar features and functionality relevant to the BA-FON153.

Your browser does not support the video tag.

Video 1: Overview of Basike Earphones (demonstrates a similar model, Ba-FON001, with relevant features).

8. WARRANTY AND SUPPORT

Basike products come with a comprehensive warranty and dedicated customer support.

- **Warranty:** 1-year warranty against manufacturing defects.
- **Customer Support:** 24/7 customer support is available for any questions or assistance. Please refer to the contact information provided in your product packaging or on the official Basike website.