

Daewoo DAF-1886-GRIS

Daewoo Glass Air Fryer DAF-1886-GRIS Instruction Manual

Model: DAF-1886-GRIS

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Daewoo Glass Air Fryer DAF-1886-GRIS. Please read all instructions carefully before first use and retain this manual for future reference. The Daewoo Glass Air Fryer is designed for preparing a variety of dishes with minimal oil, offering a healthier alternative to traditional frying. It features a 4.5-liter capacity, suitable for cooking whole chickens or large portions, and a transparent glass basket for 360-degree cooking visibility.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or protective gloves when handling hot components.
- To protect against electric shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

- Ensure the appliance is placed on a stable, heat-resistant surface with adequate ventilation around it.
- Never operate the air fryer without the glass basket properly inserted.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Daewoo Glass Air Fryer.

- Main Unit with Control Panel
- Transparent Glass Basket (4.5L capacity)
- Cooking Rack/Grill Plate
- Handle
- Power Cord



Front view of the Daewoo Glass Air Fryer, showing the main unit and the transparent glass basket.



Side view of the Daewoo Glass Air Fryer, highlighting the handle and air vents.



Rear view of the Daewoo Glass Air Fryer, showing the power cord and exhaust.

4. SETUP AND FIRST USE

4.1 Unpacking

- Remove all packaging materials, stickers, and labels from the appliance.
- Check that all components are present and undamaged.

4.2 Initial Cleaning

- Wipe the exterior of the main unit with a damp cloth.
- Wash the glass basket and cooking rack with hot water, a mild dishwashing liquid, and a non-abrasive sponge. Rinse thoroughly and dry completely.
- Do not immerse the main unit in water or any other liquid.

4.3 Placement

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back, sides, and above the appliance for proper air circulation.
- Do not place the appliance against a wall or other appliances.

4.4 Power Connection

- Insert the power plug into a grounded wall outlet.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The Daewoo Glass Air Fryer features a smart touch panel for intuitive control.



Close-up of the Daewoo Glass Air Fryer's smart touch panel, displaying temperature and time settings, with various cooking presets.

- **Power Button:** Turns the appliance on/off.
- **Temperature Control:** Adjusts temperature between 60°C and 200°C.
- **Timer Control:** Sets cooking time up to 60 minutes.
- **Preset Programs:** 8 automatic programs for common dishes (e.g., potatoes, cakes, chicken).

5.2 General Operation

1. Place the cooking rack inside the glass basket.
2. Place your ingredients into the glass basket. Do not overfill.
3. Slide the glass basket firmly into the main unit.
4. Plug the power cord into a wall outlet. The appliance will beep, and the power button will illuminate.
5. Press the Power Button to turn on the display.
6. **Using Preset Programs:** Select one of the 8 automatic programs by touching the corresponding icon. The appliance will automatically set the recommended time and temperature.
7. **Using Manual Mode:** Alternatively, manually set the desired temperature (60°C-200°C) and time (up to 60 minutes) using the temperature and timer control buttons.
8. Press the Start/Pause button to begin cooking.
9. During cooking, you can monitor the food through the 360° visible glass basket.
10. For some recipes, it may be necessary to shake or turn the food halfway through the cooking time. Carefully pull out the basket, shake or turn the food, and then slide the basket back in. The appliance will resume cooking automatically.
11. When the cooking time is complete, the appliance will beep. Carefully pull out the glass basket using the handle.
12. Transfer the cooked food to a plate using tongs. Be cautious of hot oil or food.
13. Unplug the appliance after use.



Capacidad de 4.5 L para
rostizar un pollo entero

Panel de pantalla táctil
inteligente con 8 programas
preestablecidos

Cesta de vidrio de 5 mm
de grosor con visibilidad
de cocción de 360°

Circulación de aire a alta
velocidad que permite calentar
uniforme y rápidamente

Diagram illustrating key features of the Daewoo Glass Air Fryer, including its 4.5L capacity for roasting a whole chicken, smart touch panel with 8 preset programs, 5mm thick glass basket for 360-degree visibility, and high-speed air circulation for uniform and rapid heating.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

6.1 Cleaning

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Glass Basket and Cooking Rack:** Wash these parts with hot water, a mild dishwashing liquid, and a non-abrasive sponge. Rinse thoroughly. *Note: These parts are not dishwasher safe.*
3. **Interior of the Main Unit:** Wipe with a damp cloth. For stubborn food residue, use a soft brush and mild detergent. Ensure no water enters the heating element area.
4. **Exterior of the Main Unit:** Wipe with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Ensure all parts are completely dry before storing or reusing the appliance.

6.2 Storage

- Store the cleaned and dried air fryer in a cool, dry place.
- Do not wrap the power cord tightly around the appliance.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	The appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
	The glass basket is not inserted correctly.	Push the glass basket firmly into the main unit until it clicks into place.
Food is not cooked evenly.	Too much food in the basket.	Reduce the amount of food. Cook in smaller batches.
	Food was not shaken or turned.	Shake or turn ingredients halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use.	Clean the glass basket and cooking rack thoroughly after each use.
	Cooking fatty ingredients.	This is normal for fatty foods. Ensure proper ventilation.

8. TECHNICAL SPECIFICATIONS

Detailed technical information for the Daewoo Glass Air Fryer DAF-1886-GRIS.

Feature	Specification
Model Number	DAF-1886-GRIS
Brand	Daewoo
Capacity	4.5 Liters
Material	Glass
Color	Gray
Wattage	1.2 KW
Voltage	127 Volts
Control Method	Touch
Min Temperature Setting	60 Degrees Celsius
Max Temperature Setting	200 Degrees Celsius
Product Dimensions (D x W x H)	40D x 34W x 37H Centimetres

Feature	Specification
Item Weight	4.6 Kilograms
Dishwasher Safe Parts	No
Included Components	1 x AIR FRYER, 1 x USER MANUAL



Diagram showing the overall dimensions of the Daewoo Glass Air Fryer: 26.5 cm width, 22 cm depth, and 27 cm height.



Diagram detailing the dimensions of the air fryer's glass basket (29 cm x 22.5 cm x 13 cm) and the cooking rack (19 cm x 18.5 cm).



Image displaying the dimensions of included accessories: a round silicone mat (20 cm diameter) and a heat-resistant oven mitt (25 cm height, 15 cm width).

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase. For technical support, service, or inquiries, please contact Daewoo customer service through their official website or the contact details provided in your purchase documentation.