

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TCL](#) /

› [TCL K24 T434D Smartphone User Manual](#)

TCL T434D

TCL K24 T434D Smartphone User Manual

Model: T434D

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your TCL K24 T434D smartphone. Please read this manual thoroughly to ensure proper use and to maximize the device's functionality. The TCL K24 T434D is a reliable smartphone featuring a 6.1-inch HD+ display, 64GB of internal storage, and 4GB of RAM, powered by Android 13. It is designed for everyday use, offering smooth performance and essential features in a compact form factor.

2. WHAT'S IN THE BOX

Upon opening your TCL K24 T434D package, verify that all items are present:

- TCL K24 T434D Smartphone
- USB-C Cable
- SIM Ejector Tool

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your TCL K24 T434D smartphone.





Image 1: Front view of a TCL mobile device. This image displays the device's external screen, which shows the time (10:00), date (Fri 28/06), and battery status (100%). Above the screen, a camera lens is visible, alongside a button with a call icon and three horizontal lines, and a small light indicator.

- **External Display:** Shows time, date, and notifications without opening the phone.
- **Rear Camera:** For capturing photos and videos.
- **Flash/LED Light:** Provides illumination for photos or acts as a flashlight.
- **Call/Shortcut Button:** Quick access to call functions or customizable shortcuts.

4. SETUP

4.1. Inserting the SIM Card

1. Locate the SIM card tray on the side of your device.
2. Insert the SIM ejector tool into the small hole next to the tray to open it.
3. Place your Nano-SIM card into the tray with the gold contacts facing down.
4. Carefully push the tray back into the phone until it clicks into place.

4.2. Initial Charge

Before first use, it is recommended to fully charge your device. Connect the USB-C cable to the phone's charging port and the other end to a compatible power adapter (not included) or a computer's USB port.

4.3. Powering On/Off

- **To Power On:** Press and hold the Power button until the TCL logo appears.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.

4.4. Initial Setup Wizard

Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, Google account setup, and security settings.

5. OPERATING YOUR SMARTPHONE

5.1. Navigation

- **Touchscreen Gestures:** Tap, swipe, pinch-to-zoom are standard Android navigation methods.
- **Home Screen:** Access your apps, widgets, and notifications.
- **Notifications Panel:** Swipe down from the top of the screen to view notifications and quick settings.

5.2. Making Calls

Open the Phone app, enter the number, and tap the call icon. You can also select contacts from your address book.

5.3. Sending Messages

Use the Messages app to send and receive SMS/MMS messages. Tap the '+' icon to compose a new message.

5.4. Camera Usage

Open the Camera app to capture photos and videos. Tap the shutter button to take a picture or record a video. Explore different modes like Portrait, Panorama, or Pro mode if available.

5.5. Internet Connectivity

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi to connect to available networks.
- **Mobile Data:** Ensure mobile data is enabled in Settings > Network & internet > Mobile network for internet access via your carrier.

6. MAINTENANCE

6.1. Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to Settings > System > System update.

6.2. Battery Care

- Avoid extreme temperatures.
- Do not let the battery fully discharge frequently.
- Use the provided USB-C cable for charging.

6.3. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid harsh chemicals or abrasive materials.

6.4. Storage Management

Periodically review and delete unnecessary files, apps, and media to free up storage space and maintain performance. Go to Settings > Storage.

7. TROUBLESHOOTING

Issue	Possible Solution
Device not powering on	Ensure the battery is charged. Connect to a charger for at least 15 minutes, then try powering on again.
Apps crashing or freezing	Close and restart the app. Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the phone.
Poor battery life	Reduce screen brightness, disable unused features (Wi-Fi, Bluetooth, GPS), close background apps, and check for app battery usage in Settings > Battery.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled. Restart your router and phone. Forget the network and reconnect.
No mobile data	Check if mobile data is enabled in Settings. Ensure your SIM card is properly inserted and your plan is active. Contact your carrier if issues persist.

8. SPECIFICATIONS

Feature	Detail
Model Name	TCL K24
Model Number	T434D
Operating System	Android 13.0
Display Size	6.1 Inches HD+
Resolution	1920 x 1080
Processor	MediaTek Helio (2 GHz CPU Speed)

Feature	Detail
RAM	4 GB
Internal Storage	64 GB
Battery Capacity	5000 mAh (Nonstandard Battery)
Connectivity	4G LTE, GSM, UMTS, Wi-Fi
Color	Space Gray
Audio Jack	No headphone jack
Form Factor	Touchscreen

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official TCL support website. Keep your proof of purchase for warranty claims.

Manufacturer: TCL

For further assistance, you may contact TCL customer service through their official channels.

