

[Manuals.plus](#) /

› [HAOYUYAN](#) /

› HAOYUYAN BX17 Wireless Earbuds User Manual

HAOYUYAN BX17

HAOYUYAN BX17 Wireless Earbuds User Manual

Model: BX17

1. INTRODUCTION

This manual provides detailed instructions for the HAOYUYAN BX17 Wireless Earbuds. Please read this guide thoroughly before using your earbuds to ensure proper operation, optimal performance, and longevity of the device. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- BX17 Wireless Earbuds (2 units)
- Wireless Charging Case (1 unit)
- Eartips with 3 Sizes (Small, Medium, Large)
- Type-C Charging Cable (1 unit)
- Owner's Manual (This document)



Image: Package contents of the HAOYUYAN BX17 Wireless Earbuds.

3. PRODUCT OVERVIEW

The HAOYUYAN BX17 Wireless Earbuds are designed for comfort and high-quality audio, featuring a secure over-ear hook design and an IPX7 waterproof rating, making them suitable for sports and active lifestyles. The charging case includes an LED display for battery status.



Image: HAOYUYAN BX17 Wireless Earbuds and Charging Case.

Sound Technology

Equipped with 14.3mm dynamic drivers and advanced acoustic tuning, these earbuds deliver powerful bass, crisp highs, and balanced mids. The ergonomic design enhances passive noise isolation, and the built-in microphone ensures clear voice pickup during calls.

Hi-Fi stereo Sound

Equipped with a 14.3mm Graphene Diaphragm



Image: Internal structure of the earbud, illustrating the 14.3mm dynamic driver.

4. SETUP

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case. The charging case provides multiple charges for extended playtime.

1. Place the earbuds into the charging case. Ensure they are correctly seated to initiate charging.
2. Connect the Type-C charging cable to the charging port on the case and a USB power source.
3. The LED display on the charging case will show the battery levels of both the case and individual earbuds.

A full charge for the case takes approximately 1.5 hours. Earbuds provide up to 15 hours of playtime on a single charge, with the charging case extending total playtime to 80 hours.

80 Hours Long Battery Life

Enjoy longer music time with charging case



1.5hrs
Fast Charging



15hrs
Single Charge



60hrs
Charging case



Type-c

Image: Battery life and charging details for the BX17 Earbuds.

LED Power Digital Display

Easily Check The Remaining Battery and Charging Status at Any Time



Image: LED Power Digital Display on the charging case.

4.2 Pairing with Your Device

The BX17 earbuds feature Hall switch technology for automatic pairing.

1. Ensure your device's Bluetooth is enabled.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device, search for Bluetooth devices and select "BX17" from the list.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

The earbuds will automatically reconnect to the last paired device when removed from the case, provided Bluetooth is active on the device.



Image: Bluetooth 5.3 technology and one-step pairing.

4.3 Wearing the Earbuds

For optimal sound quality and a secure fit, especially during physical activity, follow these steps:

1. Select the correct ear tip size (S, M, L) that provides a comfortable and snug seal in your ear canal.
2. Place the earbud into your ear, ensuring the ear tip is properly seated.
3. Adjust the flexible ear hook over your ear until it feels secure and comfortable.

Image: Guide for wearing the HAOYUYAN BX17 Earbuds for a secure fit.

5. OPERATING INSTRUCTIONS

The BX17 earbuds feature intuitive physical buttons for easy control of music, calls, and voice assistant functions.

Easy Control, Physical Buttons

Light Click of Your Fingertips to Play Music or Answer Calls

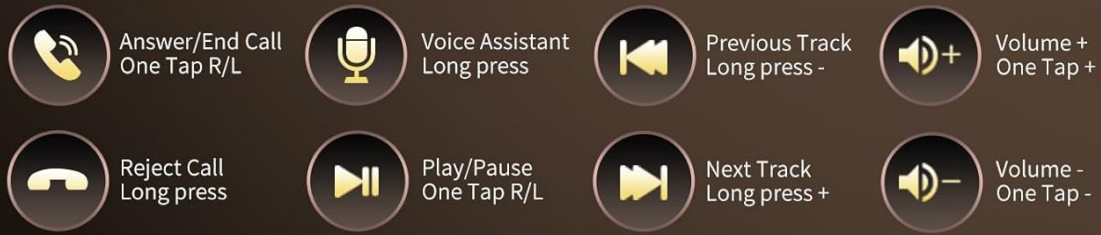


Image: Overview of earbud physical button controls.

5.1 Music Playback

- **Play/Pause:** One tap on either the Left (L) or Right (R) earbud.
- **Next Track:** Long press the Right (R) earbud.
- **Previous Track:** Long press the Left (L) earbud.
- **Volume Up:** One tap on the Right (R) earbud.
- **Volume Down:** One tap on the Left (L) earbud.

5.2 Call Management

- **Answer/End Call:** One tap on either the Left (L) or Right (R) earbud.
- **Reject Call:** Long press on either the Left (L) or Right (R) earbud.

5.3 Voice Assistant

- **Activate Voice Assistant:** Long press on either the Left (L) or Right (R) earbud.

6. MAINTENANCE

6.1 Cleaning

Regular cleaning helps maintain sound quality and hygiene.

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Avoid using abrasive materials, solvents, or harsh chemicals.

6.2 Storage

When not in use, store the earbuds in their charging case to protect them from dust and damage.

- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

6.3 Water Resistance (IPX7)

The BX17 earbuds are IPX7 waterproof, meaning they can withstand submersion in water up to 1 meter for 30 minutes. This makes them resistant to sweat and rain.

- Do not intentionally submerge the charging case, as it is not waterproof.
- Ensure earbuds are completely dry before placing them back into the charging case to prevent damage.
- Water resistance is not a permanent condition and may decrease over time with normal wear.



Image: HAORYUYAN BX17 Earbuds demonstrating IPX7 waterproof and sweat-resistant features.

7. TROUBLESHOOTING

If you encounter issues with your HAORYUYAN BX17 Wireless Earbuds, refer to the following common problems and solutions:

Problem	Solution
Earbuds not pairing with device.	<ul style="list-style-type: none">• Ensure earbuds are charged.• Turn off and on Bluetooth on your device.• Forget "BX17" from your device's Bluetooth list and re-pair.• Place earbuds back in the case, close, then open to reset pairing mode.

Problem	Solution
No sound from one or both earbuds.	<ul style="list-style-type: none"> • Check device volume and earbud volume. • Ensure earbuds are properly connected to your device. • Try resetting the earbuds by placing them in the case and then taking them out. • Clean ear tips and earbud mesh to ensure no blockage.
Charging case not charging.	<ul style="list-style-type: none"> • Ensure the Type-C cable is securely connected to both the case and power source. • Try a different Type-C cable or power adapter. • Check if the power source is functional.
Earbuds falling out during activity.	<ul style="list-style-type: none"> • Try different sized ear tips for a more secure fit. • Adjust the flexible ear hooks to contour more snugly around your ears.

8. SPECIFICATIONS

Feature	Detail
Model Name	BX17
Brand	HAOYUYAN
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Range	Up to 10 meters (33 feet)
Earpiece Shape	Hook (Over-Ear)
Control Type	Physical Buttons
Water Resistance Level	IPX7 (Water Resistant)
Playtime (Single Charge)	Up to 15 hours
Total Playtime (with Charging Case)	Up to 80 hours
Charging Port	Type-C
Driver Size	14.3mm Dynamic Drivers
Noise Control	Environmental Noise Cancellation (ENC) for calls, Passive Noise Isolation
Material	Plastic
Item Weight	4.6 ounces (total)

9. WARRANTY AND SUPPORT

HAOYUYAN products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official HAOYUYAN

website.

Please retain your proof of purchase for any warranty claims.



© 2025 HAOYUYAN. All rights reserved.