

[Manuals.plus](#) /

> [OLEVS](#) /

> [OLEVS 3645 Men's Luxury Chronograph Wood Watch User Manual](#)

OLEVS 3645

OLEVS 3645 Men's Luxury Chronograph Wood Watch User Manual

Model: 3645

1. PRODUCT OVERVIEW

The OLEVS 3645 is a sophisticated men's chronograph watch featuring a unique blend of natural wood and stainless steel. It is equipped with a precise quartz movement, multiple sub-dials for chronograph functions, and a calendar display. This manual provides essential information for the proper setup, operation, and maintenance of your watch.



Image 1.1: Front view of the OLEVS 3645 watch, highlighting the golden dial and chronograph features.

2. SETUP AND INITIAL ADJUSTMENT

2.1 Unboxing and Inspection

Upon receiving your OLEVS 3645 watch, carefully remove it from its packaging. Inspect the watch for any visible damage. The package should include the watch, a gift box, watch adjusters, and warranty information.

2.2 Setting the Time

1. Pull the crown (the knob on the right side of the watch) out to the second click position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position.

2.3 Setting the Date

1. Pull the crown out to the first click position.

2. Turn the crown clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.
3. After setting the date, push the crown back into its original position.

2.4 Band Adjustment

The watch comes with a tool for adjusting the stainless steel and wood band. To adjust the band length:

- Identify the pins on the side of the links that need to be removed.
- Use the provided adjuster tool to push the pins out in the direction of the arrow (usually found on the inside of the link).
- Remove the desired number of links.
- Reconnect the band by inserting the pins back into the links, ensuring they are securely fastened.



Image 2.1: Rear view of the OLEVS 3645 watch, showing the case back and band construction.

3. OPERATING THE WATCH

3.1 Basic Timekeeping

The main hands display the current hour and minute. The small sub-dial at the 6 o'clock position indicates the 24-hour time, which can also serve as a day/night indicator.

3.2 Chronograph Function

The OLEVS 3645 features a chronograph (stopwatch) function. The two push-buttons on the side of the watch, above and below the crown, control this feature.

- **Start/Stop:** Press the upper push-button to start the chronograph. Press it again to stop the measurement.
- **Reset:** While the chronograph is stopped, press the lower push-button to reset all chronograph hands (seconds, minutes) back to their zero positions.

The sub-dial at the 9 o'clock position measures chronograph minutes, and the sub-dial at the 3 o'clock position measures chronograph seconds.

3.3 Water Resistance (30 Meters / 3 ATM)

This watch is water-resistant up to 30 meters (3 ATM). This means it is suitable for daily use, such as splashes, rain, or brief immersion in water. **It is not suitable for swimming, diving, or showering with hot water.** Ensure the crown is fully pushed in before any contact with water.



4. MAINTENANCE AND CARE

4.1 Cleaning

- Wipe the watch case and band regularly with a soft, dry cloth to remove dust and dirt.
- For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and wood components.

4.2 Battery Replacement

The OLEVS 3645 uses a quartz movement powered by a battery. When the watch stops or the second hand starts skipping, it indicates a low battery. Battery replacement should be performed by a qualified watchmaker to ensure proper sealing and water resistance.

4.3 Wood Component Care

The natural wood elements of your watch require specific care:

- Avoid prolonged exposure to direct sunlight or extreme temperatures, which can cause the wood to dry out or crack.
- Minimize contact with harsh chemicals, perfumes, and lotions.
- While the watch is water-resistant, excessive moisture can affect the wood. Dry the watch immediately if it gets wet.

5. TROUBLESHOOTING

5.1 Watch Not Running

- **Check the crown:** Ensure the crown is fully pushed in. If it's pulled out, the watch will not run.
- **Battery:** The battery may be depleted. Refer to Section 4.2 for battery replacement.
- **Impact:** If the watch has suffered a severe impact, internal components may be damaged. Seek professional repair.

5.2 Incorrect Time or Date

- **Resetting:** Follow the instructions in Sections 2.2 and 2.3 to reset the time and date.

- **Crown position:** Ensure the crown is fully pushed in after setting.
- **Battery:** A weak battery can sometimes affect timekeeping accuracy.

5.3 Chronograph Not Functioning or Resetting Properly

- **Reset sequence:** Ensure you are pressing the buttons in the correct sequence (Start, Stop, Reset).
- **Impact:** If the watch has been dropped, the chronograph mechanism might be misaligned. Professional service is recommended.

6. SPECIFICATIONS

Product Parameters

PRODUCT PARAMETERS

Model number
OLEVS/3645

Mirror material
High hardness coated mirror

Strap material
Textured, solid wood

Movement
Original quartz movement

Dial diameter
44mm

Dial thickness
12mm

Strap width
22mm

Strap length
21cm

Waterproofing
30m

Weights
130g

Note: Due to manual measurement, there may be slight differences between the actual size of the product and the data we provide

Colour Selection

COLOUR SELECTION





Maple wood
Maple wood



Zebra wood
Zebra wood



Red sandal wood
Red sandal wood

Image 6.1: Product Parameters Infographic for OLEVS 3645.

Feature	Detail
Model Number	OL-S-G3645-GG-GG
Movement Type	Original Quartz Movement
Display Type	Analog
Case Material	Stainless Steel and Wood
Band Material	Stainless Steel and Wood (Bracelet type)
Dial Window Material	Hardlex
Dial Diameter	44 Millimeters
Case Thickness	12 Millimeters
Band Width	22 Millimeters
Band Length	21 Centimeters
Water Resistance Depth	30 Meters (3 ATM)
Clasp Type	Push Button Hidden Clasp
Special Features	Chronograph, Calendar, 24-hour sub-dial
Item Weight	186 Grams

7. WARRANTY AND SUPPORT

OLEVS is committed to providing excellent customer service. Your watch comes with a comprehensive service and a 72-hour return policy. For any inquiries, issues, or support needs, please contact our customer service center. We aim to provide a prompt response within 24 hours.

Please refer to the warranty information included in your gift box for specific terms and conditions.