

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RELAX4LIFE](#) /

› **RELAX4LIFE Swivel Outdoor Recliner Chair (Model RXE-74097) Instruction Manual**

RELAX4LIFE RXE-74097

RELAX4LIFE Swivel Outdoor Recliner Chair (Model RXE-74097) Instruction Manual

Model: RXE-74097 | Brand: RELAX4LIFE

INTRODUCTION

Thank you for choosing the RELAX4LIFE Swivel Outdoor Recliner Chair. This chair is designed for comfort and versatility in outdoor living spaces, featuring hand-woven, fade-resistant PE rattan, solid acacia wood armrests, and a 360° swivel base. The adjustable backrest and rising footstool provide support and comfort at a 150° angle. This manual provides essential information for the safe assembly, operation, and maintenance of your recliner chair.



Image: The RELAX4LIFE Swivel Outdoor Recliner Chair, showcasing its design and red cushions in an outdoor environment.

SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep all packaging materials away from children to prevent choking hazards.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 400 lbs (181 kg).
- Use the chair on a flat, stable surface to prevent tipping.
- Avoid exposing cushions to prolonged rain to extend their lifespan.
- Regularly oil the acacia wood surfaces for optimal maintenance and durability.
- A protective cover is recommended for outdoor storage, especially during inclement weather, but is not included.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- 1 x Swivel Outdoor Recliner Chair
- 1 x Full-Length Cushion
- 1 x Headrest
- 1 x Instruction Manual (this document)

SETUP AND ASSEMBLY

Follow these steps to assemble your recliner chair. It is recommended to have two people for assembly.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify all hardware and components using the parts list provided in the separate assembly instruction sheet.
3. Attach the base to the main chair frame. Ensure proper alignment of all holes.
4. Securely fasten all screws and bolts. **Important: Do not fully tighten screws until all holes are aligned and all components are loosely fitted.** This prevents misalignment.
5. Once all parts are in place and screws are started, gradually tighten all fasteners until secure.
6. Place the full-length cushion onto the chair, ensuring it is properly seated.
7. Attach the headrest to the top of the backrest using its integrated straps or fasteners.
8. Test the chair's stability and functionality before first use.

Product Dimensions



Image: Product dimensions and weight capacity diagram, useful for planning placement and ensuring safe use.

OPERATING INSTRUCTIONS

Adjustable Backrest and Footrest

The recliner features a 150° adjustable backrest. To recline, gently push back on the backrest. As the backrest reclines, the footrest will automatically rise to provide leg support. To return to an upright position, lean forward and the backrest will move up, causing the footrest to retract.

150° Adjustable Design

Enjoy customized comfort



Image: Illustration of the 150° adjustable design, demonstrating various reclining angles for customized comfort.

360° Swivel Base

The chair is equipped with a 360° swivel base, allowing you to rotate effortlessly in any direction. Simply apply gentle pressure with your feet or body to turn the chair. This feature is ideal for engaging in conversations or adjusting your view without moving the entire chair.

360° Smooth Swiveling

Perfect for conversation or gathering



Image: The 360° smooth swiveling feature of the chair, perfect for social interaction or changing views.

Flip-Up Side Table

A convenient flip-up side table is integrated into the chair's design. To use, gently lift the table surface. It is supported by a high-quality gas strut for smooth and reliable operation. This table is suitable for holding beverages, books, or small personal items. To store, gently push the table down until it locks into its closed position.

Swiveling Wicker Recliner



Image: Detailed view of the chair's features, including the curved acacia wood armrests, the functional flip-up side table, and the gas strut for smooth operation.

MAINTENANCE

Cushion Care

- The cushion covers are zippered and removable for easy cleaning. Hand wash with mild soap and cold water, or machine wash on a gentle cycle. Air dry only.
- Avoid prolonged exposure of cushions to rain or harsh weather conditions. Store cushions indoors when not in use or during inclement weather to prevent mildew and fading.

Well-Woven Mix Brown PE Wicker

A stylish yet built-to-last addition for outdoor places



Image: Details of the cushion construction, highlighting the soft fillings, hook and loop fasteners, and smooth zippers for maintenance.

Rattan and Frame Care

- Clean the PE rattan and metal frame with a soft cloth and mild soap solution. Rinse thoroughly with clean water and dry completely.
- The PE wicker is fade-resistant and sun-protective, but a protective cover is recommended for extended periods of non-use or harsh weather to maintain its appearance and longevity.



Bring Optimal Comfort

Equipped with a full-length cushion and a headrest

Soft & Elastic Fillings

Hook & Loop Fasteners

Smooth Zippers

Image: The well-woven mix brown PE wicker, emphasizing its sunproof and anti-fading properties for long-lasting durability.

Acacia Wood Armrests Care

- Regularly oil the acacia wood surfaces (e.g., armrests) to protect the wood and maintain its appearance. Use a suitable outdoor wood oil as directed by the product manufacturer.
- Clean wood surfaces with a damp cloth and mild soap, then dry immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair feels unstable or wobbly.	Loose assembly bolts or uneven surface.	Ensure all assembly bolts are securely tightened. Move the chair to a flat, even surface.

Problem	Possible Cause	Solution
Reclining mechanism is stiff or not smooth.	Mechanism may need lubrication or there's an obstruction.	Check for any obstructions. Apply a silicone-based lubricant to moving parts if necessary (avoid oil on wood).
Side table does not flip up or down smoothly.	Gas strut issue or obstruction.	Ensure no items are blocking the table's movement. If the gas strut is faulty, contact customer support.
Cushions are fading or showing mildew.	Prolonged exposure to sun or moisture.	Store cushions indoors or use a protective cover when not in use. Clean mildew with a diluted bleach solution (test on an inconspicuous area first).

SPECIFICATIONS

Feature	Detail
Model Name	Swivel Outdoor Recliner Chair
Model Number	RXE-74097
Brand	RELAX4LIFE
Overall Dimensions (L x W x H)	31"-54" x 32.5" x 41.5"-31"
Seat Height (without cushion)	14.5"
Seat Dimension (W x D)	20" x 20.5"
Footrest Dimension (L x W)	20" x 11"
Cushion Thickness	3"
Headrest Dimension (L x W x Thickness)	14.5" x 7" x 2"
Side Table Dimension (L x W x H)	10" x 8.5" x 18"
Weight Capacity	400 lbs
Net Weight	41.5 lbs
Materials	PE Rattan, Metal, Acacia Wood, Polyester, Sponge
Color (Rattan)	Mix Brown
Color (Cushion)	Red (as per current product variant)

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the retailer's return policy or contact the seller directly. The manufacturer, RELAX4LIFE, stands behind the quality of its products.

Additional protection plans may be available for purchase through your retailer. Please consult your purchase documentation for details on any extended warranty or protection plan coverage.

For assistance with missing parts, assembly questions, or product defects, please contact the seller, CASART, through your purchase platform.

© 2025 RELAX4LIFE. All rights reserved. | Model: RXE-74097