

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SNJORT](#) /

› [SNJORT S7MAX Cordless Leaf Blower Instruction Manual](#)

SNJORT S7MAX

SNJORT S7MAX Cordless Leaf Blower Instruction Manual

Model: S7MAX | Brand: SNJORT

1. PRODUCT OVERVIEW

The SNJORT S7MAX Cordless Leaf Blower is designed for efficient clearing of leaves, dust, and debris. Its lightweight, handheld design and powerful airflow make it suitable for various cleaning tasks around your patio, garden, and other outdoor areas. This manual provides essential information for safe and effective operation.

Key Features:

- **Powerful Cordless Airflow:** Max speed of 800,000 RPM and wind speeds up to 90 m/s.
- **Dual Battery System:** Equipped with two 20,000mAh large-capacity batteries for extended operation (up to 50 minutes total).
- **Lightweight & Portable:** Weighs just 1.35 pounds, allowing for easy one-handed operation and reduced fatigue.
- **Fast Charging & Safety:** Rapid charging with a smart safety system to prevent overheating.
- **Extended Nozzle:** Provides enhanced control and reach for various cleaning needs.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x SNJORT S7MAX Cordless Leaf Blower Unit
- 2 x 20,000mAh Lithium-Ion Batteries
- 1 x Battery Charger
- 1 x Extended Nozzle

- 1 x User Manual (this document)



Image: Contents of the SNJORT S7MAX Cordless Leaf Blower package, including the blower unit, two batteries, charger, and extended nozzle.

3. SETUP INSTRUCTIONS

3.1 Charging the Batteries

1. Connect the charger to a standard power outlet.
2. Insert the battery into the charger. The indicator light on the charger will show the charging status.
3. Allow the battery to charge fully before first use. The smart safety system prevents overheating during charging.

20000MAH x2

Dual batteries-Double the power performance



Overcurrent
Protection



Over-pressure
Protection



Overheating
Protection



Fast
Charging



Image: A SNJORT battery being charged with the included charger. The battery features an indicator light to show charge level.

3.2 Attaching the Nozzle

1. Ensure the leaf blower is turned off and the battery is removed before attaching or detaching the nozzle.
2. Align the extended nozzle with the air outlet of the blower unit.
3. Push the nozzle firmly onto the blower and twist clockwise until it locks securely into place.



Image: Diagram showing how to attach the extended nozzle to the SNJORT S7MAX Cordless Leaf Blower.

3.3 Installing the Battery

1. With the blower turned off, slide a charged battery into the battery slot on the bottom of the handle until it clicks into place.
2. To remove the battery, press the release button and slide the battery out.



Image: Illustration demonstrating the correct method for installing the battery into the SNJORT S7MAX Cordless Leaf Blower.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To turn on the blower, press and hold the power trigger. The motor will start.
- Release the power trigger to turn off the blower.

4.2 Adjusting Airflow Speed

The blower features a variable speed trigger, allowing you to control the airflow intensity based on your task. Press the trigger lightly for lower speed and press it fully for maximum power.

4.3 General Operation Tips

- For optimal performance, hold the blower at an angle that directs the airflow towards the debris.
- Use lower speeds for delicate areas or light dust, and higher speeds for heavier debris like wet leaves or snow.
- Always wear appropriate personal protective equipment (PPE), such as eye protection and hearing protection, during operation.



Image: The SNJORT S7MAX Cordless Leaf Blower being used for various tasks including blowing leaves, snow, and cleaning a car.

5. MAINTENANCE

5.1 Cleaning

- Always disconnect the battery before cleaning.
- Wipe the exterior of the blower with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the air intake and outlet are free from debris to maintain optimal airflow.

5.2 Storage

- Store the blower and batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove the battery from the blower when not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blower does not start	Battery not installed correctly or discharged.	Ensure battery is fully inserted and charged. Check battery indicator lights.

Problem	Possible Cause	Solution
Reduced airflow	Air intake/outlet blocked or nozzle not securely attached.	Clear any obstructions from air vents. Reattach nozzle securely.
Battery overheats during charging	Normal operation of safety system.	Allow battery to cool down before resuming charging. Ensure charger is in a well-ventilated area.

7. SPECIFICATIONS

- **Brand:** SNJORT
- **Model Name:** S7MAX
- **Power Source:** Battery Powered (21 Volts)
- **Max RPM:** 800,000 RPM
- **Max Wind Speed:** Up to 90 m/s (approx. 200 MPH)
- **Battery Capacity:** 2 x 20,000mAh (Lithium-Ion)
- **Item Weight:** 1.35 pounds (without battery), 4.71 pounds (with battery)
- **Product Dimensions:** 13"L x 3.3"W x 11.6"H
- **Special Feature:** Battery Charge Indicator

8. WARRANTY AND CUSTOMER SUPPORT

SNJORT is committed to providing high-quality products. For any issues or questions regarding your SNJORT S7MAX Cordless Leaf Blower, please contact our customer support team. Our team is available 24/7 to assist you.

For support, please visit: www.snjort.com

Please retain your proof of purchase for warranty claims.