

Reyke Wallet Tracker Card

Reyke Wallet Tracker Card for Android - Instruction Manual

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. PRODUCT OVERVIEW

The Reyke Wallet Tracker Card is an ultra-thin, rechargeable Bluetooth tracking device designed for Android smartphones and tablets. It integrates with the Google Find Hub network, allowing you to locate your valuable items such as wallets, passports, and laptops. This device is IP68 waterproof and dust-resistant, ensuring durability in various environments. Please note that this device is **not compatible with iOS devices**.

Work with Google Find My Device



Image: Reyke Wallet Tracker Card working with Google Find My Device on an Android phone.

2. SETUP AND PAIRING

Follow these steps to set up your Reyke Wallet Tracker Card and pair it with your Android device:

1. **Charge the Device:** Before initial use, ensure the tracker card is fully charged. Refer to the 'Charging' section for instructions.
2. **Activate Pairing Mode:** Press the power button on the tracker card once. The device will enter pairing mode.
3. **Open Google Find Hub App:** On your Android smartphone or tablet, open the "Google Find Hub" application.
4. **Connect:** The app should automatically detect the Reyke Smart Card. A connection page will pop up; click "Connect".
5. **Complete Setup:** Once connected, click "Open app" to finalize the setup. Your device is now ready to use.



Image: Step-by-step guide for connecting the Reyke Smart Card to the Google Find Hub app.

3. OPERATING INSTRUCTIONS

3.1 Locating Nearby Items

When your Reyke Wallet Tracker Card is within Bluetooth range (up to 50 meters), you can use the Google Find Hub app to make it emit a sound. This helps you pinpoint its exact location if it's misplaced nearby.

- Open the Google Find Hub app on your Android device.
- Select your Reyke Wallet Tracker Card from the list of devices.
- Tap the "Play sound" option. The tracker will emit an audible alert.



Image: Using the 'Play sound' feature in the Google Find Hub app to locate the tracker card.

3.2 Activating Lost Mode

If your Reyke Wallet Tracker Card is lost and out of Bluetooth range, you can activate Lost Mode through the Google Find Hub network. This feature leverages other Android devices in the network to help locate your item.

- In the Google Find Hub app, select your Reyke Wallet Tracker Card.
- Choose the "Mark as lost" option.
- Enter your contact information. If someone finds your card, they can view your contact details in the app to return it.
- Once activated, the card cannot be reset or reused by others, enhancing the security of your belongings.

Activate Anti-Lost Mode

With the help of millions of Google devices, you can easily find your item.

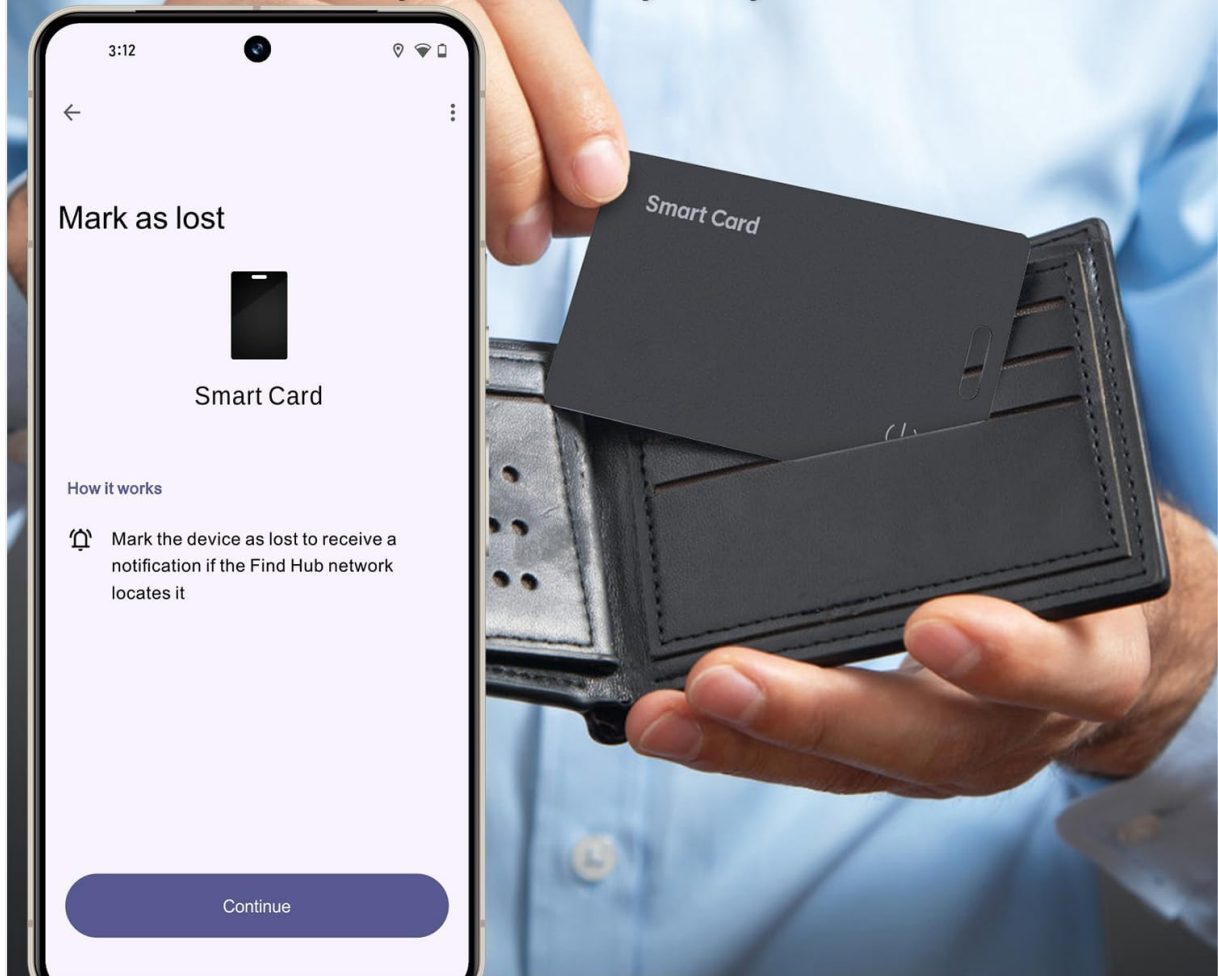


Image: Activating Lost Mode for the Reyke Smart Card in the Google Find Hub app.

3.3 Sharing Device Location

You can share the location of your Reyke Wallet Tracker Card with trusted family or friends through the Google Find Hub app.

- Select your Reyke Wallet Tracker Card in the app.
- Choose the "Share device" option.
- Follow the prompts to send a sharing link via a messaging app. The sharing link will work for one person at a time.

Share the Card location with family/friends



Image: Sharing the Reyke Smart Card's location with another user via the Find Hub app.

3.4 Multiple Uses

The Reyke Wallet Tracker Card is versatile and can be used to track various items:

- Wallets
- ID cards
- Luggage tags
- Passports
- Laptops
- Backpacks
- Camera bags

Global Tracking



Image: Examples of how the Reyke Smart Card can be used to track various personal items.

4. MAINTENANCE

4.1 Charging

The Reyke Wallet Tracker Card features wireless charging for convenience. A single full charge can last up to 5 months.

- Place the tracker card on a compatible wireless charging pad.
- Ensure the side with the power icon is facing downward for proper charging.
- A solid red light indicates that the device is charging.
- The light will turn blue when the device is fully charged.

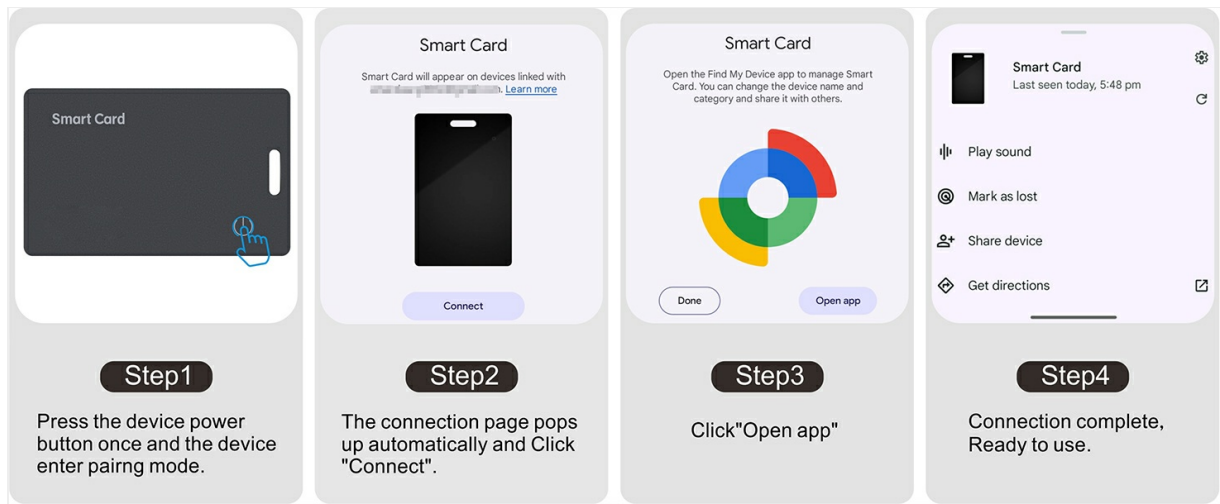


Image: Correct and incorrect methods for wirelessly charging the Reyke Smart Card.

4.2 Water and Dust Resistance

The Reyke Wallet Tracker Card has an IP68 rating, meaning it is resistant to dust and can withstand submersion in up to 1 meter of water for 30 minutes. This protects it from splashes, rain, and brief immersion. However, it is not designed for prolonged underwater use.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tracker not pairing with Android device.	Device not in pairing mode; Bluetooth off; app issue; low battery.	Ensure tracker is charged and power button pressed once. Verify Bluetooth is enabled on your Android device. Restart the Google Find Hub app or your phone.
Tracker not emitting sound.	Out of Bluetooth range; low battery; app not connected.	Ensure the tracker is within 50 meters of your Android device. Check battery level and recharge if necessary. Verify the app shows the tracker as connected.
Charging light not appearing.	Incorrect placement on charger; faulty charger; tracker issue.	Adjust the tracker's position on the wireless charging pad, ensuring the power icon side faces down. Try a different wireless charger. Contact customer support if the issue persists.
Location updates are inaccurate or delayed.	Limited network coverage; device out of range; app permissions.	Ensure your Android device has a stable internet connection. Verify location services are enabled for the Google Find Hub app. The accuracy depends on the density of the Google Find Hub network.

6. SPECIFICATIONS



Image: Reyke Wallet Tracker Card.

- **Model:** Wallet Tracker Card
- **Brand:** Reyke
- **Connectivity:** Bluetooth
- **Compatibility:** Android smartphones and tablets (Not compatible with iOS devices)
- **Battery:** 1 Lithium Ion battery (included)
- **Battery Life:** Up to 5 months (approx. 365 days) on a single charge
- **Charging:** Wireless charging
- **Range:** Up to 50 meters (Bluetooth)
- **Water Resistance:** IP68 (submersible up to 1 meter for 30 minutes)
- **Material:** Plastic
- **Dimensions:** Approximately 1.6 mm thin (equivalent to 2 credit cards)
- **GTIN (UPC):** 644134732613
- **Manufacturer:** Reyke
- **Country of Origin:** China

7. WARRANTY AND CUSTOMER SUPPORT

7.1 Warranty Information

The Reyke Wallet Tracker Card comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Reyke customer service:

- **Email:** itemfinder.service@outlook.com
- Customer service is available 24/7 to assist you.