

[Manuals.plus](#) /

› [Monster](#) /

› Monster Prism Portable Bluetooth Speaker User Manual

Monster S32

Monster Prism Portable Bluetooth Speaker

MODEL: S32 (B0FCM4ZGTL)

[Overview](#) [Setup](#) [Introduction](#) [Safety Information](#) [Package Contents](#) [Product](#)
[Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Introduction

Thank you for purchasing the Monster Prism Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.



20W Stereo Sound



Image: The Monster Prism Portable Bluetooth Speaker, showcasing its sleek design and dual speaker drivers.

2. Safety Information

- Do not expose the speaker to extreme temperatures, direct sunlight, or open flames.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for assistance.
- Keep the speaker away from medical devices, as it contains magnets that may interfere with their operation.
- Ensure the charging port is dry before connecting the USB-C cable to prevent damage.
- Dispose of batteries according to local regulations. Do not incinerate.

3. Package Contents

Verify that all items are present in your package:

- Monster Prism Portable Bluetooth Speaker

- USB-C Charging Cable
- Lanyard Strap
- User Manual

4. Product Overview

Familiarize yourself with the speaker's components and controls.

4.1 Speaker Dimensions



Image: The Monster Prism speaker with its dimensions labeled: 21.34 cm (length), 9.4 cm (width), and 9.14 cm (height).

4.2 Control Buttons

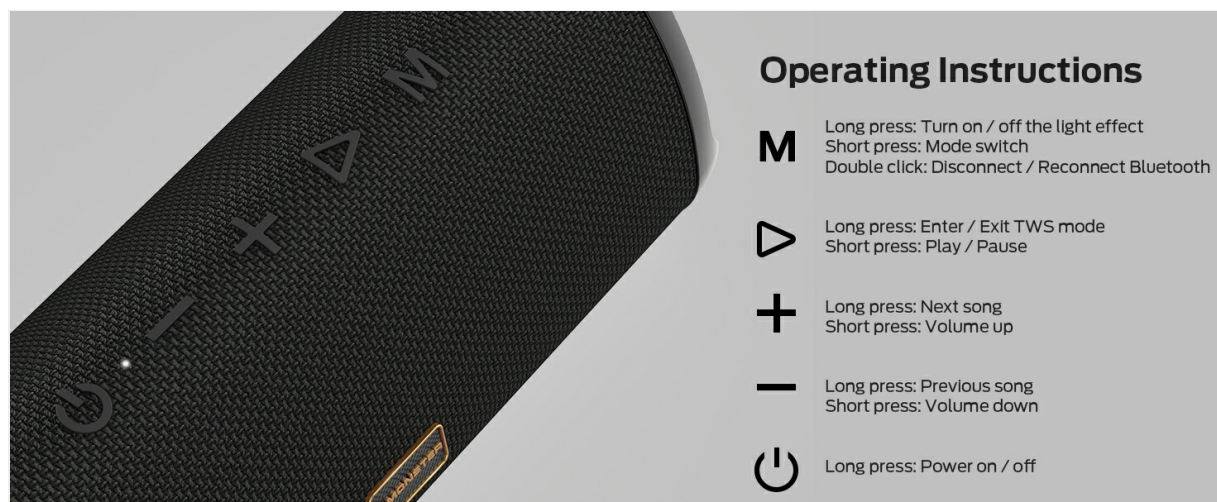


Image: A diagram illustrating the control buttons on the Monster Prism speaker and their corresponding functions.

- **'M' Button:** Long press to turn on/off light effect; Short press for mode switch (Bluetooth/AUX/TF Card); Double click to disconnect/reconnect Bluetooth.
- **Play/Pause Button:** Long press to enter/exit TWS mode; Short press for play/pause.
- **'+' Button:** Long press for next song; Short press for volume up.
- **'-' Button:** Long press for previous song; Short press for volume down.
- **Power Button:** Long press to power on/off the speaker.

4.3 Ports and Inputs



Image: A close-up diagram showing the USB-C charging port, Micro SD card input, and AUX input on the speaker.

- **USB-C Charging Port:** For charging the speaker.
- **Micro SD Card Input:** For playing audio files directly from a TF card (MP3/WAV format).
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable.

5. Setup

5.1 Charging the Speaker

1. Connect the provided USB-C charging cable to the speaker's USB-C port.
2. Connect the other end of the cable to a compatible USB power adapter (not included).
3. The charging indicator light will illuminate. A full charge takes approximately 2.5 hours.
4. Once fully charged, the indicator light will change or turn off, depending on the model. Disconnect the charging cable.

The speaker offers up to 24 hours of playback at 50% volume on a full charge.

5.2 Powering On/Off

- **To Power On:** Long press the Power button until you hear an audible prompt and the indicator lights turn on.
- **To Power Off:** Long press the Power button again until you hear an audible prompt and the indicator lights turn off.

6. Operating Instructions

6.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, short press the 'M' button to switch modes.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available devices and select "Monster Prism" from the list.
4. Once paired, the speaker will emit an audible confirmation, and the blue LED will remain solid.
5. To disconnect, double-click the 'M' button. To reconnect, double-click the 'M' button again or select "Monster Prism" from your device's Bluetooth list.

6.2 True Wireless Stereo (TWS) Pairing

TWS allows you to pair two Monster Prism speakers for an immersive stereo sound experience.

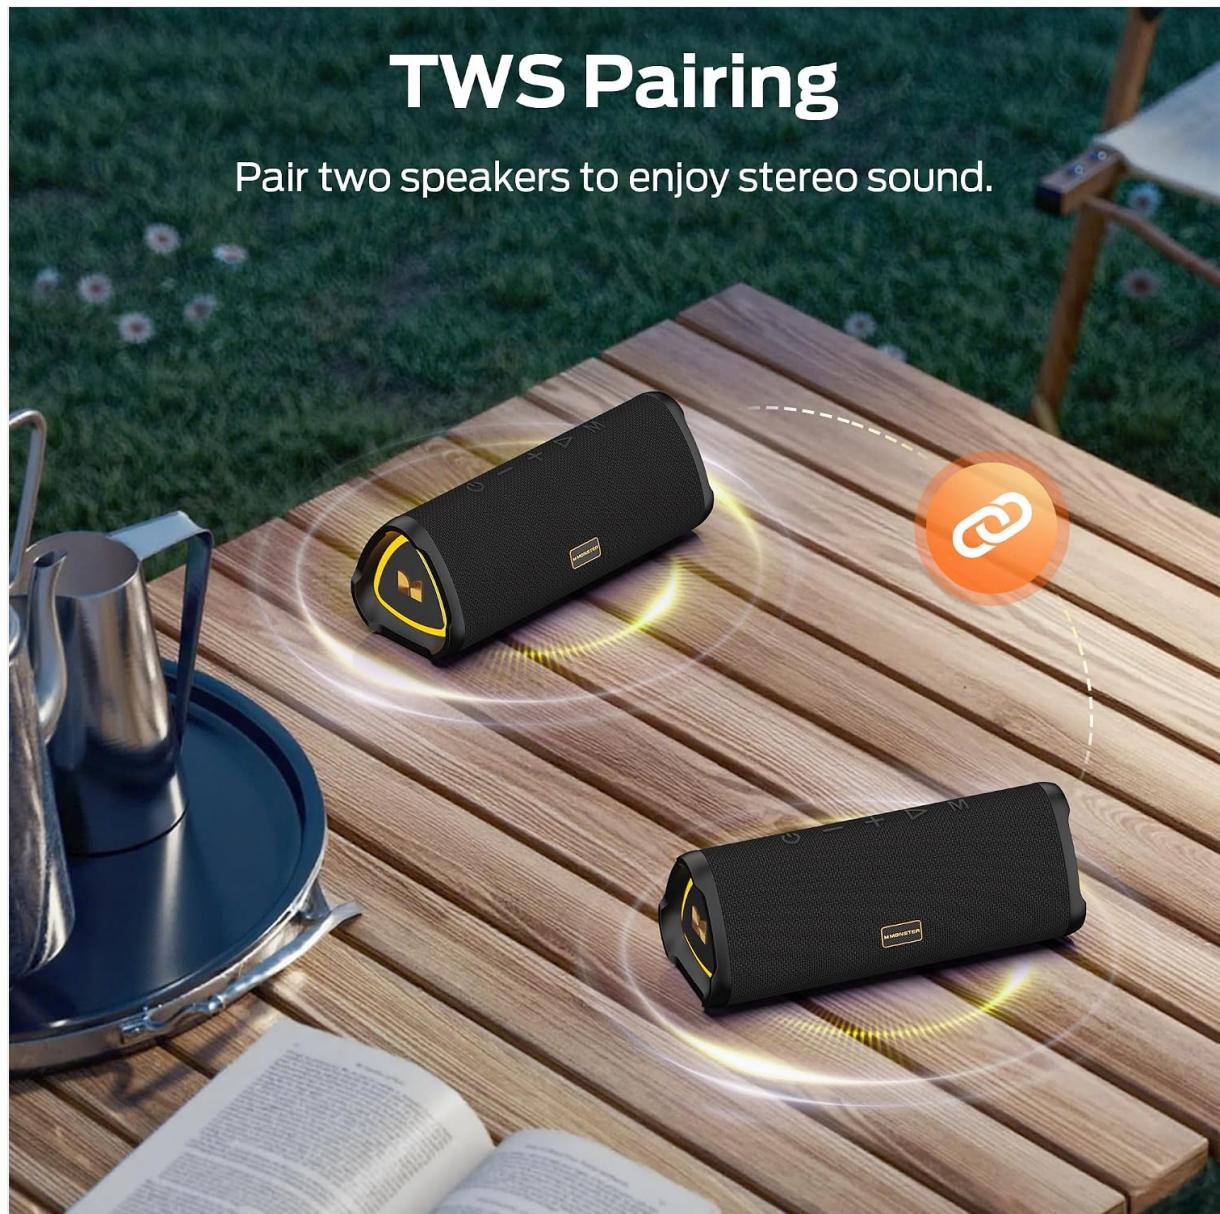


Image: Two Monster Prism speakers positioned to demonstrate True Wireless Stereo pairing.

1. Ensure both Monster Prism speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), long press the Play/Pause button. The speaker will enter TWS pairing mode.
3. The primary speaker will automatically search for and connect to the second speaker.
4. Once successfully paired, both speakers will emit an audible confirmation. The primary speaker's LED will flash blue, and the secondary speaker's LED will be solid blue.
5. Now, connect your Bluetooth device to the primary speaker as described in section 6.1. Audio will play through both speakers in stereo.
6. To exit TWS mode, long press the Play/Pause button on either speaker.

6.3 Adjusting Volume and Playback

- **Play/Pause:** Short press the Play/Pause button.
- **Volume Up:** Short press the '+' button.
- **Volume Down:** Short press the '-' button.

- **Next Track:** Long press the '+' button.
- **Previous Track:** Long press the '-' button.

6.4 Ambient Light Effects

The Monster Prism speaker features ambient LED lights that pulse to the rhythm of your music.



Image: The Monster Prism speaker displaying its dynamic RGB light effects on the end panels.

- **Turn On/Off Lights:** Long press the 'M' button to activate or deactivate the light effects.

6.5 AUX Input Mode

1. Connect one end of a 3.5mm audio cable (not included) to the speaker's AUX input port.
2. Connect the other end to the audio output jack of your external device.
3. Short press the 'M' button until the speaker enters AUX mode (indicated by an audible prompt).
4. Audio will now play through the speaker from your connected device.

6.6 TF Card Input Mode

1. Insert a Micro SD (TF) card containing MP3 or WAV audio files into the speaker's TF card slot.
2. Short press the 'M' button until the speaker enters TF card mode (indicated by an audible prompt).

3. The speaker will automatically begin playing audio files from the card.

6.7 Hands-Free Calling

When connected via Bluetooth to your smartphone, the speaker can be used for hands-free calls.

- **Answer Call:** Short press the Play/Pause button.
- **End Call:** Short press the Play/Pause button during a call.
- **Reject Call:** Long press the Play/Pause button.

7. Maintenance

7.1 Cleaning

- Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- The speaker is IPX6 waterproof, meaning it can withstand splashes and rain. However, do not submerge it in water.



Image: The Monster Prism speaker on a rocky surface with water splashes, demonstrating its IPX6 water resistance.

7.2 Storage

- Store the speaker in a cool, dry place when not in use.
- Avoid storing it in areas with high humidity or extreme temperatures.

7.3 Portability

The speaker includes a detachable lanyard strap for easy carrying.

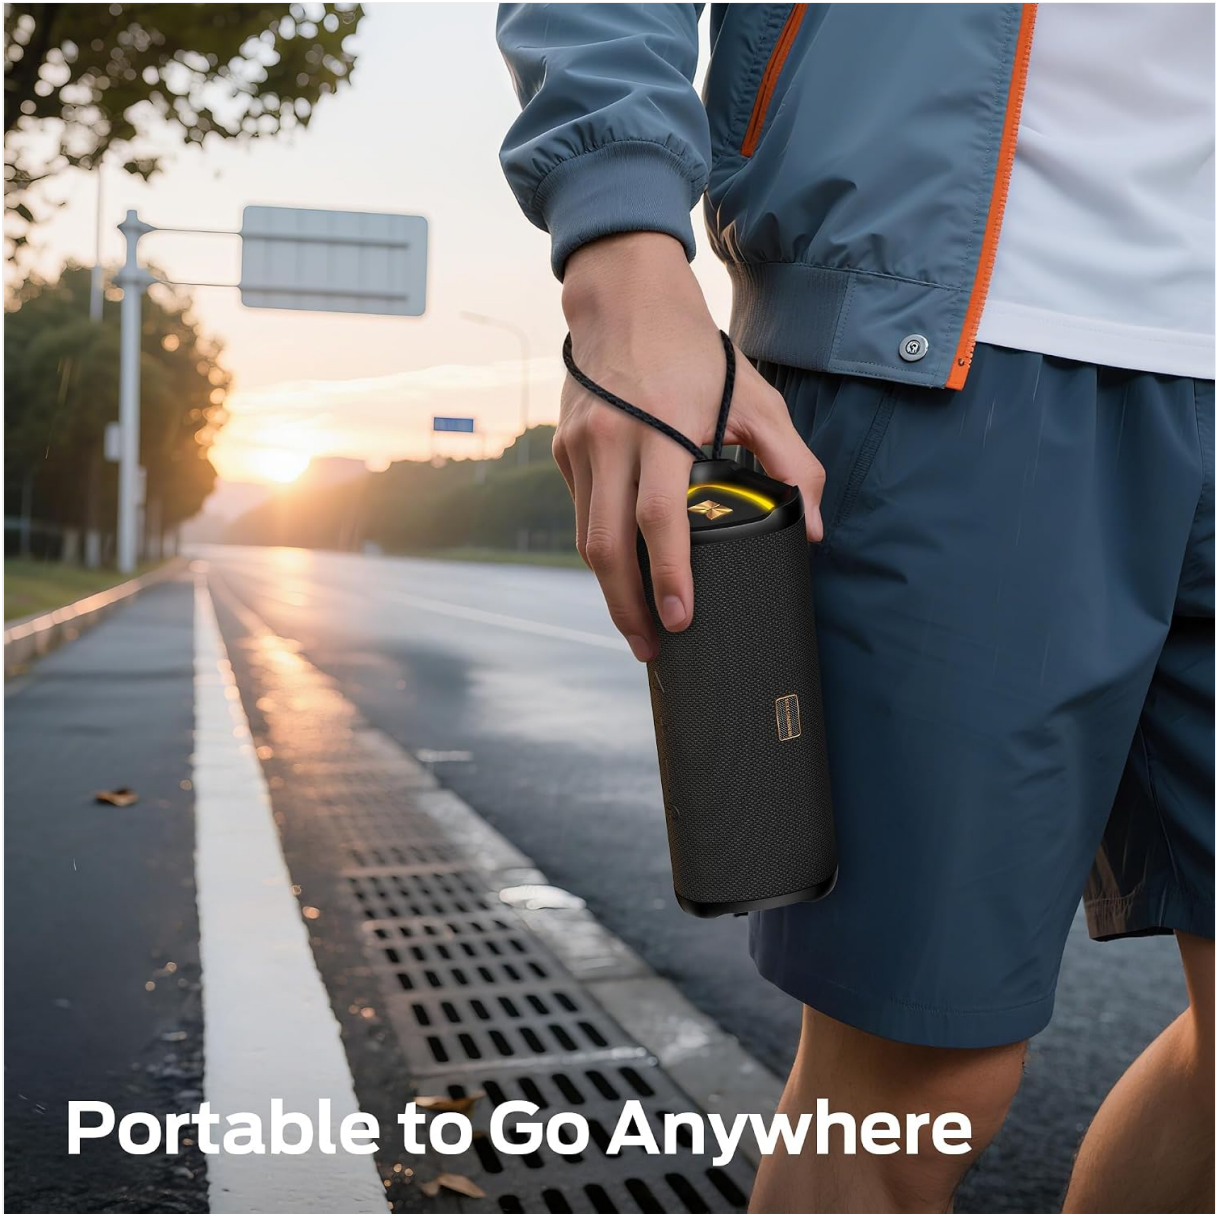


Image: A person holding the Monster Prism speaker by its attached lanyard, highlighting its portable design.

8. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the USB-C cable.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth.	Speaker not in pairing mode; Device Bluetooth off; Speaker already connected to another device.	Ensure speaker is in Bluetooth pairing mode (flashing blue LED). Turn on Bluetooth on your device. Disconnect from other devices or double-click 'M' button to reset Bluetooth.
No sound.	Volume too low; Incorrect input mode; Device not playing audio.	Increase speaker and device volume. Short press 'M' to cycle through input modes (Bluetooth, AUX, TF Card). Ensure audio is playing on your connected device.
TWS pairing fails.	Speakers already connected to other devices; Too far apart.	Ensure both speakers are disconnected from all Bluetooth devices. Place speakers close to each other during TWS pairing.
Light effects not working.	Lights are turned off.	Long press the 'M' button to toggle the light effects on.

9. Specifications

Feature	Detail
Model Name	S32
Model Number	B0FCM4ZGTL
Brand	Monster
Speaker Output Power	20W (Stereo)
Connectivity Technology	Bluetooth 6.0, AUX, TF Card
Audio Output Mode	Stereo
Water Resistance Level	IPX6
Battery Life	Up to 24 hours (at 50% volume)
Battery Charge Time	2.5 hours
Power Source	Battery Powered (1 A battery included)
Product Dimensions	21.34 x 9.4 x 9.14 cm
Weight	680 g
Material	Plastic, Lightweight Materials
Additional Features	LED Light, TWS Pairing, Built-in Mic

10. Warranty & Support

10.1 Limited Warranty

This Monster Prism Portable Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. The warranty covers manufacturing defects under normal use.

10.2 Customer Support

For technical support, warranty claims, or further assistance, please contact Monster customer service through their official website or the retailer where the product was purchased. Keep your proof of purchase for warranty validation.