

Whirlpool WHITEMAGIC ELITE 7.0 GREY

Whirlpool Whitemagic Elite 7kg Fully Automatic Top-Load Washing Machine

User Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new Whirlpool Whitemagic Elite 7kg Fully Automatic Top-Load Washing Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

Your Whirlpool Whitemagic Elite washing machine is designed to provide superior cleaning performance with its advanced features, including 6th Sense Smart Sensors and Power Scrub Technology, while being energy efficient.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the

skills to carry out.

- Always disconnect the appliance from the power supply before attempting any service.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Ensure all components are present and undamaged. Keep packaging for future transport if needed.

Location Requirements

Place the washing machine on a firm, level floor. Ensure there is adequate space around the machine for ventilation and access. Avoid direct sunlight or extreme temperatures.

Dimensions: 55 cm (Depth) x 54 cm (Width) x 97.6 cm (Height).

Water Supply Connection

Connect the inlet hoses to the hot and cold water taps. Ensure connections are tight to prevent leaks. Use new hoses provided with the machine.

Drainage

Position the drain hose correctly into a standpipe or laundry tub, ensuring it is securely fastened to prevent dislodging during operation.

Power Connection

Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.



Image: Front view of the Whirlpool Whitemagic Elite 7kg washing machine, showcasing its sleek grey design and top-load access.



Image: Angled view of the washing machine from the front-right, highlighting its compact footprint and modern aesthetic.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features intuitive buttons and indicators for selecting wash programs, adjusting settings, and monitoring the wash cycle.



Image: Top view of the washing machine with the lid open, providing a clear view of the control panel and the stainless steel wash tub.

Loading Laundry

Load clothes loosely into the tub, ensuring not to overload. The 7kg capacity is suitable for small to medium-sized loads. Distribute items evenly to maintain balance during the wash cycle.

Adding Detergent and Additives

Add appropriate amounts of detergent, fabric softener, and other additives to their respective dispensers. Refer to detergent packaging for recommended quantities.

Selecting a Wash Program

Turn the program selector knob or press the program buttons to choose the desired wash cycle. The 6th Sense Smart Sensors will automatically adjust settings for optimal performance based on the selected program and load.

Common Programs:

- **Daily:** For everyday clothes.
- **Heavy:** For heavily soiled items.

- **Delicate:** For fragile garments.
- **Quick Wash:** For lightly soiled clothes needing a fast cycle.
- **Rinse + Spin:** For rinsing and spinning only.

Starting the Wash Cycle

Press the 'Start/Pause' button to begin the selected wash cycle. The machine will automatically fill with water and commence washing.

Power Scrub Technology

This feature ensures effective stain removal by providing a powerful scrubbing action during the wash cycle, suitable for tough dirt.

MAINTENANCE AND CARE

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

Cleaning the Dispenser Drawers

Regularly remove and clean the detergent and fabric softener dispenser drawers to prevent residue buildup.

Cleaning the Tub

Run a 'Tub Clean' cycle (if available) or a hot wash with a washing machine cleaner periodically to remove detergent residue and odors.

Lint Filter Cleaning

Locate and clean the lint filter after every few washes to ensure efficient operation and prevent lint transfer to clothes.

Winterizing (Storage)

If storing the machine in an area subject to freezing temperatures, drain all water from the hoses and pump to prevent damage.

TROUBLESHOOTING GUIDE

Before calling for service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Circuit breaker tripped.	Check power connection; Ensure lid is fully closed; Reset circuit breaker.
No water fill	Water taps off; Inlet hoses kinked; Water pressure too low.	Open water taps; Straighten hoses; Check household water pressure.

Problem	Possible Cause	Solution
Excessive vibration/noise	Machine not level; Load unbalanced; Shipping bolts not removed.	Level the machine; Redistribute laundry; Ensure shipping bolts are removed (if applicable).
Water leaking	Hose connections loose; Drain hose improperly installed; Excessive suds.	Tighten hose connections; Secure drain hose; Reduce detergent amount.
Clothes not clean	Overloading; Incorrect detergent amount; Wrong wash program.	Reduce load size; Use recommended detergent; Select appropriate program.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Whirlpool
Model Name	Whitemagic Elite
Model Number	WHITEMAGIC ELITE 7.0 GREY
Type	Fully Automatic Top-Load
Capacity	7 kg
Energy Rating	5 Star
Color	Grey
Product Dimensions (LxWxH)	55 x 54 x 97.6 cm
Item Weight	30 kg
Key Features	6th Sense Smart Sensors, Power Scrub Technology, Gentle Wash Action

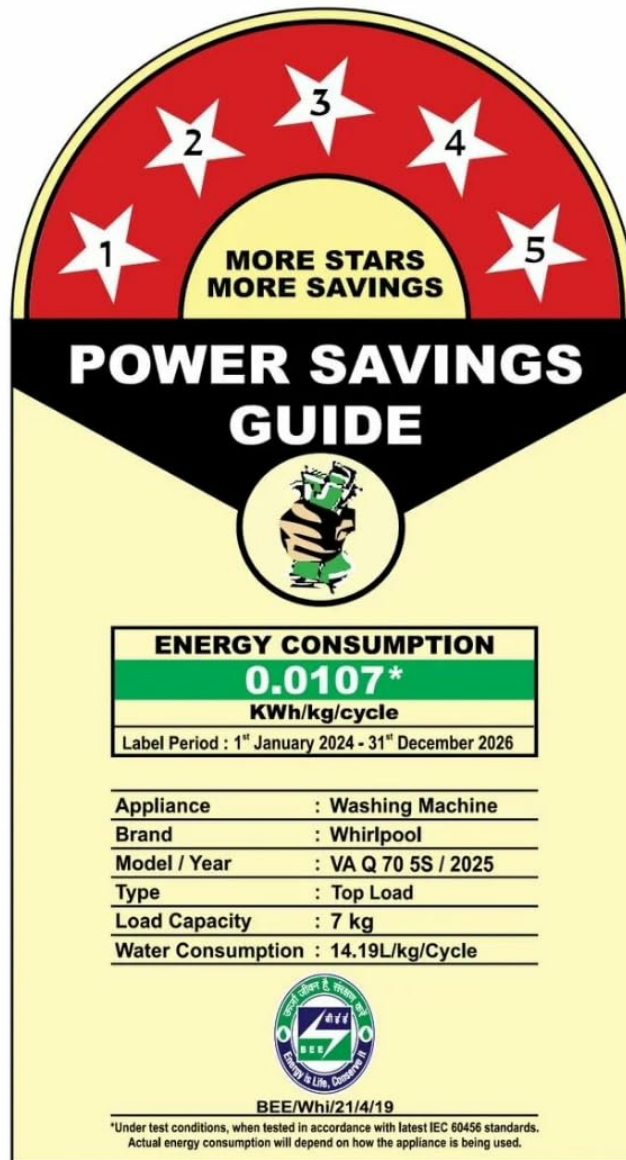


Image: The official Power Savings Guide label, indicating the 5-star energy rating and energy consumption details for the Whirlpool Whitemagic Elite 7kg washing machine.

WARRANTY AND SUPPORT

Warranty Information

Your Whirlpool Whitemagic Elite washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage period and what is covered.

Extended warranty and protection plans may be available for purchase. For details, please contact your retailer or visit the official Whirlpool website.

Customer Support

For technical assistance, service requests, or spare parts, please contact Whirlpool Customer Service. Have your model number (WHITEMAGIC ELITE 7.0 GREY) and purchase date ready when contacting support. You can find contact information on the Whirlpool official website or in the documentation provided with your

appliance.