

Fleislecker 2305DT

Fleislecker 24Qt Large Air Fryer Toaster Oven Combo

MODEL: 2305DT

1. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.

- Do not place any materials other than manufacturer's recommended accessories in the oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- To turn off this appliance, press the power button.

2. Product Overview

The Fleis-lecker 24Qt Large Air Fryer Toaster Oven Combo is a versatile kitchen appliance designed for various cooking methods. It features a dual-zone independent control system, allowing for simultaneous cooking of different dishes at varying temperatures and times.

Key Features:

- **24Qt Large Capacity:** Accommodates large meals, such as 6 slices of toast or a 12-inch pizza.
- **Dual Zone Cooking Technology:** Independently control two cooking zones or synchronize them for perfectly timed meals.
- **15 Preset Cooking Modes:** Includes Air Fry, Bake, Roast, Dehydrate, Rotisserie, Broil, Chicken, Pizza, Cookies, Vegetables, Warm, Ferment, Reheat, and more.
- **Dual Fans:** Ensures faster and more uniform cooking results.
- **Easy-to-Use Digital Controls:** Intuitive touch interface with a clear display for temperature and time settings.
- **Stainless Steel Construction:** Durable and stain-resistant design.
- **Automatic Shut-Off:** Enhances safety by automatically turning off after cooking is complete.

Components and Accessories:

The appliance comes with a comprehensive set of accessories to support various cooking functions.



Image: The Fleishecker 24Qt Air Fryer Toaster Oven Combo shown with its various accessories, including trays, baskets, and rotisserie tools.

- **Big Oil Tray:** For collecting drips and baking.
- **Big Rack:** For general baking and roasting.
- **Big Mesh Basket:** Ideal for air frying and dehydrating larger quantities.
- **Grilled Meat Fork:** For rotisserie cooking.
- **Partition:** To divide the cooking chamber for dual-zone operation.
- **Small Mesh Basket (x2):** For air frying smaller portions in each zone.
- **Small Oil Tray (x2):** For collecting drips or baking smaller items in each zone.
- **Small Rack (x2):** For general baking and roasting in individual zones.
- **Fork:** For handling hot accessories.
- **Take Baking Tray Tong:** For safely removing hot trays and racks.

Exclusive Personalized Paper Recipes

Even the elderly without smart devices can use it without any barriers



Image: A visual representation of the 14 accessories, including various trays, baskets, and rotisserie tools, provided with the appliance.

3. Setup

1. **Unpacking:** Carefully remove all packaging materials, stickers, and labels from the appliance and its accessories.
2. **Initial Cleaning:** Wipe the exterior of the oven with a damp cloth. Wash all removable accessories (trays, baskets, racks, etc.) with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer toaster oven on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 6 inches) on all sides and above the appliance for proper ventilation. Do not place it near flammable materials.
4. **First Use (Burn-Off):** Before cooking food, operate the oven empty for approximately 15 minutes at 400°F (200°C) to burn off any manufacturing residues. Some smoke or odor may be present; this is normal. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

4. Operating Instructions

The Fleislecker Air Fryer Toaster Oven features a touch control panel for easy operation. The oven can function as a single large cooking zone or be divided into two independent zones using the provided partition.

Dual Zone Heating with Independent Control



One zone cooking control
zone 1 or zone 2



Dual zone cooking control
Sync finish or Dual cook



Faster Cooking



More uniform Cooking



Image: The control panel and interior of the oven illustrating the dual zone heating capability.

Control Panel Overview:

- **Power Button:** Turns the appliance on/off.
- **Zone 1 / Zone 2 Selectors:** Activates and allows control over individual cooking zones.
- **Temperature Controls (+/-):** Adjusts cooking temperature.
- **Time Controls (+/-):** Adjusts cooking time.
- **Preset Function Icons:** Selects from 15 pre-programmed cooking modes.
- **SYNC FINISH:** Synchronizes the finish time of two different cooking programs.
- **DUAL COOK:** Applies the same cooking settings to both zones.
- **Light Button:** Turns the interior oven light on/off.

Basic Operation:

1. **Power On:** Press the Power button. The display will illuminate.

2. **Select Cooking Mode:** Choose a preset icon (e.g., Air Fry, Bake, Roast) or manually set temperature and time.
3. **Adjust Settings:** Use the Temperature and Time controls to modify settings as needed.
4. **Start Cooking:** Press the Start/Pause button (often integrated with the power button or a separate play icon).

Cooking Functions:

The oven offers 15 versatile cooking functions. Select the appropriate function based on your recipe.

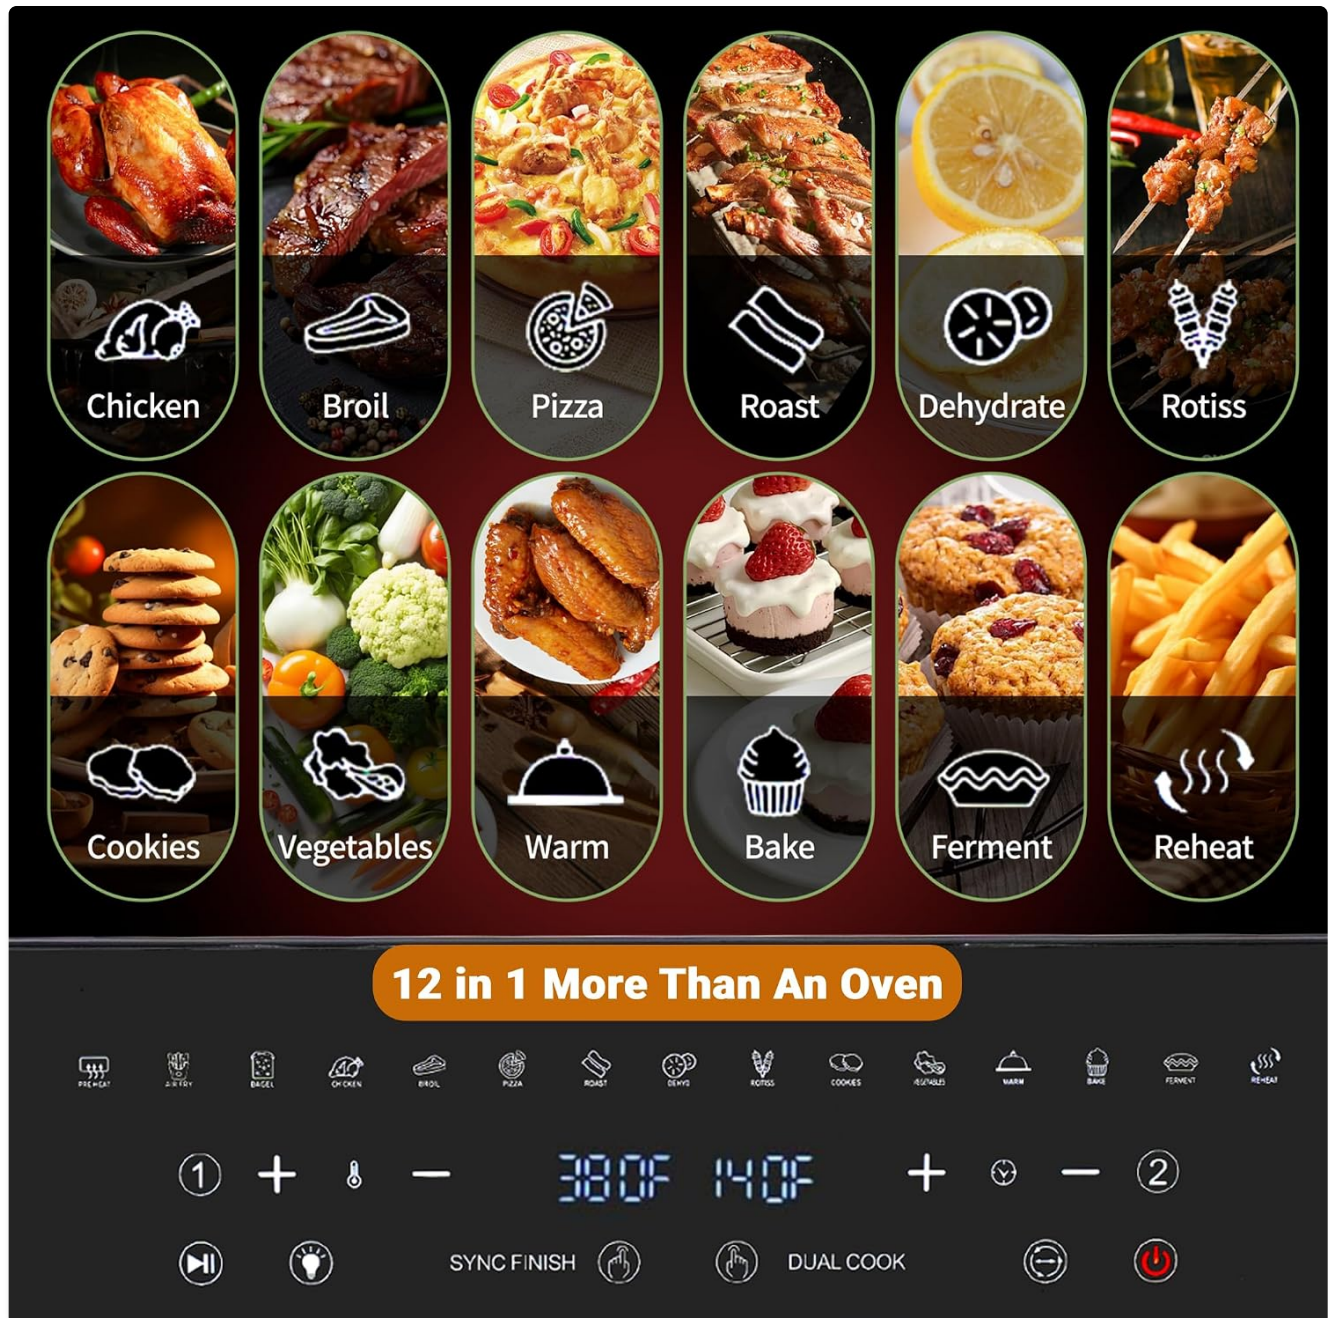


Image: The control panel displaying the icons for the 15 preset cooking functions.

- **Air Fry:** For crispy results with little to no oil.
- **Bake:** For cakes, cookies, and other baked goods.
- **Roast:** Ideal for meats and vegetables.
- **Dehydrate:** For drying fruits, vegetables, and jerky.
- **Rotisserie:** For roasting whole chickens or other large cuts of meat using the rotisserie fork.
- **Broil:** For quick cooking and browning.
- **Chicken:** Optimized setting for chicken dishes.

- **Pizza:** Preset for cooking pizzas.
- **Cookies:** Specific setting for baking cookies.
- **Vegetables:** General setting for cooking various vegetables.
- **Warm:** To keep food warm after cooking.
- **Ferment:** For proofing dough or making yogurt.
- **Reheat:** For warming up leftovers.

Dual Zone Cooking Features:

The dual-zone functionality allows for enhanced cooking flexibility.



Image: The oven operating in One Zone Mode, with only one cooking compartment active.

- **Independent Control (One Zone Mode):** Insert the partition to create two separate cooking zones. Select either Zone 1 or Zone 2 and set its specific temperature and time. This is ideal for cooking smaller quantities or different items that require distinct settings.
- **SYNC FINISH:** This feature allows two different cooking programs in separate zones to finish at the same time. Set the desired cooking parameters for each zone, then activate SYNC FINISH. The oven will automatically adjust the start times to ensure both dishes are ready simultaneously.
- **DUAL COOK:** This feature applies the same cooking settings (temperature and time) to both cooking zones. This is useful when cooking larger quantities of the same food or when you want both zones to operate identically without individual programming.



Image: The oven's display showing the 'Sync Finish' function, indicating two zones are set to complete cooking simultaneously.



Image: The oven's display showing the 'Dual Cook' function, indicating both zones are operating with identical settings.

5. Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

Easy To Clean

All accessories are dishwasher safe



Image: Various accessories from the Fleishecker Air Fryer Toaster Oven being cleaned in a kitchen sink.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool completely.
2. **Exterior Cleaning:** Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
3. **Interior Cleaning:** For the interior, wipe with a damp cloth. For stubborn food residue, use a non-abrasive sponge with warm, soapy water. Ensure the interior is completely dry before next use.
4. **Accessories:** All removable accessories (trays, baskets, racks, rotisserie fork, partition) are dishwasher safe for easy cleaning. Alternatively, wash them by hand with warm, soapy water.
5. **Crumb Tray:** Regularly remove and clean the crumb tray located at the bottom of the oven to prevent grease buildup and potential fire hazards.
6. **Storage:** Store the appliance in a cool, dry place when not in use.

6. Troubleshooting

Refer to this section for common issues and their solutions.

- **Appliance does not turn on:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the outlet is functional by plugging in another appliance.
- Verify that the power button has been pressed.

- **Food is not cooking evenly:**

- Ensure food is arranged in a single layer and not overcrowded in the basket or on the tray.
- Flip or shake food halfway through cooking for more even results, especially when air frying.
- Check that the correct temperature and time settings are selected for the food type.

- **White smoke is coming from the appliance:**

- This may be due to grease or food residue on the heating elements or in the crumb tray. Unplug the appliance, allow it to cool, and clean thoroughly.
- Ensure the oil tray is in place to catch drips during cooking.

- **Appliance emits unusual noise:**

- Check for any loose accessories or food items inside the oven that might be vibrating.
- Ensure the appliance is on a stable, level surface.

If the issue persists after attempting these troubleshooting steps, please contact customer support.

7. Specifications

Detailed technical specifications for the Fleis-lecker 24Qt Large Air Fryer Toaster Oven Combo.

Product Size



Image: A diagram illustrating the external dimensions of the Fleislecker Air Fryer Toaster Oven.

Feature	Specification
Model Name	2305DT
Brand	Fleislecker
Capacity	24 Quart (23 Liters)
Product Dimensions (D x W x H)	15.5"D x 15.8"W x 15.6"H
Item Weight	34.6 pounds
Material	Stainless Steel
Color	Black
Output Wattage	1700 Watts

Max Temperature Setting	500 Degrees Fahrenheit
Control Method	Touch
Special Features	Automatic Shut-Off, Dual Zone Features, Stain Resistant, Temperature Control
Air Frying Technology	Turbo Air Flow
Nonstick Coating	No
Dishwasher Safe (Main Unit)	No
UPC	799473604494

8. Warranty and Support

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Fleis-lecker website. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual, please contact Fleis-lecker customer service for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question