

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FERIETELF](#) /

› [FERIETELF T29 Foldable Mini Drone Instruction Manual](#)

## FERIETELF T29

# FERIETELF T29 Foldable Mini Drone Instruction Manual

Model: T29 | Brand: FERIETELF

## INTRODUCTION

---

This manual provides essential information for operating and maintaining your FERIETELF T29 Foldable Mini Drone. Please read it thoroughly before your first flight to ensure safe and optimal performance. Designed for beginners and enthusiasts, the T29 drone offers an intuitive flying experience with its 1080P HD camera and various intelligent flight modes.

## WHAT'S IN THE BOX


---

Your FERIETELF T29 Drone package includes the following items:

- FERIETELF T29 Drone
- Remote Control
- 2 Rechargeable Batteries
- USB Charging Cable
- Carrying Case
- Spare Propellers
- Propeller Guards
- Screwdriver
- User Manual



# Foldable & Lightweight

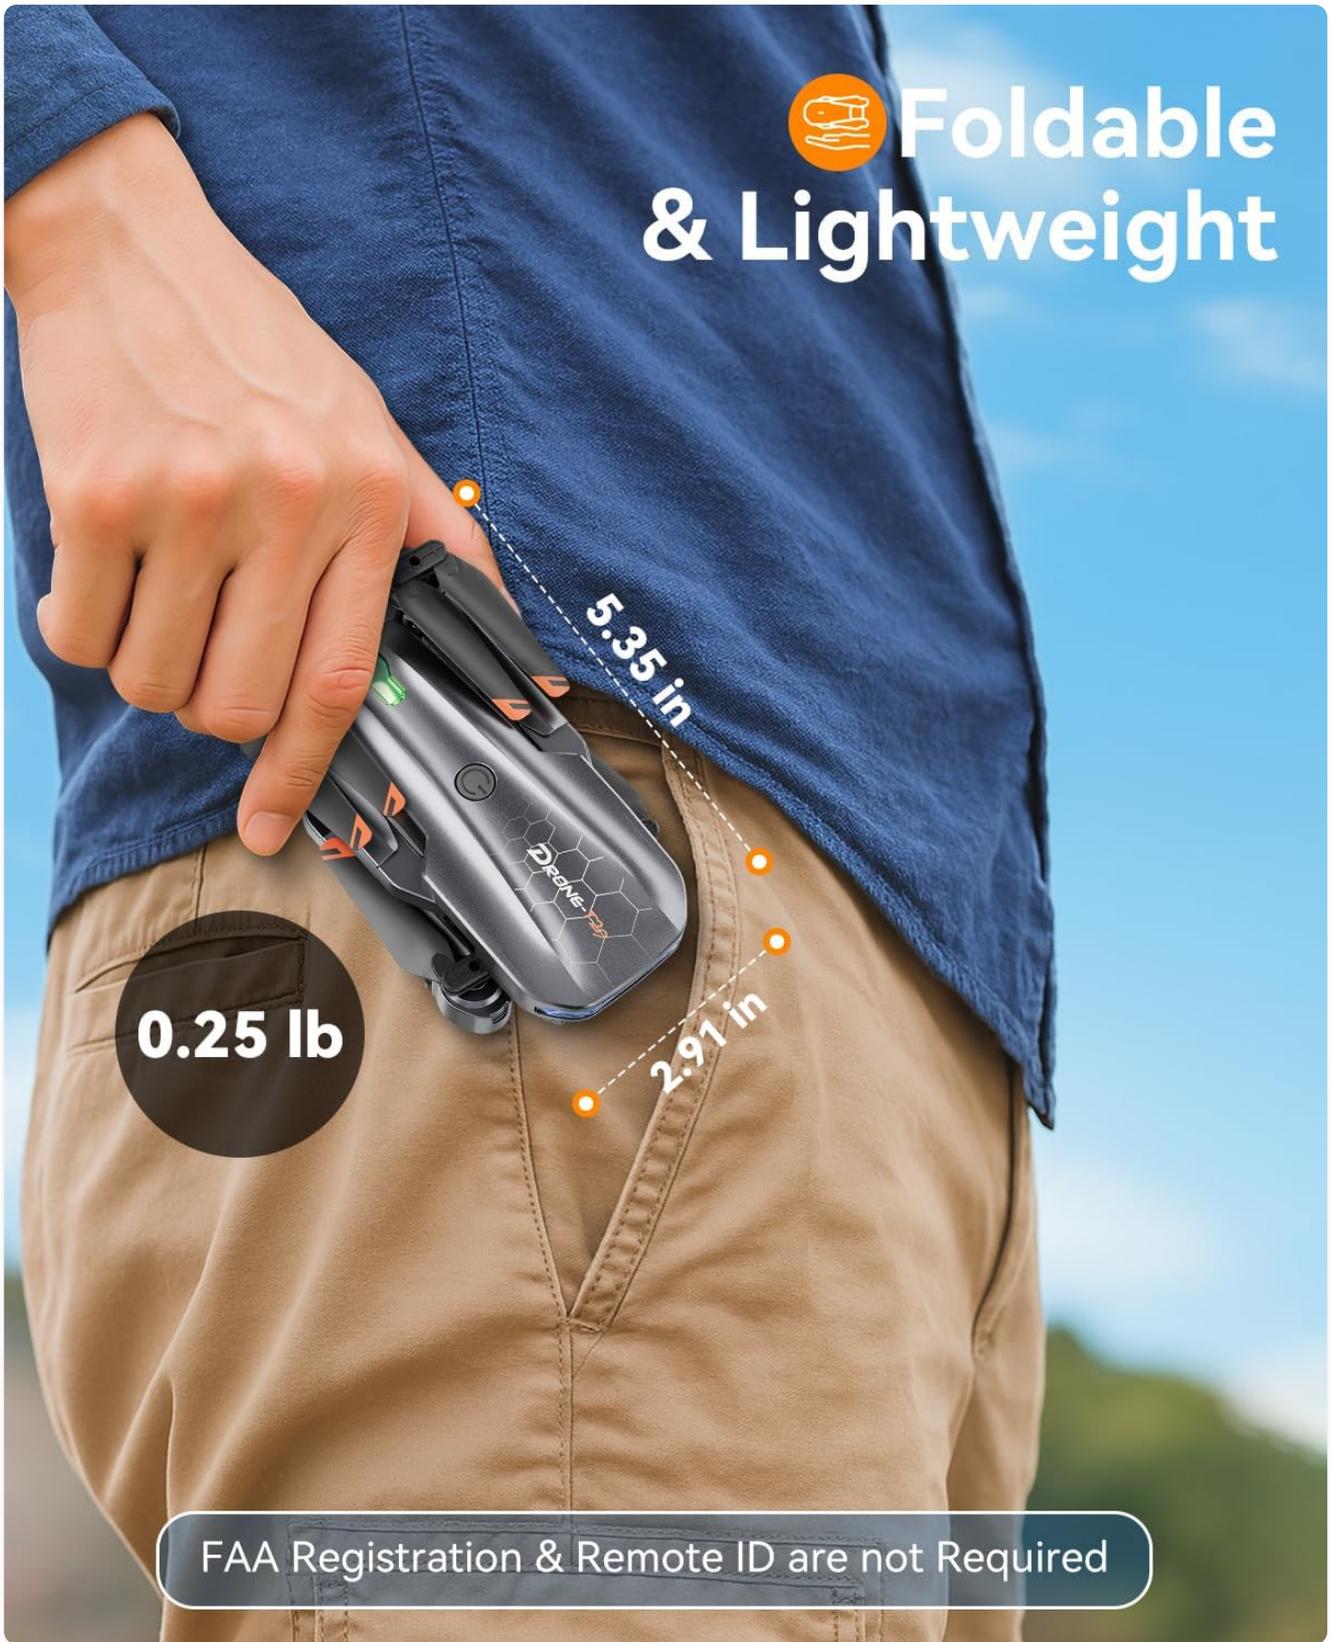

**0.25 lb**

5.35 in

2.97 in

FAA Registration & Remote ID are not Required

Image: All components of the FERIETELF T29 Drone package, including the drone, remote, batteries, charging cable, carrying case, spare propellers, and screwdriver.

## PRODUCT OVERVIEW

The FERIETELF T29 is a compact and versatile drone designed for ease of use and portability. Key features

include:

- **1080P HD Camera:** Capture clear photos and videos.
- **Foldable & Lightweight Design:** Easy to transport and store in the included carrying case.
- **3-Speed Adjustments:** Adapt to different flying conditions and skill levels.
- **APP Control & Voice Control:** Operate the drone using your smartphone for enhanced functionality.
- **Headless Mode:** Simplifies control by eliminating the need to adjust the drone's orientation.
- **One-Key Takeoff/Landing:** Effortless initiation and conclusion of flights.
- **Altitude Hold:** Maintains a stable altitude for steady hovering.
- **360° Flips:** Perform exciting aerial maneuvers.
- **Dual Battery System:** Two rechargeable batteries provide extended flight time (20-24 minutes total).
- **Propeller Guards:** Enhances flight safety, especially for beginners.



# 1080P HD Adjustable Camera



Image: The FERIE TELF T29 Drone flying, showcasing its 1080P HD adjustable camera capturing images of people.



# Easy Flight



3D Flip



Gravity Sensing



Line Following Flight



One-Touch Takeoff/Landing

Image: A collage illustrating various easy flight features of the FERIETELF T29 Drone, including 3D Flip, Gravity Sensing, Line Following Flight, and One-Touch Takeoff/Landing.



**2 Batteries  
= 20-24 Mins**



Low Battery Alarm



Over Voltage Protection

Image: Two rechargeable batteries for the FERIESELF T29 Drone, highlighting their 20-24 minute flight time, low battery alarm, and over-voltage protection features.

## SETUP

---

### 1. Charge Batteries:

Remove the drone battery and connect it to the USB charging cable. Plug the USB cable into a suitable charging equipment. The red indicator light will illuminate during charging and turn off when charging is complete.

Your browser does not support the video tag.

Video: Demonstrates how to charge the drone battery using the provided USB cable. The video shows removing the battery, connecting the cable, and observing the charging indicator light.

## 2. Prepare Remote Control:

Install 2 AA batteries (not included) into the remote control. Attach the control levers to their corresponding positions. Extend the mobile phone handle to securely clamp your smartphone for app control.

## 3. Install Propeller Guards:

For added safety, attach the propeller guards to each motor arm of the drone. Ensure they are securely fastened.

## 4. Insert Drone Battery:

Once charged, insert the battery into the drone's battery compartment. Ensure it clicks into place securely.

## 5. Unfold Drone Arms:

Gently unfold the drone's arms until they lock into position. The drone is now ready for flight.

# OPERATING INSTRUCTIONS

---

## First Flight Preparation

- Place the drone on a flat, level surface.
- Turn on the drone's power switch.
- Turn on the remote control's power switch. The drone's lights will stop flashing, indicating successful pairing.
- Perform horizontal calibration by moving both control sticks to the bottom-right or bottom-left simultaneously (refer to manual for exact combination).

## Basic Flight Controls

- **One-Click Takeoff:** Press the one-key takeoff button on the remote control. The drone will automatically lift off and hover.
- **Forward/Backward:** Use the right joystick to move the drone forward or backward.
- **Turning Left/Right:** Use the left joystick to rotate the drone left or right.
- **Left/Right Side Flight:** Use the right joystick to move the drone sideways left or right.
- **3-Speed Adjustment:** Press the speed switch button to cycle through low, medium, and high speeds. Low and medium speeds are ideal for practice, while high speed is for outdoor use in windy conditions.
- **Headless Mode:** Activate headless mode for simplified control, where the drone's orientation is relative to the pilot.
- **360° Flips:** Push the 360° flip button and then push the right joystick in the desired direction to perform a flip.
- **One-Click Landing:** Press the one-key landing button. The drone will slowly descend and land.
- **Emergency Stop:** Press and hold the one-click landing button for an emergency stop.

Your browser does not support the video tag.

Video: Official FERIETELF T29 Drone demonstration of basic flight operations, including takeoff, directional control, 360-degree flips, speed adjustments, headless mode, and landing.

## APP Control

Download the "HF UFO" app by scanning the QR code in the operating guide. Connect your smartphone to the drone's Wi-Fi network (DAZLEN-X-31-f11d21 or similar). Open the app and click "Start Flying" to view the live camera feed and access advanced controls like gravity mode, voice control, and line drawing flight.

- **Gesture Shooting:** Use hand gestures to trigger photo and video capture via the app.
- **Stable Altitude Hold:** The optical positioning camera allows the drone to hover accurately.
- **Gravity Control:** Control the drone's movement by tilting your smartphone.
- **Voice Control:** Use voice commands for certain flight functions.
- **Real-time Image Streaming:** View live footage from the drone's camera directly on your smartphone.

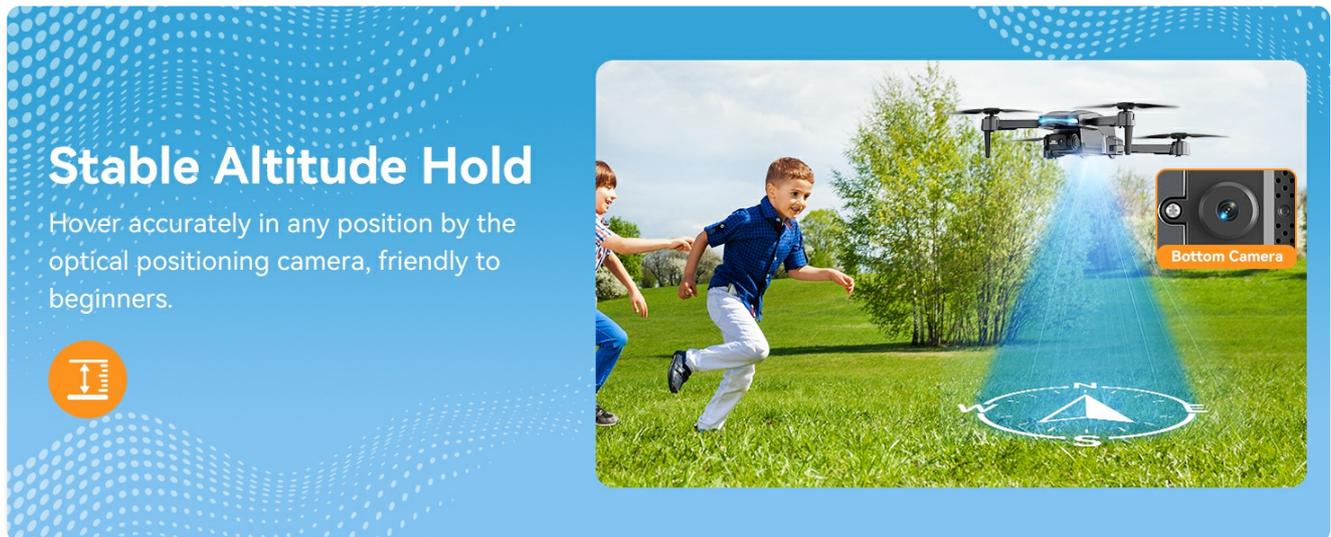


Image: The FERIETELF T29 Drone remote control with a smartphone attached, showing the various APP control features like Line Drawing Flight, Gravity Control, Voice Control, Headless Mode, and Low Battery Alarm.

## MAINTENANCE

---

### Replacing Propellers

If a propeller is damaged, it can be replaced using the provided screwdriver and spare propellers. Ensure you install the new propeller in the correct A/B direction as indicated on the drone and propeller itself.

Your browser does not support the video tag.

Video: Demonstrates how to replace a propeller on the drone. It shows unscrewing the old propeller, attaching the new one, and ensuring correct A/B orientation.

### Adjusting Camera Angle

The drone's camera angle can be manually adjusted to achieve desired shooting perspectives.

## TROUBLESHOOTING

---

- **Drone flies diagonally or is lost:** The drone must be recalibrated before takeoff and after it has tipped on its side. Always take off on a level surface. Failure to do so may result in loss of control.
- **Low Battery:** The remote emits a "DIDI" alert when power is low. Replace or recharge batteries promptly to avoid losing the drone during flight.

## SPECIFICATIONS

Feature	Detail
Brand	FERIETELF
Model Name	T29
Special Features	360 Degree Flip, Foldable, Integrated Camera, Long Battery Life, Speed Adjustment
Age Range	Kid, Youth
Color	Grey
Video Capture Resolution	1080p
Connectivity Technology	Wi-Fi
Skill Level	Beginner
Item Weight	10 Grams (0.353 ounces)
Battery Capacity	1200 Amp Hours (Lithium Ion)
Product Dimensions	11"L x 9.84"W x 2.28"H

## SAFETY GUIDELINES

- Always operate the drone in a spacious, calm, and windless area, especially for your first flight.
- Keep the drone away from people, animals, and obstacles during flight.
- Ensure all propellers are securely attached and undamaged before each flight.
- Do not fly near airports or restricted airspace.
- Supervise children during drone operation.
- Avoid flying in strong winds, which can lead to loss of control.

## WARRANTY & SUPPORT

---

For the best experience, we recommend testing the drone in a spacious, calm, and windless area for your first flight. Contact our support team anytime for assistance with any issues or questions regarding your FERIETELF T29 Drone.

Please refer to the product packaging or official website for specific warranty details and contact information.