

[manuals.plus](#) /› [Midea](#) /› [Midea X10 Wet & Dry Cordless Vacuum Cleaner Model 38212339 User Manual](#)**Midea 38212339**

# Midea X10 Wet & Dry Cordless Vacuum Cleaner User Manual

Model: 38212339

## 1. INTRODUCTION

Thank you for choosing the Midea X10 Wet & Dry Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

## 2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- This appliance is for household use only. Do not use it for commercial or industrial purposes.
- Do not immerse the appliance, battery, or charging base in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only the charging adapter supplied by the manufacturer.
- Do not use the appliance to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Ensure the appliance is switched off before connecting or disconnecting the battery pack, or before performing any maintenance.
- Store the appliance indoors in a dry place.


## 3. PACKAGE CONTENTS

Carefully unpack your Midea X10 and check that all items are present and in good condition. If any items are missing or damaged, contact your retailer.

- Midea X10 Main Unit
- Handle Assembly

- Charging Base
- Power Adapter
- Cleaning Brush
- Roller Brush (pre-installed)
- Clean Water Tank
- Dirty Water Tank
- User Manual



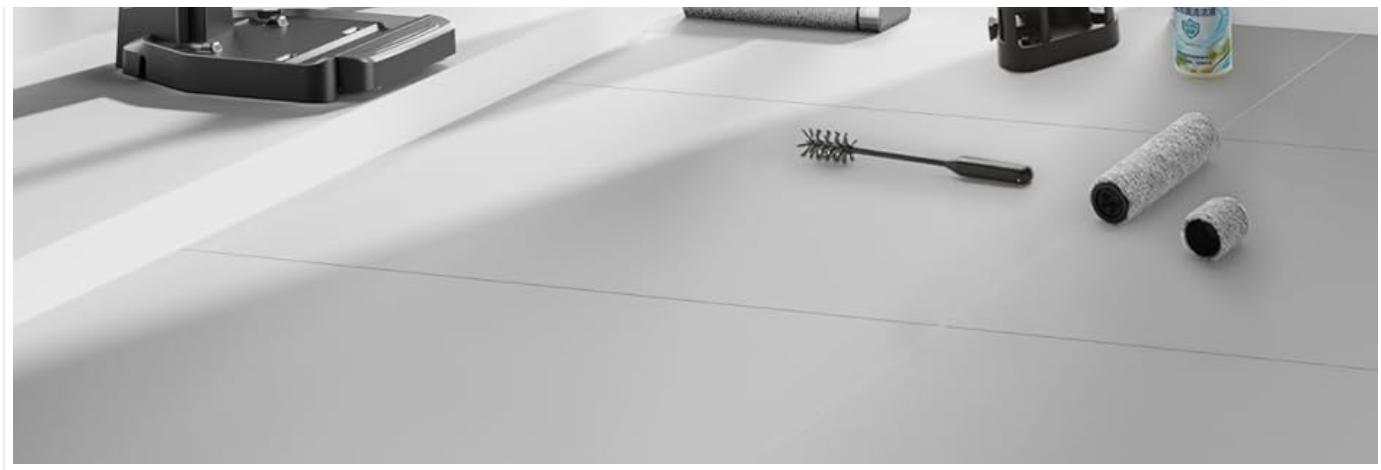

**Image:** Midea X10 main unit, charging base, and various accessories including a cleaning brush and roller brush.

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the different parts of your Midea X10 vacuum cleaner.



**Image:** Front view of the Midea X10 vacuum cleaner, showing the main body, handle, and brush head.



**Image:** Side view of the Midea X10 vacuum cleaner, highlighting the clean and dirty water tanks, and the handle design.

1. Handle
2. Display Screen
3. Power Button
4. Mode Selection Button
5. Clean Water Tank
6. Dirty Water Tank
7. Roller Brush Cover
8. Brush Head
9. Charging Contacts

## 5. SETUP

---

### 5.1 Assembly

1. Insert the handle assembly into the main unit until it clicks into place. Ensure it is securely fastened.
2. Place the charging base on a flat, stable surface near a power outlet.

## 5.2 Charging the Battery

Before first use, fully charge the appliance. A full charge takes approximately 4-5 hours.

1. Connect the power adapter to the charging base and plug it into a wall outlet.
2. Place the Midea X10 onto the charging base. Ensure the charging contacts align.
3. The display screen will indicate the charging status. The battery indicator will show a full charge when complete.



**Image:** The Midea X10 vacuum cleaner docked on its charging base, connected to power.

## 5.3 Filling the Clean Water Tank

1. Press the release button and remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean tap water. You may add a small amount of non-foaming floor cleaning solution if desired (follow solution manufacturer's instructions). Do not exceed the MAX fill line.
3. Close the tank cap securely and reinsert the clean water tank into the main unit until it clicks.

# 6. OPERATING INSTRUCTIONS

---

## 6.1 Powering On/Off

- To turn on: Press the Power Button once. The appliance will start in standard cleaning mode.
- To turn off: Press the Power Button again.

## 6.2 Selecting Cleaning Mode

The Midea X10 offers different cleaning modes for various needs.

- **Standard Mode:** Suitable for daily wet and dry cleaning on hard floors.

- **Max Mode:** Provides increased suction and water flow for stubborn dirt and messes. Press the Mode Selection Button to switch to Max Mode.
- **Dry Vacuum Mode:** For vacuuming dry debris without dispensing water. Press the Mode Selection Button to cycle through modes until Dry Vacuum is selected.

## 6.3 Cleaning Your Floors

1. Ensure the clean water tank is filled and the dirty water tank is empty.
2. Tilt the main unit back to engage the roller brush and start cleaning.
3. Move the vacuum cleaner slowly forward and backward over the area to be cleaned.
4. The display screen will show the current mode, battery level, and any alerts.

## 6.4 Self-Cleaning Function

After each wet cleaning session, it is recommended to use the self-cleaning function.

1. Place the vacuum cleaner back on the charging base.
2. Ensure there is sufficient clean water in the clean water tank.
3. Press and hold the Mode Selection Button for 3 seconds to activate the self-cleaning cycle.
4. The appliance will run a cycle to clean the roller brush and internal pathways.
5. Once complete, empty the dirty water tank.

## 7. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your Midea X10.

### 7.1 Emptying the Dirty Water Tank

Empty the dirty water tank after each use or when the 'Dirty Water Tank Full' indicator appears.

1. Press the release button and remove the dirty water tank.
2. Carefully open the tank and dispose of the dirty water.
3. Rinse the tank and its filter thoroughly with clean water.
4. Allow all parts to air dry completely before reassembling.

### 7.2 Cleaning the Roller Brush

The roller brush should be cleaned regularly, especially after the self-cleaning cycle.

1. Turn off the appliance and remove it from the charging base.
2. Open the roller brush cover.
3. Remove the roller brush. Use the provided cleaning brush to remove any hair or debris.
4. Rinse the roller brush under running water.
5. Allow the roller brush to air dry completely before reinstalling.



**Image:** Top-down view of the Midea X10 brush head, showing the roller brush and its cover.

### 7.3 Cleaning the Filter

The filter in the dirty water tank should be cleaned regularly to maintain suction power.

1. Remove the dirty water tank.
2. Remove the filter assembly from the tank.
3. Rinse the filter under running water until clean.
4. Allow the filter to air dry completely before reassembling. Do not use the appliance with a wet filter.

### 7.4 Storage

When not in use for an extended period, ensure the appliance is clean, dry, and fully charged. Store it in a cool, dry place.

## 8. TROUBLESHOOTING

If you encounter issues with your Midea X10, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Appliance does not turn on	Battery is depleted	Charge the battery fully.
No water dispensing	Clean water tank is empty or incorrectly installed	Fill the clean water tank and ensure it is properly seated.
Poor suction	Dirty water tank is full or filter is clogged	Empty and clean the dirty water tank and filter.
Roller brush not rotating	Roller brush is jammed or incorrectly installed	Remove and clean the roller brush, check for obstructions, and reinstall correctly.
Leakage	Tanks not properly sealed or damaged	Ensure both clean and dirty water tanks are correctly installed and sealed. Check for cracks or damage.

If the problem persists after trying these solutions, please contact customer support.

## 9. SPECIFICATIONS

---

- **Model:** 38212339
- **Brand:** Midea
- **Power:** 220W
- **Battery Voltage:** 22.2V
- **Max Runtime:** Up to 35 minutes
- **Special Features:** Cordless, Wet/Dry Cleaning
- **Filter Type:** Replaceable media
- **Recommended Surfaces:** All floor types
- **Power Source:** Battery powered

## 10. WARRANTY AND SUPPORT

---

Your Midea X10 Wet & Dry Cordless Vacuum Cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, spare parts, or warranty claims, please contact Midea customer service or your local retailer. Keep your purchase receipt as proof of purchase.