



[Manuals.plus](#) /

› [Luqeeq](#) /

› [Luqeeq Electric Tortilla Press User Manual](#)

Luqeeq Luqeeqy925kp1s0v

Luqeeq Electric Tortilla Press User Manual

Model: Luqeeqy925kp1s0v

[Introduction](#)

[Safety Instructions](#)

[Components](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance &](#)

[Cleaning](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

1. INTRODUCTION

Thank you for purchasing the Luqeeq Electric Tortilla Press. This appliance is designed for making tortillas, rotis, pancakes, and other flatbreads with ease. It features a 10-inch non-stick heating surface, adjustable temperature control, and a durable stainless steel cover. Please read this manual thoroughly before first use to ensure safe and optimal operation.

**Various delicacies
create as you wish**



Tem. contro



High power



Indicator ligh



Stainless



Image 1.1: The Luqeeg Electric Tortilla Press, capable of preparing various flatbreads and dishes.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Electric Tortilla Press:

- **Upper Heating Plate:** Non-stick surface for cooking.
- **Lower Heating Plate:** Non-stick surface for cooking.
- **Temperature Control Knob:** Adjusts heating level (Min to Max).
- **Indicator Lights:**
 - **Red Light:** Indicates the appliance is powered on.
 - **Green Light:** Indicates the desired cooking temperature has been reached.
- **Handle:** For opening and closing the press.
- **Stainless Steel Cover:** Durable exterior housing.
- **Power Cord:** For connecting to an electrical outlet.

Adjustable temperature with knob

RED LIGHT ON --

Indicates that the crepe pan is on

GREEN LIGHT ON --

Indicates that the desired cooking temperature has been reached

PRECISE TEMPERATURE KNOB --

Adjust your preferred browning level with the simple temperature dial



CRISP

/



MEDIUM

/



SLIGHT



Image 3.1: Close-up of the temperature control knob and indicator lights. The red light signifies power, and the green light indicates readiness.



Image 3.2: The appliance featuring its durable stainless steel cover.

4. SETUP

1. **Unpack:** Carefully remove the appliance from its packaging. Retain packaging for future storage or transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Clean:** Before first use, wipe the non-stick heating plates with a damp cloth and dry thoroughly. Do not immerse the appliance in water.
4. **Placement:** Place the tortilla press on a stable, heat-resistant, and dry surface. Ensure there is adequate space around the appliance for ventilation.
5. **Power Connection:** Ensure the temperature control knob is set to "MIN" before plugging the power cord into a standard 110V-120V AC electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Preheating

1. Plug in the appliance. The red indicator light will illuminate, indicating power is on.

2. Turn the temperature control knob to your desired setting. For most tortillas and flatbreads, a medium to high setting is recommended.
3. Allow the appliance to preheat. The green indicator light will illuminate when the desired temperature is reached, indicating it is ready for use. This typically takes 5-10 minutes.



Image 5.1: The 25.5cm (10-inch) large heating surface, designed for making larger flatbreads.

5.2 Cooking Tortillas/Flatbreads

1. Once the green light indicates readiness, open the press using the handle.
2. Place a ball of dough (approximately 1.5-2 inches in diameter for a 10-inch tortilla) slightly off-center towards the back of the lower heating plate.
3. Gently close the upper heating plate, pressing down firmly but carefully on the handle for a few seconds to flatten the dough. Avoid excessive force.
4. Allow the tortilla to cook for 30-60 seconds, or until it reaches your desired level of doneness and browning. Cooking time will vary based on dough type and temperature setting.
5. Open the press and carefully remove the cooked tortilla using a non-metallic utensil (e.g., plastic spatula). Do not use metal utensils as they can damage the non-stick coating.
6. Repeat for additional tortillas.



Image 5.2: A close-up view of the non-stick cooking surface, ensuring easy food release.

5.3 After Use

1. Turn the temperature control knob to "MIN".
2. Unplug the appliance from the wall outlet.
3. Allow the appliance to cool completely before cleaning or storing.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your appliance.

1. **Ensure Cooling:** Always ensure the appliance is unplugged and completely cool before cleaning.
2. **Cleaning Plates:** Wipe the non-stick heating plates with a soft, damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used, followed by wiping with a clean damp cloth. Do not use abrasive cleaners, scouring pads, or metal utensils, as these will damage the non-stick coating.
3. **Cleaning Exterior:** Wipe the exterior stainless steel cover and plastic parts with a damp cloth. Dry thoroughly.
4. **Do Not Immerse:** Never immerse the appliance, power cord, or plug in water or any other liquid.
5. **Storage:** Store the clean and dry appliance in a cool, dry place.



Image 6.1: The non-stick coating facilitates easy cleaning after use.

7. TROUBLESHOOTING

If you encounter issues with your appliance, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact support.
Tortillas are not cooking evenly.	Uneven dough thickness; insufficient preheating; incorrect temperature setting.	Ensure dough balls are uniform. Allow the appliance to fully preheat until the green light illuminates. Adjust the temperature knob to a higher setting if needed.
Tortillas stick to the plates.	Plates not properly cleaned; dough too wet; plates not hot enough.	Ensure plates are clean and dry before use. Adjust dough consistency. Allow sufficient preheating time. Do not use oil or cooking spray as it can damage the non-stick coating over time.

Problem	Possible Cause	Solution
Smoke or unusual odor during first use.	Protective oils burning off.	This is normal for first use and should dissipate quickly. Ensure good ventilation. If smoke persists or is excessive, unplug and contact support.

8. PRODUCT SPECIFICATIONS

Model Number	Luqeegy925kp1s0v
Brand	Luqeeg
Power	1100 Watts
Maximum Pancake/Tortilla Size	Approx. 25.5 cm (10 inches)
Material	Aluminum alloy + Stainless Steel (SUS)
Product Dimensions (L x W x H)	13.78"D x 11.42"W x 7.87"H (Approx. 35cm D x 29cm W x 20cm H)
Item Weight	5.04 pounds (Approx. 2.29 kg)
Special Feature	Adjustable Temperature Control



Image 8.1: Diagram illustrating the approximate dimensions of the appliance.

9. WARRANTY INFORMATION

Luqeeq products are manufactured to high-quality standards. While specific warranty details are not provided in this manual, most Luqeeq products come with a standard manufacturer's warranty covering defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the documentation included with your purchase or contact Luqeeq customer support.

10. CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report a problem with your Luqeeq Electric Tortilla Press, please contact our customer support team.

Contact Information:

- **Website:** Visit the official Luqeeq website for support resources.
- **Email:** Refer to your product packaging or purchase documentation for specific email contact.
- **Phone:** Refer to your product packaging or purchase documentation for specific phone contact.

Please have your model number (Luqeeqy925kp1s0v) and proof of purchase ready when contacting support.