

Fricpart-074863

Instruction Manual

KENMORE 11029133413 WASHER LID LOCK LATCH REPLACEMENT PART

Brand: Generic | Model: Fricpart-074863

Introduction

This manual provides essential instructions for the installation, operation, and maintenance of the Fricparts replacement lid lock latch for Kenmore 11029133413 washing machines. Please read this manual thoroughly before proceeding with installation to ensure safe and correct usage.

Safety Information

- Disconnect Power:** Always unplug the washing machine from the electrical outlet before attempting any repairs or maintenance. Failure to do so can result in electric shock or serious injury.
- Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves, to prevent injury.
- Professional Assistance:** If you are unsure about any step or uncomfortable performing the repair, consult a qualified appliance technician.
- Handle with Care:** Appliance parts can have sharp edges. Handle all components carefully.

Package Contents

- 1 x Kenmore 11029133413 Washer Lid Lock Latch Replacement Part (Fricpart-074863)

Compatibility

This replacement part is specifically designed for Kenmore washing machine model **11029133413**. Verify your washer's model number before installation to ensure proper fit and function. Appliance parts can appear similar; confirming the model number is crucial.

Setup and Installation

Follow these steps carefully to replace the washer lid lock latch:

- Prepare the Washer:**
 - Unplug the washing machine from the power outlet.
 - Turn off the water supply to the washer.
 - Move the washer away from the wall to allow access to the rear and top.

2. Access the Lid Lock:

- Depending on your specific Kenmore model, you may need to remove the control panel or the entire top panel of the washer. Typically, the control panel can be lifted or unclipped, and the top panel may have screws at the rear or clips at the front. Refer to your washer's service manual for exact panel removal instructions.
- Locate the existing lid lock latch assembly, usually mounted near the front edge of the washer opening.

3. Disconnect the Old Latch:

- Carefully disconnect the electrical wiring harness from the old lid lock latch. There is usually a tab or clip that needs to be pressed to release the connector.
- Remove any screws or clips securing the old lid lock latch to the washer frame.
- Gently remove the old lid lock latch assembly.

4. Install the New Latch:

- Position the new Fricparts lid lock latch replacement part in the same location as the old one.
- Secure it with the screws or clips that were removed earlier. Ensure it is firmly seated and aligned correctly.
- Connect the electrical wiring harness to the new lid lock latch. Make sure the connector clicks into place securely.

5. Reassemble and Test:

- Carefully reattach the control panel or top panel of the washer. Ensure all screws and clips are reinstalled.
- Plug the washing machine back into the electrical outlet.
- Turn on the water supply.
- Perform a test cycle to ensure the lid lock latch functions correctly. The lid should lock when the cycle starts and unlock when the cycle is complete or paused.



Image: The Fricparts replacement lid lock latch assembly for Kenmore 11029133413 washers. This image displays the complete replacement lid lock latch assembly, featuring the white plastic latch mechanism connected to a gray wiring harness with a multi-pin connector at the end.

Operating Instructions

The lid lock latch is an integral safety component of your washing machine. Its operation is automatic:

- When a wash cycle begins, the lid lock latch engages, preventing the lid from being opened during agitation and spin cycles. This ensures user safety and prevents water spillage.
- The lid will remain locked until the cycle is complete or paused, and the internal components have come to a stop.
- If the lid fails to lock, the washer will typically not start or will display an error code.

Maintenance

The lid lock latch is a sealed unit and generally requires no specific maintenance. However, to ensure its longevity and proper function:

- Keep the area around the lid lock mechanism clean and free of debris, lint, or detergent residue.
- Avoid forcing the washer lid open when the lock is engaged.

- Regularly inspect the wiring harness for any signs of wear or damage.

Troubleshooting

Problem	Possible Cause	Solution
Lid does not lock, washer won't start.	Faulty lid lock latch, disconnected wiring, or obstruction.	Check for any obstructions preventing the lid from closing fully. Inspect the wiring harness connection to the lid lock latch. If the latch is new and correctly installed, it may be defective and require replacement.
Lid remains locked after cycle completion.	Lid lock latch malfunction or control board issue.	Unplug the washer for 5 minutes, then plug it back in to reset the control board. If the issue persists, the lid lock latch or the main control board may need replacement.
Error code related to lid lock.	Lid lock latch failure.	Consult your washer's user manual for specific error code meanings. Often indicates a need to replace the lid lock latch.

Specifications

- **Part Number:** FRIC-PL-APP-TP-22052025-090779
- **Item Model Number:** Fricpart-074863
- **Manufacturer:** Fricparts
- **Color:** Black/White (referring to wiring/housing)
- **Quantity:** 1 piece
- **Compatibility:** Kenmore 11029133413 Washer

Warranty and Support

Information regarding specific warranty terms for this replacement part is not provided in the product details. For warranty inquiries or technical support, please contact the seller or manufacturer directly. Ensure you retain your purchase receipt for any warranty claims.