

## Tefal EY5568E0

# TEFAL Easy Fry Silence Vision XL Air Fryer EY5568E0 User Manual

Model: EY5568E0

## 1. INTRODUCTION

Thank you for choosing the TEFAL Easy Fry Silence Vision XL Air Fryer. This appliance is designed to provide a convenient and healthy way to cook a variety of meals with little to no oil. Please read this manual thoroughly before using the appliance for the first time and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your air fryer.

### Important Safety Instructions

- Always place the appliance on a stable, heat-resistant surface, away from water sources.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Supervise children when the appliance is in use.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Keep hands and face away from the hot air outlet at the rear of the appliance during operation.
- The surfaces of the appliance may become hot during use. Use oven mitts when handling hot components.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling or storing.
- Do not block the air inlet or outlet vents during operation.

## 2. PRODUCT OVERVIEW

### Components

Familiarize yourself with the main parts of your TEFAL Easy Fry Silence Vision XL Air Fryer:

- **Main Unit:** Houses the heating element and control panel.
- **Cooking Basket:** Removable basket for holding food.
- **Removable Handle:** Attaches to the cooking basket for easy handling.
- **Viewing Window:** Allows monitoring of cooking progress without opening the basket.

- **Digital Control Panel:** For setting temperature, time, and selecting programs.



**Figure 2.1:** Front view of the TEFAL Easy Fry Silence Vision XL Air Fryer, showing the digital display and the transparent viewing window.

## Control Panel

The intuitive digital control panel allows for precise cooking adjustments:

- **Power Button:** Turns the appliance on/off.
- **Temperature Control:** Adjusts cooking temperature from 40°C to 220°C.
- **Timer Control:** Sets cooking time.
- **Pre-set Programs:** Icons for 10 automatic cooking functions (e.g., fries, chicken, fish).
- **Extra Crisp Function:** Activates for enhanced browning and crispiness.
- **Start/Stop Button:** Initiates or pauses the cooking process.



**Figure 2.2:** Detailed view of the digital control panel, displaying temperature, time, and various cooking program icons.

### 3. SETUP

#### Unpacking

1. Carefully remove all packaging materials from the air fryer.
2. Check for any damage to the appliance or accessories. Do not use if damaged.
3. Retain packaging for future storage or transport if necessary.

#### Initial Cleaning

1. Before first use, wash the cooking basket and any removable parts (like the grid) in hot, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners.
3. Ensure all parts are completely dry before assembling and plugging in the appliance.

### 4. OPERATING INSTRUCTIONS

#### Before First Use

It is recommended to run the air fryer empty for approximately 10 minutes at 180°C (350°F) before cooking food for the first time. This helps to eliminate any manufacturing odors. Ensure the area is well-ventilated during this process.

## Basic Operation

1. Place the appliance on a stable, heat-resistant surface.
2. Plug the power cord into a grounded electrical outlet. The appliance will beep, and the display will illuminate.
3. Pull out the cooking basket. Place your ingredients inside the basket. Do not overfill the basket; ensure there is enough space for air circulation.
4. Slide the cooking basket back into the main unit until it clicks into place.
5. Press the Power button to turn on the display.
6. Use the temperature and timer controls to set your desired cooking temperature (40-220°C) and time.
7. Press the Start/Stop button to begin cooking.
8. During cooking, you can pull out the basket to shake or turn food. The appliance will pause automatically and resume when the basket is reinserted.
9. Once the timer reaches zero, the appliance will beep and automatically shut off.
10. Carefully pull out the basket and empty the cooked food.

## Using Pre-set Programs

The TEFAL Easy Fry Silence Vision XL features 10 automatic cooking programs for common dishes:

- Fries
- Nuggets
- Bacon
- Shrimp
- Chicken
- Pizza
- Meat
- Vegetables
- Fish
- Cake

To use a pre-set program, simply press the corresponding icon on the control panel. The appliance will automatically set the optimal temperature and time for that dish. You can adjust these settings manually if desired before pressing Start/Stop.



Figure 4.1: The air fryer in operation, showing fries being cooked inside the basket, visible through the viewing window.

## Extra Crisp Function

Activate the Extra Crisp function for dishes that require a golden, crispy finish. This function optimizes the heating and airflow to achieve superior browning and texture.

## Cooking Tips

- For best results, pre-heat the air fryer for 3-5 minutes before adding food.
- Shake the basket halfway through cooking for items like fries or nuggets to ensure even browning.
- Do not overload the basket. Cook in smaller batches if necessary to allow for proper air circulation.
- Lightly brush or spray food with oil for extra crispiness, especially for fresh vegetables or homemade fries.



**Figure 4.2:** A whole chicken, seasoned with lemon and herbs, placed inside the air fryer basket, ready for cooking.



**Figure 4.3:** The TEFAL Easy Fry Silence Vision XL Air Fryer shown alongside a smartphone displaying the MyTefal app, which offers recipes and cooking guidance.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your air fryer.

### Daily Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the cooking basket and grid. Wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak in hot soapy water for 10-15 minutes.
3. Wipe the interior of the appliance with a damp cloth.
4. Clean the exterior of the appliance with a damp cloth.

### Deep Cleaning

- If necessary, use a soft brush to clean the heating element inside the appliance. Do not use metal brushes or abrasive materials.
- Ensure no water enters the main unit during cleaning.

### Dishwasher Safe Parts

The cooking basket and grid are dishwasher safe for convenient cleaning.

## 6. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overloaded; food not shaken.	Do not overfill the basket. Shake the basket halfway through cooking for even results.
White smoke comes from the appliance.	Excess fat from food; residue from previous use.	Clean the basket and interior thoroughly. For fatty foods, drain excess fat during cooking.
Food is not crispy.	Not enough oil; temperature too low; cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time. Use the Extra Crisp function.

## 7. SPECIFICATIONS

Technical details for the TEFAL Easy Fry Silence Vision XL Air Fryer EY5568E0:

Feature	Detail
Brand	Tefal
Model Number	EY5568E0 (also 2056403)
Capacity (Bowl)	5 Liters
Capacity (Basket)	1.5 kg
Power	1670 Watts
Temperature Range	40°C to 220°C
Control Method	Touch (Electronic)
Material	Aluminum, Plastic
Special Features	10 Automatic Cooking Programs, Timer, Automatic Shut-off, Extra Crisp Function, LED Display, Viewing Window, Silent Operation
Dishwasher Safe Parts	Basket

## 8. WARRANTY AND SUPPORT

Information regarding the product warranty and customer support can typically be found in the separate warranty booklet included with your product or on the official Tefal website. For assistance, please refer to

the contact details provided in your product packaging or visit the official Tefal support page.

You can visit the official Tefal store for more information:[Tefal Store](#)