



Manuals.plus /

- › **Aovly /**
- › Aovly MINI Handheld Sewing Machine User Manual

Aovly MINI

Aovly MINI Handheld Sewing Machine User Manual

Model: MINI

INTRODUCTION

Thank you for choosing the Aovly MINI Handheld Sewing Machine. This portable and easy-to-use device is designed for quick repairs and various sewing projects, making it ideal for beginners and experienced users alike. This manual provides detailed instructions for setting up, operating, and maintaining your sewing machine to ensure optimal performance.

Comfortable grip

Ergonomic design fits the hand, comfortable control. Improving work efficiency, reducing fatigue, and enjoying the pleasure of sewing.

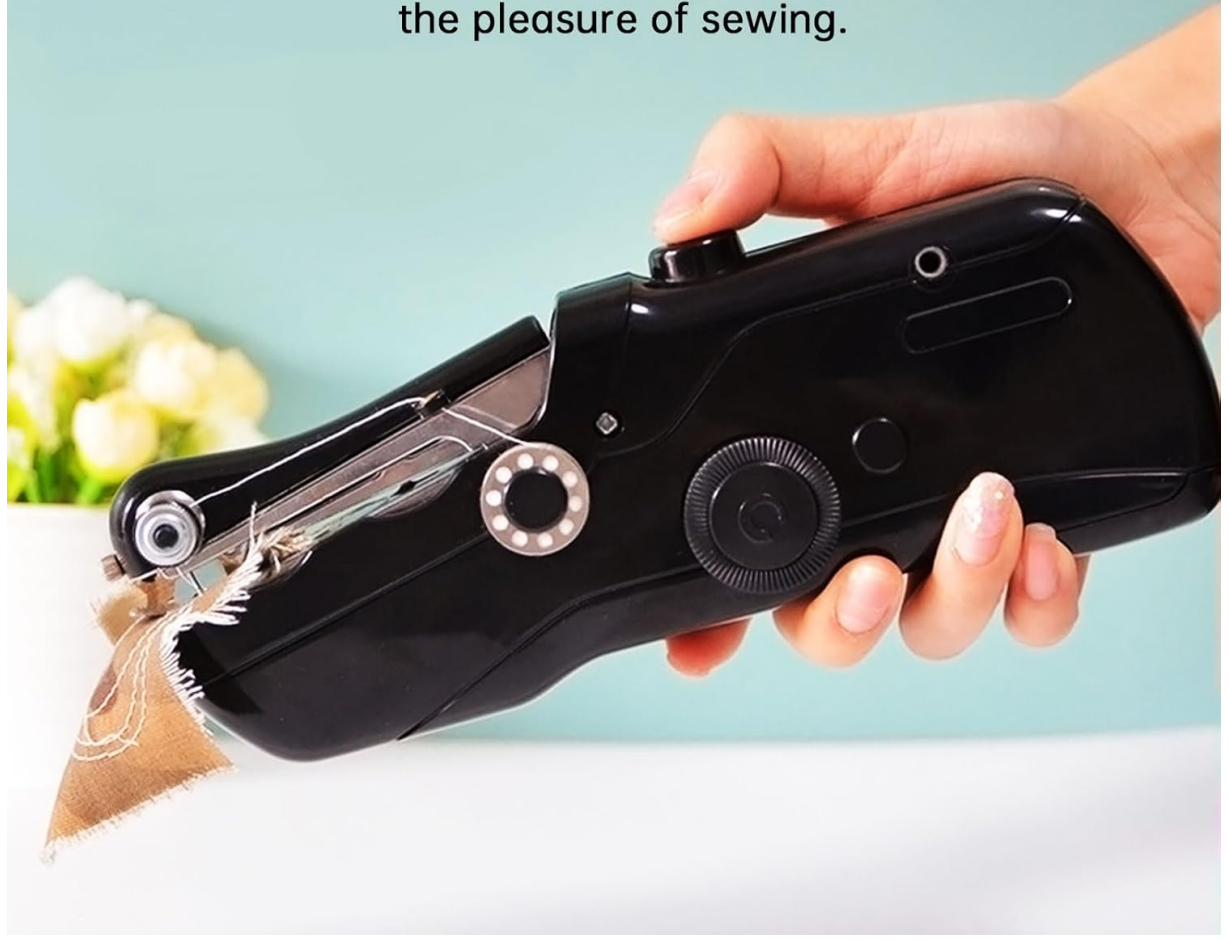


Image: A hand comfortably holding the Aovly MINI Handheld Sewing Machine, highlighting its ergonomic design.

Included Accessories:

Your sewing machine comes with a complete kit to support your projects:

- Integrated storage box for organized storage.
- Two sewing thread spools in 20 assorted colors.
- Replacement needles.
- Safety scissors.
- Needle threader.
- Measuring tape.
- Seam ripper.
- Buttons and pins.



Image: A collection of sewing accessories provided with the machine, neatly arranged.

SETUP

Power Supply:

The Aovly MINI Handheld Sewing Machine offers two power supply options:

- **Battery Power:** Insert four AA batteries into the designated compartment.
- **DC Adapter:** Use the provided DC adapter to power the machine.

A switch allows you to select between USB power (if using an adapter) and battery power.

Powered by four AA batteries



Powered by USB



Image: The bottom of the sewing machine showing the battery compartment and the USB power input port.

Threading the Machine:

1. Remove the black cap from the thread spindle.
2. Place your desired thread spool onto the spindle.
3. Guide the thread through the small hole on the machine.
4. Feed the thread over the top of the tension disc.
5. Thread the needle using the provided needle threader.
6. Ensure the needle is at its highest position before starting to sew.

Your browser does not support the video tag.

Video: A detailed guide on how to set up and thread the Aovly MINI Handheld Sewing Machine, including battery installation and thread path.

Your browser does not support the video tag.

Video: A step-by-step demonstration of how to use the handheld sewing machine, covering threading and basic operation.

OPERATING INSTRUCTIONS

Sewing Process:

1. Lift the fabric holder to position your fabric under the needle.
2. Ensure the needle is at its highest point before starting.
3. Select your desired speed setting using the switch (slow for new users, fast for experienced users).
4. Press the power button to begin sewing. Guide the fabric gently as the machine stitches.
5. To finish, press the power button to stop. Pull out enough thread (approx. 2-3 inches) to tie a knot.
6. Use the provided hook or needle threader to secure the last loop on the back of the fabric, preventing unraveling.

Your browser does not support the video tag.

Video: A short demonstration of the sewing machine in operation, showing the needle stitching fabric.

Your browser does not support the video tag.

Video: A demonstration of the sewing machine's working status, highlighting its stitching capability on various fabrics.

Fabric Compatibility:

The machine is suitable for various fabric types, including modal, cotton, mixed yarn, oxford, tussore, chemical fiber, denim, flax, corduroy, and haircords.



Image: A visual representation of different fabric materials compatible with the Aovly MINI Handheld Sewing Machine.

MAINTENANCE

Cleaning:

Regularly clean the needle area and thread path to prevent lint buildup and ensure smooth operation. Use a small brush or tweezers to remove any debris.

Needle Replacement:

If the needle becomes dull or breaks, replace it with a new one from your accessory kit. Ensure the machine is powered off before replacing the needle.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine not stitching / Thread not catching.	Incorrect threading, dull needle, insufficient thread tension.	Re-thread the machine carefully, replace the needle, adjust thread tension.
Stitches are loose or uneven.	Incorrect thread tension, improper fabric feeding.	Adjust the thread tension knob. Ensure fabric is fed smoothly and evenly.
Machine stops unexpectedly.	Low battery power, power adapter issue.	Replace batteries or ensure DC adapter is securely connected and functioning.

SPECIFICATIONS

Feature	Detail
Product Dimensions	9.45 x 5.51 x 4.13 inches
Item Weight	1.61 pounds
Manufacturer	Aovly
Model Number	MINI
Power Source	DC Adapter / 4 x AA Batteries
Material	Plastic
Color	Black

WARRANTY AND SUPPORT

Aovly is committed to providing high-quality service and support for your sewing machine. We offer a professional year-round online customer service team available 7 days a week, 24 hours a day, to provide effective and professional answers and support.

For any technical difficulties or inquiries, please do not hesitate to contact our customer service team. We are here to ensure your creativity and passion for sewing continue uninterrupted.

Return or exchange within 5 years is offered for product issues.