

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kohree](#) /

› [Kohree RV Door Lock Keyless Entry \(Model KR3411\) Instruction Manual](#)

### Kohree KR3411

# Kohree RV Door Lock Keyless Entry (Model KR3411) Instruction Manual

Your comprehensive guide to installation, operation, and maintenance.

## 1. PRODUCT OVERVIEW

The Kohree RV Door Lock Keyless Entry (Model KR3411) offers a secure and convenient solution for your RV, camper, or travel trailer. This 3-in-1 system provides multiple unlocking methods: a password keypad, a remote key fob, and traditional mechanical keys. Constructed from 100% metal, it ensures durability and enhanced security.

Key features include:

- Keyless entry via password keypad.
- Remote key fob operation up to 12m/40ft distance.
- Traditional mechanical key access.
- Durable all-metal construction.
- Weather-resistant design.
- Backlit keypad for visibility in low light.
- Silent mode option.
- Peek-proof digital design for enhanced security.



Figure 1: Kohree RV Door Lock Keyless Entry (Model KR3411)

## 2. PACKAGE CONTENTS

Before beginning installation, please verify that all components are present in your package:

- RV Door Lock unit
- User Manual
- Mounting Hardware Set (screws, strike plates)
- 2 x Mechanical Keys
- 2 x Remote Key Fobs
- 4 x AA Batteries
- Weatherproof Gasket

# UPGRADE EXCLUSIVE STRUCTURE

Independently designed gear transmission  
for more precise latch control than  
traditional levers.

(U.S. patent pending.)




Figure 2: All components included in the Kohree RV Door Lock package.

Your browser does not support the video tag.


Video 1: Unboxing the RV Door Lock. This video demonstrates the contents of the package, including the lock unit, keys, key fobs, batteries, and mounting hardware.

## 3. INSTALLATION GUIDE

 Ensure your door dimensions are compatible before installation. The lock hole dimensions must measure 3.75 inches tall x 2.75 inches wide x 1.5 inches deep. This lock is designed for doors with right-side hinges and is not suitable for glass doors.



# FITS DOORS WITH RIGHT-SIDE HINGES

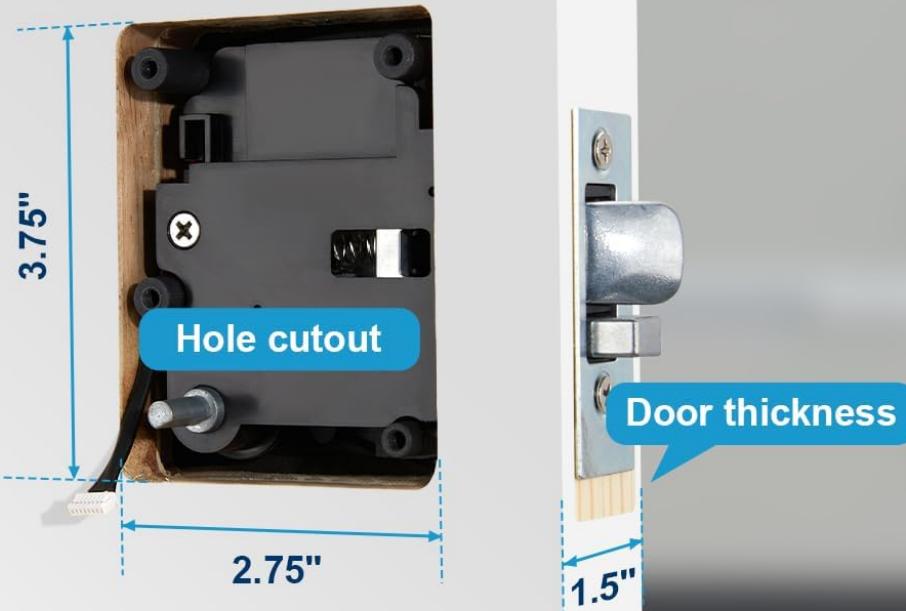

**NOTE: NOT FOR GLASS DOORS**



Figure 3: Check door dimensions and compatibility before installing the lock.

### 3.1 Removing the Old Lock

1. Open your RV door.
2. Locate and remove the screws securing the old lock's strike plate on the door frame.
3. Remove the screws holding the interior and exterior parts of the old lock.
4. Carefully remove the old lock assembly from the door.

### 3.2 Installing the New Lock

1. Ensure the interior levers of the new lock are in the correct position.
2. Feed the wiring from the exterior lock unit through the door opening first.
3. Gently slide the exterior lock unit into the door opening from the outside.

4. From the inside, connect the wiring from the interior lock unit to the exterior unit.
5. Align the interior lock unit with the exterior unit and secure them with the provided screws.
6. Test the manual latch and deadbolt mechanisms to ensure smooth operation.
7. Install the new strike plates on the door frame using the shorter screws.

Your browser does not support the video tag.

Video 2: Detailed installation guide for the RV Door Lock. This video provides a step-by-step visual demonstration of how to remove an old lock and install the new Kohree RV Door Lock.

Your browser does not support the video tag.

Video 3: Instruction video for the RV Keyless Entry Door Lock. This video covers the installation process and initial setup of the lock.

---

## 4. OPERATING INSTRUCTIONS

---

The Kohree RV Door Lock offers multiple ways to secure and access your RV.

# RV KEYLESS ENTRY DOOR LOCK

ENJOY EASY UNLOCKING



Figure 4: Overview of the three unlocking methods: mechanical key, password keypad, and remote key fob.

## 4.1 Keypad Operation (Password Setting & Unlocking)

The keypad supports 6-8 digit passwords and features a peek-proof digital design, allowing you to enter random numbers before or after your actual code to prevent others from memorizing it.



Figure 5: The keypad features a peek-proof design for secure password entry.

#### Setting a New Password:

1. Press and hold the "Settings" button (usually located on the interior side of the lock) for 5 seconds.
2. When the light changes from green to blue, enter your new 6 to 8-digit password, and press the lock button to confirm.
3. When the green light turns blue again, repeat the new password and press the lock button to confirm. A green light indicates successful password setting.

## HOW TO RESET A NEW PASSWORD

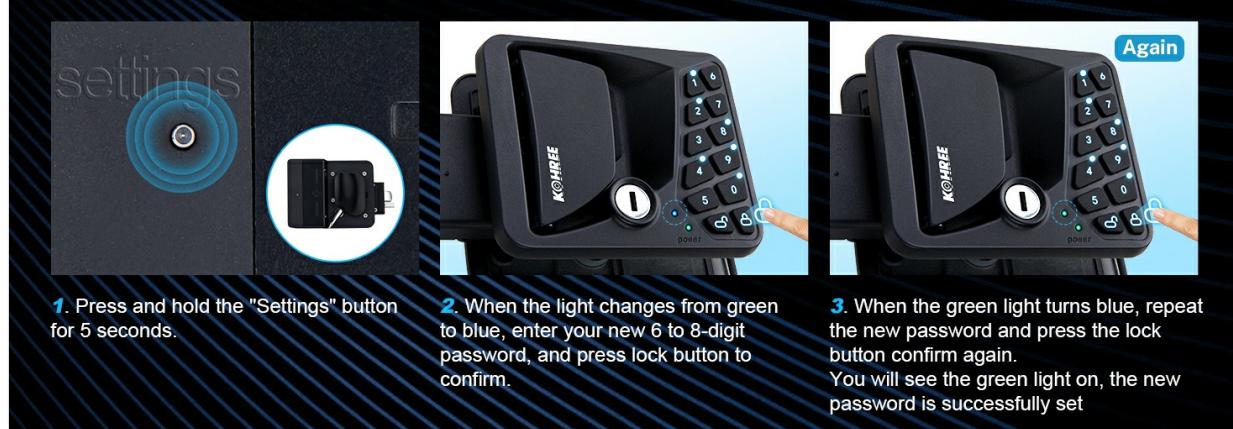


Figure 6: Step-by-step guide to resetting your keypad password.

Your browser does not support the video tag.

Video 4: Keypad instruction and code changing for the electronic RV Door Lock. This video demonstrates how to change the keypad code.

### 4.2 Remote Key Fob Operation

The remote key fob allows you to lock and unlock your RV door from a distance of up to 12m/40ft.



Figure 7: The remote key fob provides convenient wireless control.

#### Pairing the Remote Fob:

1. Ensure the fob switch (located on the interior side of the lock) is in the "ON" position.
2. Press the "FOB LEARN" button on the lock.
3. Press the "UNLOCK" button of the fob at the same time until you hear a "beep".
4. If you have two locks, you can pair the fob with another lock by using the other set of buttons to enable control of two locks with one fob.

### 4.3 Manual Locking and Unlocking

In addition to electronic methods, the lock can always be operated manually using the provided mechanical keys or the interior levers.

- **Exterior:** Use the mechanical key to lock or unlock the handle and deadbolt.
- **Interior:** Use the orange levers to manually control the latch bolt and deadbolt from inside the RV.

## 5. MAINTENANCE

## 5.1 Battery Replacement

The lock uses 4 AA Alkaline batteries. When the batteries are low, the lock will indicate this (e.g., through a specific beep pattern or light indicator). Replacing the batteries will not affect your programmed passwords or remote fob pairings.

1. Locate the battery compartment on the interior side of the lock.
2. Remove the screws securing the battery cover plate.
3. Carefully remove the old batteries and insert new AA Alkaline batteries, ensuring correct polarity.
4. Replace the battery cover plate and tighten the screws.

## 5.2 Adjusting Keypad Sound

You can adjust the volume of the keypad beeps or set it to silent mode.

- To enter silent mode: Long press the number "1" key on the keypad. The keypad will become silent.
- To restore sound: Long press the number "1" key again to restore the sound of the keypad.

---

## 6. TROUBLESHOOTING

---

If you encounter issues, try the following:

- **Incorrect Password Entry:** If an incorrect password is entered, the keypad backlight will turn off. You will need to restart the password entry process from Step 1.
- **Lock Not Responding:** Check battery levels and replace if necessary. Ensure the remote control switch on the interior side of the lock is in the "ON" position for remote functions.
- **Resetting the Lock:** To reset the lock to original factory settings (password reset to "1234"), press the "CODE RESET" button (usually a small button requiring a pin) until you hear a "beep". All changes will be reset, and remote fobs will need to be re-paired.

---

## 7. SPECIFICATIONS

---

Feature	Detail
Manufacturer	Kohree
Model Number	KR3411
Product Dimensions	11.61 x 16.66 x 21.79 cm
Item Weight	1.81 kg
Material	Metal
Color	Black
Style	Remote RV Door Lock Keyless Entry
Power Source	4 x AA Alkaline Batteries (Included)
Special Features	Keypad and Remote, Keyless Entry, RV Door Locks Replacement

## 8. WARRANTY AND SUPPORT

---

This Kohree RV Door Lock (Model KR3411) comes with a **1-Year Warranty** from the date of purchase. For warranty claims, technical support, or any questions regarding your product, please contact Kohree customer service through the retailer where the product was purchased or visit the official Kohree website. Always refer to the official Kohree website or your purchase platform for the most up-to-date support information.

© 2025 Kohree. All rights reserved. Model KR3411.