

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [GarveeHome](#) /
- › [GarveeHome Rattan Dresser User Manual](#)

GarveeHome Rattan Dresser for Bedroom

GarveeHome Rattan Dresser User Manual

Model: Rattan Dresser for Bedroom

INTRODUCTION

Thank you for purchasing the GarveeHome Rattan Dresser. This dresser is designed to enhance your home decor with its natural rattan and modern features, including an LED light and a built-in charging station. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and optimal use of your new furniture.



Image: The GarveeHome Rattan Dresser, a white dresser with natural rattan drawer fronts, featuring an illuminated central shelf and a flat-screen TV mounted above it, showcasing its elegant design and functionality in a living space.

SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Always assemble the dresser on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload drawers. Distribute weight evenly.
- **Anti-Tip Device:** It is crucial to install the included anti-tip device to prevent the dresser from tipping over, especially in homes with children or pets. Secure the dresser to a wall using the provided hardware.
- Keep electrical components (LED light, charging station) away from water and moisture.
- Do not attempt to modify the product. Use only original replacement parts if needed.



Image: A detailed view highlighting key features of the dresser: an "Essential Anti Fall Device" attached to the wall, a close-up of the "Rattan Drawer" texture, and an illustration of a "Smooth Slide Drawer" mechanism, emphasizing safety and quality.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Dresser Panels (Top, Bottom, Sides, Back)
- Drawer Components (Fronts with Rattan, Sides, Backs, Bottoms)
- Drawer Slides
- Legs and Mounting Hardware
- LED Light Strip and Controller
- Charging Station Unit (2 AC Outlets, 2 USB Ports)
- Power Cord (6.6-Feet)

- Assembly Hardware (Screws, Dowels, Cam Locks, etc.)
- Anti-Tip Kit
- Instruction Manual

SETUP & ASSEMBLY

Assembly is required for this product. It is recommended that two adults assemble the dresser. Please follow the steps below carefully.

1. **Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to the dresser components.
2. **Identify Parts:** Lay out all components and hardware. Refer to the parts list in your separate assembly guide to identify each piece.
3. **Assemble the Frame:** Begin by connecting the side panels to the bottom panel using the provided hardware (e.g., cam locks and dowels). Ensure all connections are secure.
4. **Install Drawer Slides:** Attach the drawer slides to the inner sides of the dresser frame according to the pre-drilled holes. Ensure they are level and aligned.
5. **Assemble Drawers:** Construct each of the six drawers by attaching the sides, back, and bottom to the rattan front panel. Insert the drawer slides onto the assembled drawers.
6. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots in the dresser frame.
7. **Attach Legs:** Securely attach the dresser legs to the bottom of the dresser using the provided screws.
8. **Install LED Light Strip:** Adhere the RGB LED light strip to the designated area within the open shelf compartment. Connect the light strip to its controller and power source.
9. **Install Charging Station:** Place the charging station unit into its designated slot on the top surface or within the open compartment. Connect its power cord to an electrical outlet.
10. **Secure Anti-Tip Device:** Attach one end of the anti-tip strap to the back of the dresser and the other end to a wall stud using the provided screws and anchors. This step is critical for safety.

RGBW

Adjustable RGB Light Strips



Timing Function



Custom Style

Over 60,000 Colors



Mic Mode



Music Mode



APP Control

Key Control

Sync your lights with your favourite music

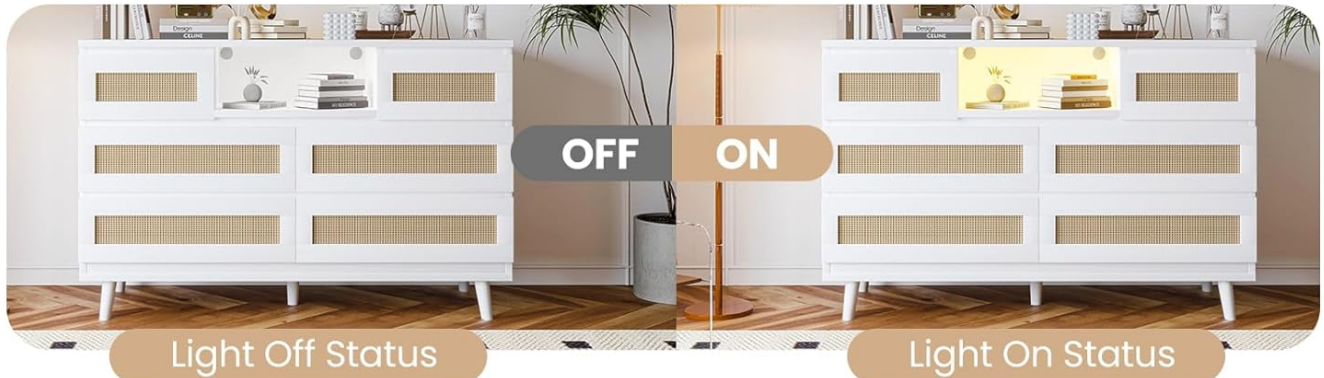


Image: A diagram illustrating the precise dimensions of the GarveeHome Rattan Dresser, including its overall width (47.25"), height (30.7"), and depth (13.2"), along with detailed measurements for the open shelf (20.08" x 6.9") and individual drawers (23.42" x 11.8" x 6.7"), providing a clear visual guide for placement and capacity.

OPERATING INSTRUCTIONS

Using the Drawers

The dresser features six spacious drawers with smooth-gliding slides for easy opening and closing. To open, gently pull the drawer handle. To close, push the drawer firmly until it is fully seated. Avoid slamming drawers to prolong their lifespan.



Image: The GarveeHome Rattan Dresser with several drawers partially open, revealing ample storage space for various items such as clothes, books, cosmetics, toys, and blankets, demonstrating its versatility for organizing a tidy room.

Operating the LED Light

The integrated RGB LED light strip offers customizable lighting for the open shelf compartment. The light can be controlled via a remote control or a dedicated mobile application (if applicable). Refer to the separate LED light manual for detailed instructions on:

- Turning the light ON/OFF
- Adjusting brightness
- Changing colors (over 60,000 options)
- Selecting lighting modes (e.g., static, fade, flash)
- Using timing functions
- Music sync mode (if available)

Built-in Charging Station



Image: A visual guide demonstrating the "RGBW Adjustable RGB Light Strips" feature of the dresser, showing the light in both "Light Off Status" and "Light On Status," along with various color options and control icons for timing, custom styles, mic mode, music mode, app control, and key control, highlighting its dynamic lighting capabilities.

Using the Built-in Charging Station

The dresser is equipped with a convenient charging station, featuring 2 standard AC outlets (125V/12A) and 2 USB ports (5V/2A). To use:

- Ensure the dresser's main power cord is plugged into a wall outlet.
- Plug your electronic devices into the AC outlets or USB ports as needed.
- Do not exceed the maximum power rating of the charging station.

6 Spacious Wood Drawers

Keep Your Room Tidy and Orderly



Image: A close-up view of the dresser's "Built-in Charging Station," showing a smartphone and tablet connected to its 125V/12A 2AC Outlets and 5V/2A 2 USB Ports, along with a 6.6-Foot Power Cord, illustrating its convenience for charging multiple devices.

MAINTENANCE

Proper care will help maintain the appearance and longevity of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish and natural rattan.
- **Rattan Care:** For the natural rattan, gently dust with a soft brush or vacuum with a brush attachment. If spills occur, blot immediately and wipe with a slightly damp cloth. Allow to air dry completely.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten if necessary.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure, which can cause fading or drying of the wood and rattan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers stick or are difficult to open/close.	Misaligned drawer slides; loose hardware; overloaded drawer.	Check drawer slide alignment and re-adjust if necessary. Ensure all screws on slides and drawers are tight. Reduce drawer contents if overloaded.
LED light not working.	Power cord unplugged; loose connection; faulty remote/controller.	Ensure the dresser's main power cord is plugged in. Check connections of the LED strip to the controller and power adapter. Replace remote batteries if applicable. Contact support if issues persist.
Charging station not providing power.	Dresser's main power cord unplugged; device not properly plugged in; overloaded circuit.	Verify the dresser's main power cord is securely plugged into a working wall outlet. Ensure devices are fully inserted into the outlets/USB ports. Unplug some devices if the station is overloaded.
Dresser feels wobbly.	Loose assembly hardware; uneven floor; anti-tip device not installed.	Re-tighten all assembly screws. Use shims under legs if the floor is uneven. Ensure the anti-tip device is properly installed and secured to the wall.

SPECIFICATIONS

Feature	Detail
Brand	GarveeHome
Model Name	Rattan 6 Dresser / Rattan Dresser for Bedroom
Product Dimensions	13.2"D x 47.3"W x 30.7"H
Color	White
Material	Wood, Natural Rattan
Number of Drawers	6
Special Feature	Built-in RGB LED Light, Built-in Charging Station (2 AC Outlets, 2 USB Ports)
AC Outlet Rating	125V/12A
USB Port Rating	5V/2A
Power Cord Length	6.6 Feet
Assembly Required	Yes
Item Weight	128 pounds
Mounting Type	Floor Mount (with Anti-Tip Device)

WARRANTY AND SUPPORT

GarveeHome stands behind the quality of its products. For warranty information, please refer to the warranty card included with your purchase or visit the official GarveeHome website. If you encounter any issues or have questions regarding your Rattan Dresser, please contact our customer support team.

Customer Support:

- For assistance, please visit the GarveeHome store on Amazon: [GarveeHome Store](#)
- Refer to the contact information provided in your product packaging.