



[Manuals.plus](#) /

› [ROBOTIME](#) /

› ROBOTIME WCF49 Kids Wooden Washer and Dryer Playset Instruction Manual

## ROBOTIME WCF49

# ROBOTIME WCF49 Kids Wooden Washer and Dryer Playset Instruction Manual

Model: WCF49

## 1. INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your ROBOTIME WCF49 Kids Wooden Washer and Dryer Playset. Designed for toddlers aged 3 and up, this playset offers a realistic and interactive pretend play experience, encouraging cognitive and communication skills, creative thinking, focus, and hand-eye coordination.



Image 1.1: Front view of the assembled ROBOTIME WCF49 Kids Wooden Washer and Dryer Playset.

## 2. SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use. Adult supervision is recommended during play.

- **Assembly Warning:** Ensure all parts are securely attached before use. Regularly check for loose screws or components.
- **Material:** This playset is constructed from wood. Keep away from excessive moisture to prevent damage.
- **Small Parts:** The playset includes small accessories (e.g., color beads, toy detergent bottles). Ensure these are used appropriately by children aged 3+ to avoid choking hazards.
- **Stability:** Place the playset on a flat, stable surface to prevent tipping.

### 3. WHAT'S INCLUDED

The ROBOTIME WCF49 Kids Wooden Washer and Dryer Playset includes the following components:

- Wooden Washer and Dryer Unit
- Toy Ironing Board
- Toy Iron
- 4 x Wooden Hangers
- Wooden Laundry Detergent Bottle
- Wooden Bleach Bottle
- 2 x Wooden Laundry Cubes (for soap drawer)
- Colorful Beads (inside washer drum)



Image 3.1: Overview of the playset and its included accessories.

### 4. ASSEMBLY INSTRUCTIONS

This playset requires adult assembly. Please follow the step-by-step instructions provided in the packaging. Ensure all screws and fasteners are tightened securely. A Phillips head screwdriver (not included) may be required.

1. Unpack all components and verify against the parts list (refer to packaging).
2. Attach the side panels to the base unit using the provided hardware.
3. Secure the middle shelf and top panel.
4. Install the washer and dryer doors, ensuring they open and close smoothly.
5. Attach the wooden handles and rotating knobs.
6. Assemble the ironing board and attach the hanger rack to the side of the unit.
7. Place the toy detergent and bleach bottles on top of the unit or in the soap drawer.

For visual guidance, please refer to the assembly diagrams in your product packaging.

## 5. OPERATING INSTRUCTIONS

The ROBOTIME WCF49 playset offers various interactive features for realistic pretend play.

### 5.1. Using the Washer and Dryer

- **Loading Clothes:** Open the transparent doors of the washer or dryer. Place small doll clothes or fabric pieces inside.
- **Adding Soap:** Pull out the 'SOAP' drawer located between the washer and dryer. Place the wooden laundry cubes inside or use the toy detergent bottle to mimic adding soap.
- **Selecting Cycle:** Turn the realistic knobs to select different wash or dry cycles. The knobs produce a satisfying clicking sound.
- **Spinning Drum:** For the washer, turn the drum manually to make the colorful beads inside spin, simulating a washing cycle.
- **Adjusting Temperature:** Use the sliding wooden knob on the dryer section to simulate temperature adjustment.

# ALL-IN-ONE WOODEN WASHER & DRYER SET



Put into Washer



Soap Storage Box




Machine Wash



Working Knobs

Image 5.1: Interactive features of the washer, including loading, soap drawer, and control knobs.

# PRETEND PLAY WASHER DRYER

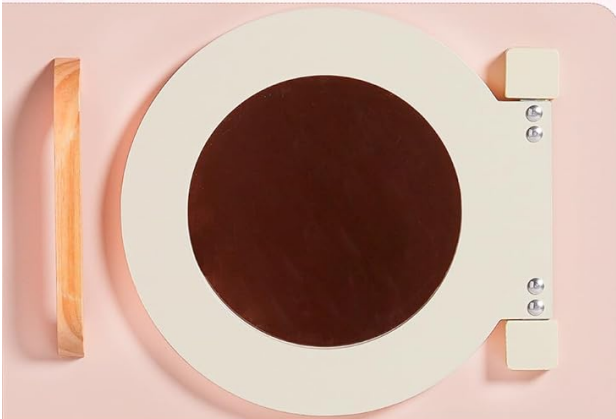

**Clothes Dryer**



**Adjust the Temperature**



**Ironing**



**Wooden Hangers**

*Image 5.2: Interactive features of the dryer, including temperature control and ironing accessories.*

## 5.2. Ironing Clothes

- Place doll clothes on the toy ironing board.
- Use the toy iron to mimic ironing.
- Hang freshly ironed clothes on the wooden hangers provided on the side rack.

## 5.3. Product Video Demonstrations

*Video 5.3: Official product video demonstrating the features of the ROBOTIME Kids Washer and Dryer Playset.*

*Video 5.4: Demonstration of the 4-in-1 Toddler Play Kitchen Set, which includes the washer and dryer unit in a larger play environment.*

## 6. MAINTENANCE

To ensure the longevity of your wooden playset, follow these simple maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the playset is thoroughly dry after cleaning to prevent wood warping or damage.
- **Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures.
- **Inspection:** Periodically inspect all parts for wear and tear, especially hinges, knobs, and any attached accessories. Tighten any loose screws as needed.

## 7. TROUBLESHOOTING

If you encounter any issues with your playset, consider the following common solutions:

- **Loose Parts:** If any part feels loose, gently tighten the corresponding screw. Do not overtighten.
- **Sticking Doors/Drawers:** Check for any obstructions. Ensure hinges are properly aligned and free of debris.
- **Missing Accessories:** Refer to the 'What's Included' section. If an item is genuinely missing from the original package, contact customer support.

## 8. SPECIFICATIONS

| Feature                     | Detail  |
|-----------------------------|---|
| Brand                       | ROBOTIME  |
| Model Number                | WCF49   |
| UPC                         | 730688421858  |
| Material Type               | Wood  |
| Item Dimensions (L x W x H) | 16 x 11.2 x 31.5 inches (40.6 x 28.4 x 80 cm)   |
| Item Weight                 | 9.5 KG (20.9 Pounds)  |
| Recommended Age             | 36 months to 360 months (3 to 30 years)   |
| Educational Objectives      | Cognitive Skill, Communication Skill, Creative Thinking, Focus and concentration, Hand-Eye Coordination |

# SPECIFICATION



9.5KG  
(20.9Pound)



Image 8.1: Detailed dimensions and weight of the playset.

## 9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official ROBOTIME website. Keep your proof of purchase for any warranty claims.