

LINKHOO SWF-SS-38-W1350

LINKHOO 5' x 10' Metal Motorcycle Storage Shed Instruction Manual

Model: SWF-SS-38-W1350 | Brand: LINKHOO

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your LINKHOO 5' x 10' Metal Motorcycle Storage Shed. Please read this manual thoroughly before beginning assembly or use to ensure proper function and longevity of your product. Keep this manual for future reference.

SAFETY INSTRUCTIONS

Always prioritize safety during assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Site Preparation:** Choose a level, solid surface for installation. Ensure adequate drainage to prevent water accumulation around the shed base.
- **Assembly Safety:**
 - Wear appropriate personal protective equipment (PPE), including gloves and eye protection.
 - Work with at least two people during assembly, especially when handling large or heavy panels.
 - Keep children and pets away from the assembly area.
 - Do not assemble in high winds or adverse weather conditions.
- **Structural Integrity:** Do not modify the shed's structure. Ensure all fasteners are securely tightened.
- **Ventilation:** The shed is designed with windows for some ventilation. Ensure proper airflow if storing items that require it.
- **Fire Safety:** While the shed is fire-resistant, avoid storing flammable liquids or materials inside without proper precautions.

COMPONENTS LIST

Your LINKHOO Motorcycle Storage Shed is shipped in multiple reinforced boxes. Before beginning assembly, carefully

unpack all components and verify that all parts are present against the detailed assembly guide provided in the packaging. If any parts are missing or damaged, please contact customer service immediately for free replacements.



Figure 1: Delivery of multiple packages. The shed components are shipped in 3 separate boxes.

SETUP AND ASSEMBLY

Follow the step-by-step instructions in the detailed assembly guide included with your product. The general steps are outlined below:

1. **Foundation:** Ensure your chosen site is level and prepared. A concrete slab or treated timber base is recommended for optimal stability and longevity.
2. **Base Frame Assembly:** Assemble the base frame according to the guide, ensuring it is square and level.
3. **Wall Panel Installation:** Attach the wall panels to the base frame, securing them with the provided fasteners. Pay attention to the orientation of panels with windows.
4. **Door Frame and Door Installation:** Assemble and install the door frame and then hang the doors. Ensure smooth operation and proper alignment for the lockable handle.
5. **Roof Assembly:** Install the roof support beams and then the roof panels. Ensure all roof panels overlap correctly to prevent water ingress.
6. **Track System (Optional):** If utilizing the optional glide track system, install it within the shed as per the specific instructions. This system aids in effortless parking of motorcycles.
7. **Final Checks:** Verify all screws, bolts, and fasteners are tightened. Check door operation and lock functionality.

Track System Bonus



Effortless Parking, Every Time.

Figure 2: Interior view highlighting the optional track system for motorcycle parking.

Lockable Doors for
Security



Upgraded Reinforcing
Crossbeam



Figure 3: Details of the lockable door handle and internal reinforcing crossbeam, enhancing security and structural integrity.

OPERATING INSTRUCTIONS

Your LINKHOO shed is designed for secure and convenient storage.

- **Opening/Closing Doors:** The shed features wide double doors for easy access. Use the handles to open and close the doors smoothly.
- **Locking Mechanism:** The doors are equipped with a lockable handle. Insert your key and turn to lock or unlock. Always ensure the doors are securely locked when the shed is unattended to protect your valuables.
- **Motorcycle Parking:** If the track system is installed, align your motorcycle's front wheel with the track for guided entry and exit. This helps in precise positioning and stability.
- **Ventilation:** The shed includes windows. While not fully opening, they provide some natural light and minimal air circulation.



Figure 4: Motorcycle stored inside the shed with doors open for access.

MAINTENANCE

The LINKHOO Metal Motorcycle Storage Shed is designed for near-zero maintenance, thanks to its galvanized steel construction. However, regular checks will ensure its longevity and optimal performance.

- **Cleaning:** Periodically clean the exterior with mild soap and water to remove dirt, dust, and debris. Rinse thoroughly with clean water. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Annually inspect all fasteners (screws, bolts) to ensure they remain tight. Re-tighten if necessary. Check for any signs of rust, especially in areas where the coating might be scratched. Touch up any scratches with rust-inhibiting paint if needed.
- **Door Hinges and Lock:** Lubricate door hinges and the lock mechanism annually with a silicone-based lubricant to ensure smooth operation.
- **Drainage:** Ensure the area around the shed remains clear of debris to allow for proper water drainage.

TROUBLESHOOTING

If you encounter any issues with your shed, refer to the following common problems and solutions:

- **Doors not closing properly:** Check if the shed is level. Adjust the base if necessary. Inspect hinges for damage or misalignment.
- **Difficulty with lock mechanism:** Ensure the doors are properly aligned. Lubricate the lock with a suitable lubricant. If the key is stuck or the lock is damaged, contact customer support.
- **Water leakage:** Verify that all roof and wall panels are correctly overlapped and all fasteners are tight. Ensure the foundation is properly sealed and drainage around the shed is adequate.
- **Rust spots:** Small rust spots can occur if the protective coating is scratched. Clean the area, sand lightly, and apply a rust-inhibiting primer followed by exterior metal paint.

For issues not covered here or if problems persist, please contact LINKHOO customer service.

SPECIFICATIONS

The following specifications apply to the LINKHOO 5' x 10' Metal Motorcycle Storage Shed (Model: SWF-SS-38-W1350):

Brand	LINKHOO
Model Number	SWF-SS-38-W1350
Material	Galvanized Steel (0.25mm / 24-gauge)
Color	Anthracite
Exterior Dimensions (D x W x H)	62.7" x 121" x 80" (approx. 5.2' x 10.1' x 6.7')
Interior Dimensions (D x W x H)	58.4" x 116.1" x 67.3" (approx. 4.9' x 9.7' x 5.6')
Wind Resistance	100+ mph
Snow Load Capacity	35 PSF (Pounds per Square Foot)
Assembly Required	Yes
Item Weight	16.53 pounds (Note: This weight likely refers to a single package or component. Please refer to shipping documentation for total product weight.)



Figure 5: Detailed dimensions of the LINKHOO Motorcycle Storage Shed.

WARRANTY AND SUPPORT

LINKHOO is committed to providing durable products and excellent customer service.

- **Product Lifespan:** The galvanized steel construction is designed for a long service life, offering protection for many years.
- **Customer Service:** For any questions regarding assembly, missing parts, or product issues, please contact LINKHOO customer service. We offer 24/7 support and free replacements for missing parts to ensure your satisfaction.

Please refer to your purchase documentation for specific warranty terms and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question