

[manuals.plus](#) /

- › [PRITOM](#) /
- › [PRITOM TAB10 Android 14 Tablet User Manual](#)

## PRITOM M10-TAB10

# PRITOM TAB10 Android 14 Tablet User Manual

**MODEL: M10-TAB10**

## 1. Introduction

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your PRITOM TAB10 Android 14 Tablet. Please read it thoroughly to ensure proper use and to maximize your device's performance.

The PRITOM TAB10 is a 10.1-inch tablet featuring the Android 14 Go operating system, a Quad-Core processor, 32GB of internal storage (expandable), and a 6000mAh battery. It is designed for general use, including browsing, media consumption, and light gaming.

## 2. Device Overview



Image: Front and back view of the PRITOM TAB10 Tablet, showcasing its sleek design and rear camera.



Image: Diagram illustrating the location of the headphone jack, volume buttons, power button, front camera, USB-C port, rear camera, flash, and speakers on the PRITOM TAB10 Tablet.

Familiarize yourself with the physical components of your tablet:

- **Headphone Jack:** For connecting wired headphones.
- **Volume +/-:** Adjusts audio output level.
- **Power On/Off:** Press and hold to power on/off or restart. Short press to sleep/wake.
- **Front Camera:** For video calls and selfies.
- **USB-C Port:** For charging and data transfer.
- **Rear Camera:** For taking photos and videos.
- **Flash:** Provides illumination for the rear camera.
- **Speakers:** For audio output.
- **Micro SD Card Slot:** For expanding storage (supports up to 512GB TF Card, not included).

### 3. Setup

#### 3.1 Unboxing

Upon opening the package, ensure all components are present. The standard package includes the

PRITOM TAB10 Tablet and a charger.

### 3.2 Charging the Device

Before first use, fully charge your tablet. Connect the provided charger to the USB-C port on the tablet and plug it into a power outlet. The battery indicator on the screen will show charging status.



Image: The PRITOM TAB10 Tablet screen showing a battery icon and '6000mAh' indicating its battery capacity.

### 3.3 Initial Power On

Press and hold the Power On/Off button until the PRITOM logo appears on the screen. The tablet will boot up to the initial setup screen.

### 3.4 Initial Setup

Follow the on-screen prompts to configure your tablet:

- 1. Language Selection:** Choose your preferred language.
- 2. Wi-Fi Connection:** Select your Wi-Fi network and enter the password. The tablet supports 802.11ac and 802.11n wireless standards.
- 3. Google Account:** Sign in with your Google account or create a new one. This is necessary to access the Google Play Store and other Google services.

4. **Date & Time:** Set the correct date and time.
5. **Security:** Set up a screen lock (PIN, pattern, or password) for device security.

## 4. Operating Instructions

### 4.1 Basic Navigation

The PRITOM TAB10 uses a capacitive touchscreen. Common gestures include tapping, swiping, pinching (for zoom), and long-pressing.

### 4.2 Android 14 Go System

Your tablet runs on the stable Android 14 Go system, optimized for efficient performance on devices with 4GB RAM. This system ensures quick app launches and smooth video playback.



Image: The PRITOM TAB10 Tablet displaying the Android 14 interface with multiple application icons, indicating access to Google Play Store apps.

### 4.3 App Management

As a GMS Certified device, you can download thousands of applications from the Google Play Store, including popular apps like Netflix, YouTube, and Skype. To install apps, open the Play Store, search for your desired app, and tap 'Install'.

### 4.4 Camera Usage

The tablet features a 2.0 MP front camera and a 2.0 MP rear camera. Open the Camera app to take photos

or record videos. Tap the screen to focus and press the shutter button to capture.

## 4.5 Storage Expansion

The tablet comes with 32GB of internal storage. If more space is needed, you can insert a Micro SD card (up to 512GB, not included) into the dedicated slot to store additional pictures, videos, and files.

## 4.6 Display Features

The 10.1-inch HD IPS display offers a resolution of 1280 x 800 pixels, providing clear images and rich colors. The Eye Health mode filters out blue light to reduce visual fatigue and optimizes backlight for a more comfortable viewing experience.

# 5. Maintenance

---

## 5.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, as these can damage the device.

## 5.2 Software Updates

Periodically check for system updates in the tablet's settings. Keeping your software up-to-date ensures optimal performance, security, and access to new features.

## 5.3 Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to fully charge the tablet before it completely drains. The 6000mAh battery provides up to 8 hours of mixed use.

# 6. Troubleshooting

---

If you encounter issues with your PRITOM TAB10 Tablet, refer to the following common solutions:

- **Device Not Powering On:** Ensure the tablet is sufficiently charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Slow Performance:** Close unused applications, clear cache, or restart the tablet. Consider uninstalling rarely used apps to free up storage.
- **Wi-Fi Connectivity Issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
- **Applications Crashing/Freezing:** Force close the app, clear its cache, or reinstall it. Ensure the tablet's software is up-to-date.
- **Tablet Freezes or Enters Boot Loop:** If the tablet becomes unresponsive or gets stuck during startup, a factory reset might be necessary. *Note: A factory reset will erase all data on the device.* For persistent issues, contact customer support.

For more detailed troubleshooting, consult general Android device support resources online.

# 7. Specifications

---

Feature	Specification
Model Name	M10-TAB10
Operating System	Android 14
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (HD IPS)
Processor	Quad-Core (Allwinner)
RAM	4GB (+2GB Expand)
Internal Storage	32 GB
Expandable Storage	Micro SD card slot (up to 512GB TF Card)
Battery Capacity	6000mAh
Average Battery Life	Up to 8 Hours
Front Camera	2.0 MP
Rear Camera	2.0 MP
Wireless Type	802.11ac, 802.11n
Item Weight	1.79 pounds
Product Dimensions	13 x 8 x 0.4 inches

## 8. Warranty and Support

The PRITOM TAB10 Tablet comes with a 1-year worry-free guarantee. If you experience a quality issue with the tablet, it may be returned for a free replacement.

PRITOM is committed to providing reliable customer service and technical support. If you have any problems or require assistance, please do not hesitate to contact PRITOM customer service for on-time technical support.

For support, please refer to the contact information provided with your product packaging or visit the official PRITOM website.