

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Generico](#) /

› [Generico HUTRADE RC-14 Universal Remote Control for Samsung Smart TV User Manual](#)

### Generico HUTRADE14RC

# Generico HUTRADE RC-14 Universal Remote Control for Samsung Smart TV User Manual

Model: HUTRADE14RC

## 1. INTRODUCTION

This manual provides comprehensive instructions for the Generico HUTRADE RC-14 Universal Remote Control, designed for Samsung Smart TVs. It serves as a direct replacement or an additional remote for a wide range of Samsung Smart TV models, including LCD, LED, QLED, OLED, 4K, 8K, and HDR versions. The HUTRADE RC-14 is engineered for immediate use without complex setup or programming.

Key features include:

- **Universal Compatibility:** Supports a broad spectrum of Samsung Smart TV models, including LCD, LED, QLED, OLED, UHD, HDR, curved, Serif, and Frame series.
- **Plug & Play Functionality:** Ready for use immediately after battery insertion, requiring no configuration.
- **Quick Access Streaming Buttons:** Dedicated buttons for direct access to popular streaming services such as Netflix, Prime Video, Disney+, Samsung TV Plus, and WWW.
- **Original Remote Replacement:** Compatible with various Samsung remote control codes, including BN59-01266A, BN59-01312A, BN59-01329A, BN59-01293A, BN59-01357A, and others.
- **Ergonomic Design:** Features a comfortable grip, intuitive button layout, and durable buttons for a smooth user experience.





Image 1.1: The Generico HUTRADE RC-14 Universal Remote Control. This image displays the sleek black design and the primary button layout, including quick access buttons for streaming services.

## 2. SETUP INSTRUCTIONS

The HUTRADE RC-14 remote control is designed for simplicity and ease of use. No complex pairing or programming is required.

## 2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

**Note: Ensure batteries are inserted correctly. Incorrect insertion can prevent the remote from functioning.**

## 2.2. First Use

Once batteries are installed, the remote control is ready for immediate use with your Samsung Smart TV. Point the remote directly at your TV and begin operating it.

## 3. OPERATING INSTRUCTIONS

---

The HUTRADE RC-14 features an intuitive layout for easy navigation and control of your Samsung Smart TV.

# REMOTE CONTROL FOR SAMSUNG SMART TV

- Universal Compatibility
- Voice Control
- Streaming Service Buttons

**WORKS WITH  
SAMSUNG  
TVs**



Image 3.1: Overview of the Generico HUTRADE RC-14 remote control, highlighting its universal compatibility and streaming service buttons.

### 3.1. Basic Functions

- **Power Button ( )**: Located at the top left. Press to turn your TV on or off.
- **Number Pad (123)**: Accesses the on-screen number pad for direct channel input.
- **Menu/Settings (Ξ)**: Opens the TV's main menu or settings.
- **Directional Pad (Circular)**: Use the up, down, left, and right arrows to navigate menus and select items. The center button acts as "Enter" or "OK".
- **Return/Back (↔)**: Returns to the previous screen or menu.
- **Home (△)**: Takes you to the Smart Hub or home screen of your TV.
- **Play/Pause ( )**: Controls media playback.
- **Volume Up/Down (+/-)**: Adjusts the TV volume.
- **Channel Up/Down ( ^ / v )**: Changes TV channels.

### 3.2. Quick Access Streaming Buttons

The remote includes dedicated buttons for instant access to popular streaming applications:

- **Netflix**: Launches the Netflix application.
- **Prime Video**: Launches the Amazon Prime Video application.
- **Disney+**: Launches the Disney+ application.
- **Samsung TV Plus**: Accesses Samsung's free ad-supported streaming service.
- **WWW**: Opens the TV's web browser.
- **Rakuten TV**: Launches the Rakuten TV application.

**Tip: Ensure your Samsung Smart TV is connected to the internet for streaming services to function correctly.**

## 4. MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

### 4.1. Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray liquids directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

### 4.2. Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

### 4.3. Storage

When not in use for extended periods, remove the batteries to prevent leakage, which can damage the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## 5. TROUBLESHOOTING

If you encounter issues with your HUTRADE RC-14 remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding or intermittent response.	<ul style="list-style-type: none"><li>Low or dead batteries.</li><li>Obstruction between remote and TV.</li><li>Remote not pointed directly at TV's IR receiver.</li><li>Excessive distance from TV.</li></ul>	<ul style="list-style-type: none"><li>Replace both batteries with new AAA batteries.</li><li>Remove any objects blocking the line of sight.</li><li>Ensure the remote is pointed directly at the TV.</li><li>Move closer to the TV (optimal range is typically within 3-4 meters).</li></ul>
Buttons require hard pressing to register.	<ul style="list-style-type: none"><li>Low battery power.</li><li>Dirt or debris under buttons.</li></ul>	<ul style="list-style-type: none"><li>Replace batteries.</li><li>Clean the remote surface and around buttons (refer to Maintenance section).</li></ul>
Streaming service buttons (Netflix, Prime Video, etc.) not working.	<ul style="list-style-type: none"><li>TV not connected to the internet.</li><li>App not installed or updated on TV.</li></ul>	<ul style="list-style-type: none"><li>Ensure your Samsung Smart TV has an active internet connection.</li><li>Check if the respective app is installed and updated on your TV.</li></ul>

## 6. SPECIFICATIONS

Detailed technical specifications for the Generico HUTRADE RC-14 Universal Remote Control:

- Brand:** Generico
- Model:** HUTRADE14RC
- Product Dimensions:** 3.5 x 1.3 x 16 cm (1.38 x 0.51 x 6.3 inches)
- Item Weight:** 40 grams (1.41 ounces)
- Compatible Devices:** Samsung Smart TVs (LCD, LED, QLED, OLED, UHD, HDR, curved, Serif, Frame models)
- Connectivity Technology:** Infrared (IR)
- Number of Buttons:** Approximately 30 (based on visual inspection, specification states 10, but this is likely an error or refers to primary function buttons)
- Special Features:** Compatible, Ergonomic, Lightweight
- Color:** Black
- Power Source:** 2 x AAA Batteries (not included)
- Compatible Samsung Remote Codes:** BN59-01266A, BN59-01312A, BN59-01329A, BN59-01293A, BN59-01357A, and others.

## 7. WARRANTY AND SUPPORT

Information regarding warranty coverage and customer support for the Generico HUTRADE RC-14 Universal Remote Control is not explicitly provided in the product details. For specific warranty terms or support inquiries, please refer to the retailer or manufacturer's official website, or contact their customer service directly.

© 2025 Generico. All rights reserved.