

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Jurassic World](#) /
- › [Jurassic World Rebirth Basic 12-inch Spinosaurus Action Figure User Manual](#)

Jurassic World Core 12"

Jurassic World Rebirth Basic 12-inch Spinosaurus Action Figure User Manual

Brand: Jurassic World | Model: Core 12"

1. INTRODUCTION

This manual provides instructions for the Jurassic World Rebirth Basic 12-inch Spinosaurus Action Figure. This figure is designed for imaginative play and display, featuring authentic design and movable joints. It is inspired by the Jurassic World Rebirth series. Recommended for ages 4 years and up.



A detailed view of the Jurassic World Rebirth Basic 12-inch Spinosaurus action figure, showcasing its grey-brown body, distinctive sail with yellow stripes, and long snout.

2. SETUP

2.1 Unboxing

Carefully remove the Spinosaurus action figure from its packaging. Inspect the figure for any damage that may have occurred during transit.

2.2 Initial Inspection

Verify that all parts of the figure are intact. The figure features movable joints for posing. Ensure these joints move freely without excessive resistance.



The Jurassic World Rebirth Basic 12-inch Spinosaurus action figure displayed next to its retail packaging, which features Jurassic World Rebirth branding and a clear window showing the figure.

3. OPERATING

The Spinosaurus action figure is designed for interactive play. Its movable joints allow for various poses and dynamic action scenes. Gently articulate the limbs and head to position the figure as desired. Avoid applying excessive force to prevent damage to the joints.

This figure is suitable for both indoor and outdoor play environments.

4. MAINTENANCE

4.1 Cleaning

To clean the figure, wipe it with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the paint or material of the figure.

4.2 Storage

Store the figure in a cool, dry place away from direct sunlight and extreme temperatures to preserve its condition and prevent material degradation.

5. TROUBLESHOOTING

- **Stiff Joints:** If the figure's joints feel stiff, gently move them back and forth to loosen them. Do not force movement, as this could cause breakage.
- **Minor Scratches/Marks:** Small surface marks can sometimes be gently wiped away with a damp cloth. For deeper scratches, no repair is typically recommended to maintain the figure's original integrity.
- **General Care:** This action figure is a toy and should be handled with care. Avoid dropping it or exposing it to impacts that could cause breakage.

6. SPECIFICATIONS

Model	Core 12"
Brand	Jurassic World
Manufacturer	Mattel
Item Weight	7.4 ounces
Dimensions	Approximately 12 inches long and 6 inches tall
Recommended Age	4 years and up

7. WARRANTY

Warranty information for this product is not provided in the available documentation. Please refer to the manufacturer's official website or contact their customer service for details regarding potential warranty coverage.

8. SUPPORT

For further assistance or inquiries regarding the Jurassic World Rebirth Basic 12-inch Spinosaurus Action Figure, please visit the official [Jurassic World website](#) or contact Mattel customer support directly.

© 2025 Jurassic World / Mattel. All rights reserved.