

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Comfort Direct](#) /
- › [Comfort Direct RH787T / TR29 Fan Remote Control Instruction Manual](#)

## Comfort Direct CD787T

# Comfort Direct RH787T / TR29 Fan Remote Control Instruction Manual

Model: CD787T

## INTRODUCTION

---

This manual provides detailed instructions for the installation, programming, operation, and maintenance of your Comfort Direct RH787T / TR29 Fan Remote Control. Please read this manual thoroughly before use to ensure proper function and safety.

## PACKAGE CONTENTS

---

- RH787T / TR29 Remote Control
- Wall Mount Bracket
- One 23A/12V Battery
- Mounting Screws (if applicable)



Image: Package contents including the remote, battery, screws, and wall mount.

## SETUP AND PROGRAMMING

### Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert the included 23A/12V battery, ensuring correct polarity (+/-).
3. Close the battery compartment cover.

### Programming Your Remote

Follow these steps to program your remote control to your DC ceiling fan:

1. Turn off power to the fan, either using an on/off switch on the wall or at the circuit breaker.
2. Set the dip switches located in the battery compartment of your remote control to the desired setting. Ensure the 23A/12V battery is installed.
3. Restore power to your fan. Within 1 minute of restoring power, press and hold the [SET] button in the battery compartment for approximately 5 seconds.
4. The fan light will blink twice, indicating that your fan is now synced to your remote control.

# IMPORTANT

## Programming Your Remote

1. Turn power off to the fan, either with an on/off switch on the wall or at the breaker.
2. Set the dip switches in the battery compartment of your remote control to the desired setting. Install 23A/12V battery.
3. Restore power to your fan. Within 1 minute of restoring power, press and hold the [SET] button in the battery compartment for ~5 seconds.
4. The light will blink twice and now your fan should be synced to your remote control.



Image: Programming steps for the remote control, highlighting the dip switches and SET button.



Image: Back of the remote control with dip switches and SET button visible.

## OPERATING INSTRUCTIONS

---

The remote control features buttons for fan speed, light control, and timer functions.

- **Fan Speed:** Buttons labeled LOW, MED, HI control the fan speed. The STOP button turns the fan off.
- **Light Control:** The LIGHT ON/OFF button toggles the light. Press and hold to dim or brighten the light.
- **Timer Function:** Buttons labeled 1H, 2H, 4H, 8H allow you to set the fan to turn off automatically after the selected duration.

## TROUBLESHOOTING

---

If you experience issues with your remote control, refer to the following guide:

# Troubleshooting Your Remote Control

## Bad Remote Control Symptoms

1. Red indicator light does not illuminate when buttons are pressed.
2. Red indicator light illuminates when no buttons are pressed.
3. Red indicator light stays illuminated at all times.

Replace remote control if you experience any of these symptoms.

## Good Remote Control Symptoms

1. Red indicator light only illuminates when buttons are pressed.
2. Red indicator light stays illuminated when you PRESS and HOLD buttons.

**DO NOT** Replace remote control if you experience these symptoms. You have a different problem with your fan.

Red Indicator Light

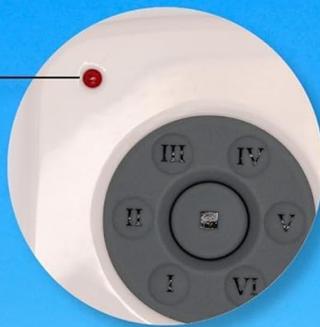


Image: Troubleshooting symptoms for the remote control's red indicator light.

## Red Indicator Light Symptoms:

Bad Remote Control Symptoms	Good Remote Control Symptoms
1. Red indicator light does not illuminate when buttons are pressed.	1. Red indicator light only illuminates when buttons are pressed.
2. Red indicator light illuminates when no buttons are pressed.	
3. Red indicator light stays illuminated at all times.	2. Red indicator light stays illuminated when you PRESS and HOLD buttons.
<b>Action: Replace remote control if you experience any of these symptoms.</b>	<b>Action: DO NOT</b> replace remote control if you experience these symptoms. You have a different problem with your fan.

## MAINTENANCE

- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Replace the 23A/12V battery when the remote's performance degrades or the indicator light behaves abnormally.
- Store the remote in a dry place, away from extreme temperatures and direct sunlight.

## SPECIFICATIONS

<b>Brand</b>	Comfort Direct
<b>Model Name</b>	CD787T (RH787T / TR29 Compatible)
<b>Color</b>	White
<b>Power Source</b>	Battery Powered (1 x 23A/12V battery included)
<b>Control Method</b>	Remote, Touch (buttons)
<b>Special Feature</b>	Radiofrequency
<b>Number of Power Levels</b>	3 (Low, Medium, High)
<b>Indoor/Outdoor Usage</b>	Indoor
<b>Item Weight</b>	3.87 ounces
<b>Package Dimensions</b>	5.59 x 3.19 x 1.69 inches

## WARRANTY AND SUPPORT

This product comes with a **1 Year Manufacturer Warranty**. For warranty claims or technical support, please contact Comfort Direct customer service.

For additional information or support, please visit the [product page on Amazon](#).