

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Motorola](#) /

> [Motorola Moto G Play \(2024\) XT2413V 64GB Storage 4GB RAM 6.5" HD+ Display 16MP Camera Android 13 Locked to Tracfone Blue \(Renewed\)](#)

Motorola Moto G Play (2024)

Motorola Moto G Play (2024) XT2413V User Manual

Model: Moto G Play (2024) | Brand: Motorola

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Motorola Moto G Play (2024) XT2413V smartphone. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize its features.



Image: Front and rear view of the Motorola Moto G Play (2024) XT2413V smartphone. The device is blue, showcasing its display with a digital clock and date, and the dual camera setup on the back with a 50MP main sensor.

WHAT'S IN THE BOX

- Motorola Moto G Play (2024) XT2413V Handset
- Charger
- USB Type-C Cable
- User Guide (this document)

SETUP

1. Charging the Battery

Before first use, fully charge your device. Connect the USB Type-C cable to the phone's charging port and the other end to the provided charger. Plug the charger into a power outlet. The battery indicator on the screen will show charging progress. A full charge may take several hours.

2. Inserting SIM Card and microSD Card (Optional)

Locate the SIM tray on the side of your phone. Use the SIM ejector tool (not included, but typically comes with new phones) to open the tray. Carefully place your Tracfone Nano-SIM card into the designated slot. If you wish to expand storage, insert a microSD card into its slot. Ensure the tray is inserted correctly and securely.

3. Initial Power On and Setup Wizard

Press and hold the power button until the Motorola logo appears. Follow the on-screen instructions to complete the initial setup. This includes selecting your language, connecting to a Wi-Fi network, signing in with your Google account, and setting up security features like fingerprint or PIN.

OPERATING YOUR DEVICE

Basic Navigation

- **Power Button:** Press to turn the screen on/off. Press and hold to power on/off or restart.
- **Volume Buttons:** Adjust media volume, call volume, or notification volume.
- **Touchscreen Gestures:** Tap to select, swipe to scroll, pinch to zoom.

Making Calls and Sending Messages

Open the **Phone** app to dial numbers or select contacts. Use the **Messages** app to send and receive SMS/MMS messages. Ensure your Tracfone service is active for cellular communication.

Camera Usage

The Moto G Play (2024) features a 16MP main camera. Open the **Camera** app to capture photos and videos. Tap the shutter button to take a picture. Swipe to switch between photo, video, and other modes.

Connecting to Wi-Fi and Bluetooth

Access **Settings** > **Network & internet** to manage Wi-Fi connections. For Bluetooth devices, go to **Settings** > **Connected devices**.

MAINTENANCE

- **Software Updates:** Regularly check for and install system updates via **Settings** > **System** > **System update** to ensure optimal performance and security.
- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for daily use.
- **Storage Management:** Periodically clear cache, delete unnecessary files, and uninstall unused apps to free up storage space. Go to **Settings** > **Storage**.

TROUBLESHOOTING

Problem	Solution
Device not turning on	Ensure the battery is charged. Connect to charger for at least 15 minutes, then try powering on.
Apps crashing or freezing	Restart the device. Clear app cache (Settings > Apps > select app > Storage & cache > Clear cache).
Poor Wi-Fi connection	Restart your Wi-Fi router. Forget and reconnect to the network on your phone Settings > Network & internet > Internet).
Battery draining quickly	Reduce screen brightness, disable unused features (Bluetooth, GPS), close background apps. Check battery usage in Settings > Battery .

SPECIFICATIONS

Feature	Detail
Model Name	Moto G Play (2024) XT2413V
Operating System	Android 13
Display	6.5" HD+
Processor	MediaTek Helio P60T (2.2 GHz)
RAM	4 GB
Internal Storage	64 GB
Main Camera	16 MP
Battery Capacity	5000 mAh
Wireless Carrier	Tracfone
Color	Blue
Dimensions (L x W x H)	7 x 3 x 0.3 inches
Item Weight	3.2 ounces

WARRANTY AND SUPPORT

As a renewed device, this Motorola Moto G Play (2024) XT2413V is typically covered by a limited warranty provided by the seller or Amazon Renewed. Please refer to your purchase documentation or contact the seller, [Tehrific Deals](#), for specific warranty terms and conditions. For technical support related to the device's operation or software, you may visit the official Motorola support website or contact Tracfone customer service for carrier-specific inquiries.

For further assistance, you can visit the [Amazon Renewed Store](#) or contact the seller [Tehrific Deals](#) directly.

