



[Manuals.plus](#) /

› [FLANUR](#) /

› FLANUR Space Heater SH26 User Manual

FLANUR SH26

FLANUR Space Heater SH26 User Manual

Model: SH26 | Brand: FLANUR

1. INTRODUCTION

Thank you for choosing the FLANUR Space Heater SH26. This compact and efficient 1500W electric space heater is designed for indoor use, providing warmth and comfort to your bedroom, home office, or living room. Equipped with advanced safety features, multiple heating modes, and convenient controls, this manual will guide you through its proper setup, operation, and maintenance to ensure optimal performance and safety.



Figure 1: FLANUR Space Heater SH26 and Remote Control

2. IMPORTANT SAFETY INFORMATION

Your safety is paramount. Please read and adhere to all safety instructions before operating the heater.

- **Placement:** Always place the heater on a firm, level, and sturdy surface to prevent accidental tipping.
- **Overheat Protection:** The heater is equipped with an internal sensor that automatically shuts off the unit if it detects overheating.
- **Tip-Over Protection:** An integrated safety switch automatically turns off the heater if it is accidentally knocked over. The unit will remain off even if placed upright until manually reset.
- **24-Hour Auto Shut-Off:** For added safety, the heater will automatically power down after 24 hours of continuous operation.
- **Residual Heat Dissipation:** After the LED display turns off, a 30-second residual heat dissipation program runs to cool down the unit safely.
- **Flame Retardant Materials:** Constructed with flame-retardant materials for enhanced safety.
- **Enhanced Safety Plug:** Features a robust safety plug designed to prevent electrical hazards.

- **Do Not Cover:** Never cover the heater, as this can lead to overheating and fire hazards. Ensure adequate clearance around the unit.



Figure 2: Safety Protection Features (Tip-Over and Overheat)



Figure 3: Overheat Protection and Enhanced Safety Plug

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your FLANUR Space Heater.

3.1 Package Contents

- FLANUR Space Heater SH26
- Remote Control
- User Manual (this document)

3.2 Control Panel and Display



Figure 4: Top Control Panel



Figure 5: LED Display Indicators

The LED display shows the current temperature, selected mode (High, Low, ECO, Cool Air), and timer settings. The touch buttons on the top panel allow for direct control of all functions.

3.3 Remote Control



Figure 6: Remote Control

The multifunctional remote control provides convenient access to all heater settings from a distance, including power, temperature, timer, oscillation, and quiet function.

4. SETUP

1. **Unboxing:** Carefully remove the heater and all accessories from the packaging. Retain packaging for future storage or transport.

2. **Placement:** Place the heater on a stable, flat, and heat-resistant surface. Ensure there is at least 3 feet (0.9 meters) of clearance from walls, furniture, and other objects to allow for proper airflow and prevent fire hazards.
3. **Power Connection:** Plug the heater directly into a 120V AC, 60Hz grounded wall outlet. Do not use extension cords or power strips.

Video 1: FLANUR Portable Electric Space Heater - Unboxing and Initial Setup. This video demonstrates the unboxing process and initial placement of the heater.

5. OPERATING INSTRUCTIONS

The FLANUR Space Heater offers various modes and settings for personalized comfort.

5.1 Power On/Off

- Press the **Power button** (🔌) on the control panel or remote control to turn the heater on or off.
- The heater will automatically resume the last used settings (memory function).


5.2 Heat Modes

Press the **Mode button** (🔌) to cycle through the following modes:

- **High Heat (1500W):** Provides maximum heating power for rapid warming.
- **Low Heat (900W):** Offers moderate heating for sustained warmth.
- **ECO Mode:** Automatically adjusts power output (between 41-95°F / 5-35°C) based on the ambient temperature to maintain your desired setting, optimizing energy efficiency.
- **Cool Air:** Operates as a fan without heat, suitable for air circulation.

Constant Temperature

1500w

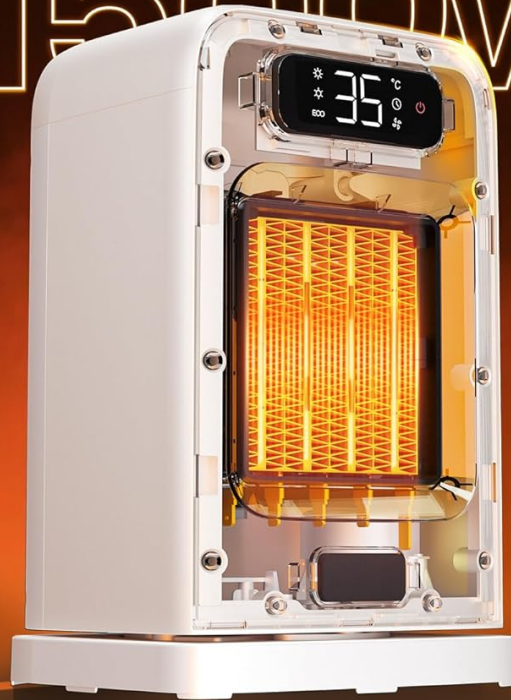

1500w
PTC Ceramic

≤ 20m²
Heating Area

5°C + 35°C
Heating Area

Figure 7: 1500W PTC Ceramic Heating

5.3 Temperature Adjustment

In ECO mode, use the + and - buttons on the control panel or remote to set your desired temperature between 41°F and 95°F (5°C and 35°C).

5.4 Oscillation

Press the **Oscillation button** (📏) on the control panel or remote to activate the 70° wide-angle oscillation feature, distributing warm air evenly across a wider area.

70° Oscillation

Wide Oscillation Brings Warmth all Around

 


Figure 8: 70° Wide Angle Oscillation

5.5 Timer Function

Press the **Timer button** (🕒) on the control panel or remote to set an automatic shut-off timer from 1 to 12 hours. Each press increases the timer by one hour.



Figure 9: 1-12 Hour Timer Function

5.6 Quiet Function

The heater operates at an ultra-quiet level (below 35 decibels), ensuring minimal disturbance during sleep or work. This feature is inherent to its design.



Figure 10: Ultra-Quiet Operation (Below 35dB)

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your heater.

- **Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior. Do not use abrasive cleaners or allow water to drip into the interior.
- **Storage:** When not in use, store the heater in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common solutions:

- **Heater does not turn on:**
 - Ensure the power cord is securely plugged into a working outlet.
 - Check if the tip-over switch on the bottom of the unit is fully depressed (heater must be on a flat surface).
 - Verify that the overheat protection has not been activated. Unplug the unit, wait 30 minutes, and plug it back in.
 - Confirm the power button is pressed on the unit or remote.
- **Heater turns off unexpectedly:**
 - The tip-over protection may have been activated. Ensure the heater is on a stable surface.
 - The overheat protection may have been triggered. Unplug, wait, and restart.
 - The 24-hour auto shut-off timer may have expired.
 - In ECO mode, the heater will turn off once the set temperature is reached. It will restart when the room temperature drops.
- **No heat output in heating modes:**
 - Ensure the correct heating mode (High, Low, or ECO with appropriate temperature setting) is selected.

8. SPECIFICATIONS

Feature	Specification
Brand	FLANUR
Model Number	SH26
Special Feature	Oscillating
Color	White (as per current product variant)
Form Factor	Cabinet
Heating Method	Forced Air
Product Dimensions	7.44"D x 6.93"W x 11.42"H
Room Type	Bedroom, Home Office, Living Room
Fuel Type	Electric
Min Temperature Setting	5 Degrees Celsius (41°F)
Max Temperature Setting	35 Degrees Celsius (95°F)
Item Weight	3.65 pounds

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official FLANUR website. Keep your purchase receipt as proof of purchase for warranty claims.