

[manuals.plus](#) /

› [ScYWdLi](#) /

› [ScYWdLi F4V3S Plus F4 V3 V3S Flight Controller Board BMP280 with M8N PDB User Manual](#)

ScYWdLi F4V3S Plus M8N PDB

ScYWdLi F4V3S Plus Flight Controller Board User Manual

Model: F4V3S Plus M8N PDB

1. INTRODUCTION

This manual provides detailed instructions for the installation, setup, operation, and maintenance of the ScYWdLi F4V3S Plus Flight Controller Board with BMP280 and M8N PDB. This flight controller is designed for FPV drones and other multirotor applications, offering robust performance and versatile connectivity.

2. SAFETY INFORMATION

Always observe the following safety precautions when working with electronic components, especially those used in unmanned aerial vehicles:

- Ensure all power sources are disconnected before making any connections or performing maintenance.
- Double-check all wiring connections for correct polarity and secure fit to prevent damage to components.
- Avoid short circuits. Use appropriate insulation and heat shrink tubing where necessary.
- Handle the flight controller with care to prevent electrostatic discharge (ESD) damage.
- Keep the flight controller away from moisture, extreme temperatures, and direct sunlight.
- Seek professional assistance if you are unsure about any installation or configuration steps.

3. PRODUCT OVERVIEW

The ScYWdLi F4V3S Plus Flight Controller is a high-performance board featuring an F4 processor and an integrated BMP280 barometer for accurate altitude hold. This variant includes an M8N GPS module and a

Power Distribution Board (PDB) for a complete stack solution.

Key Features:

- **Compatibility:** Works with most FPV drone setups, supporting standard receiver and ESC connections.
- **Stabilization:** Integrated BMP280 barometer provides consistent altitude hold for steady flights.
- **Durability:** Robust PCB design withstands vibrations and impacts during aggressive maneuvers.
- **Connectivity:** Multiple UART ports and solder pads allow flexible wiring configurations.
- **Performance:** F4 processor delivers responsive handling for racing and freestyle maneuvers.

Components Included:

- F4V3S Plus Flight Controller Board
- M8N GPS Module with QMC5883 Compass
- Power Distribution Board (PDB)
- Connecting cables and mounting hardware

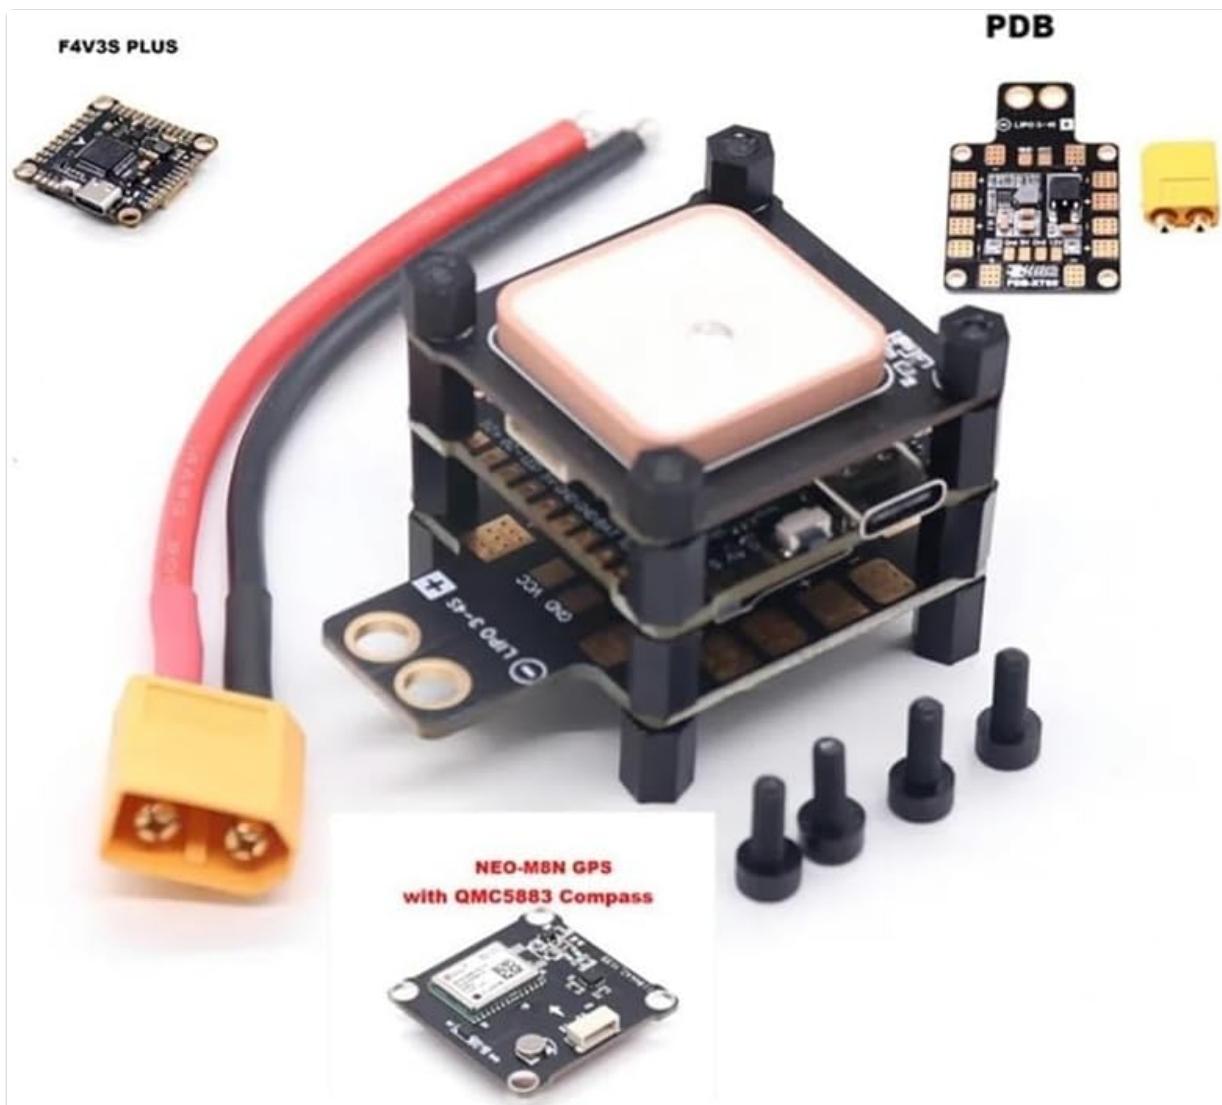


Figure 3.1: Overview of the ScYWdLi F4V3S Plus Flight Controller kit, including the F4V3S Plus board, M8N GPS module, PDB, and connecting wires.

F4V3S PLUS

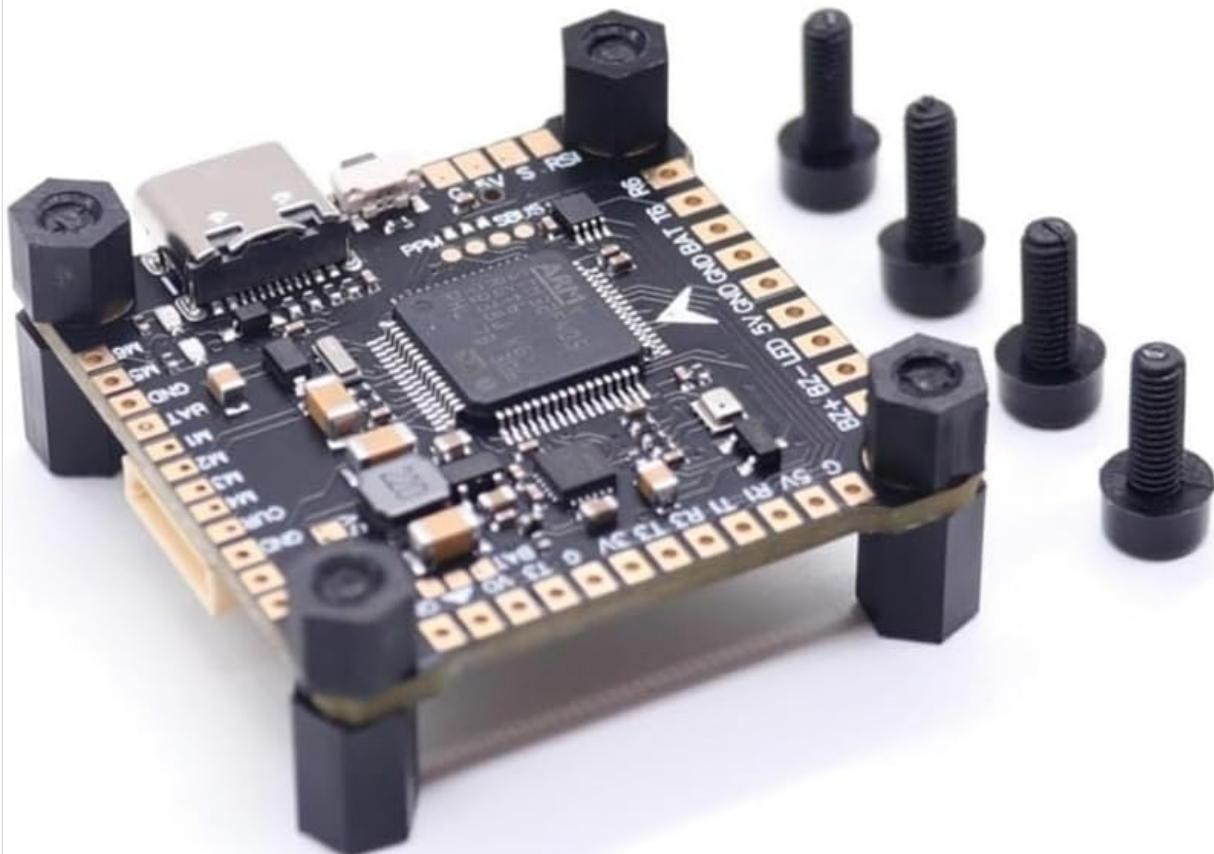


Figure 3.2: Detailed view of the F4V3S Plus Flight Controller board, showing the main processor, USB-C port, and various solder pads.

4. SETUP

4.1 Physical Installation

The F4V3S Plus Flight Controller board has a standard 30.5x30.5mm mounting hole pattern, allowing it to be easily integrated into most FPV drone frames. Ensure proper spacing and vibration dampening using the provided standoffs and grommets.

1. Mount the PDB at the bottom of your stack, securing it to the frame.
2. Mount the F4V3S Plus Flight Controller board on top of the PDB using the provided standoffs.
3. Mount the M8N GPS module on the top plate of your drone or in a location with a clear sky view, away from interference.

4.2 Wiring Diagram

Refer to the following diagram for connecting your F4V3S Plus Flight Controller to various peripherals such as ESCs, receiver, GPS, VTX, and camera. Pay close attention to voltage requirements and pin assignments.

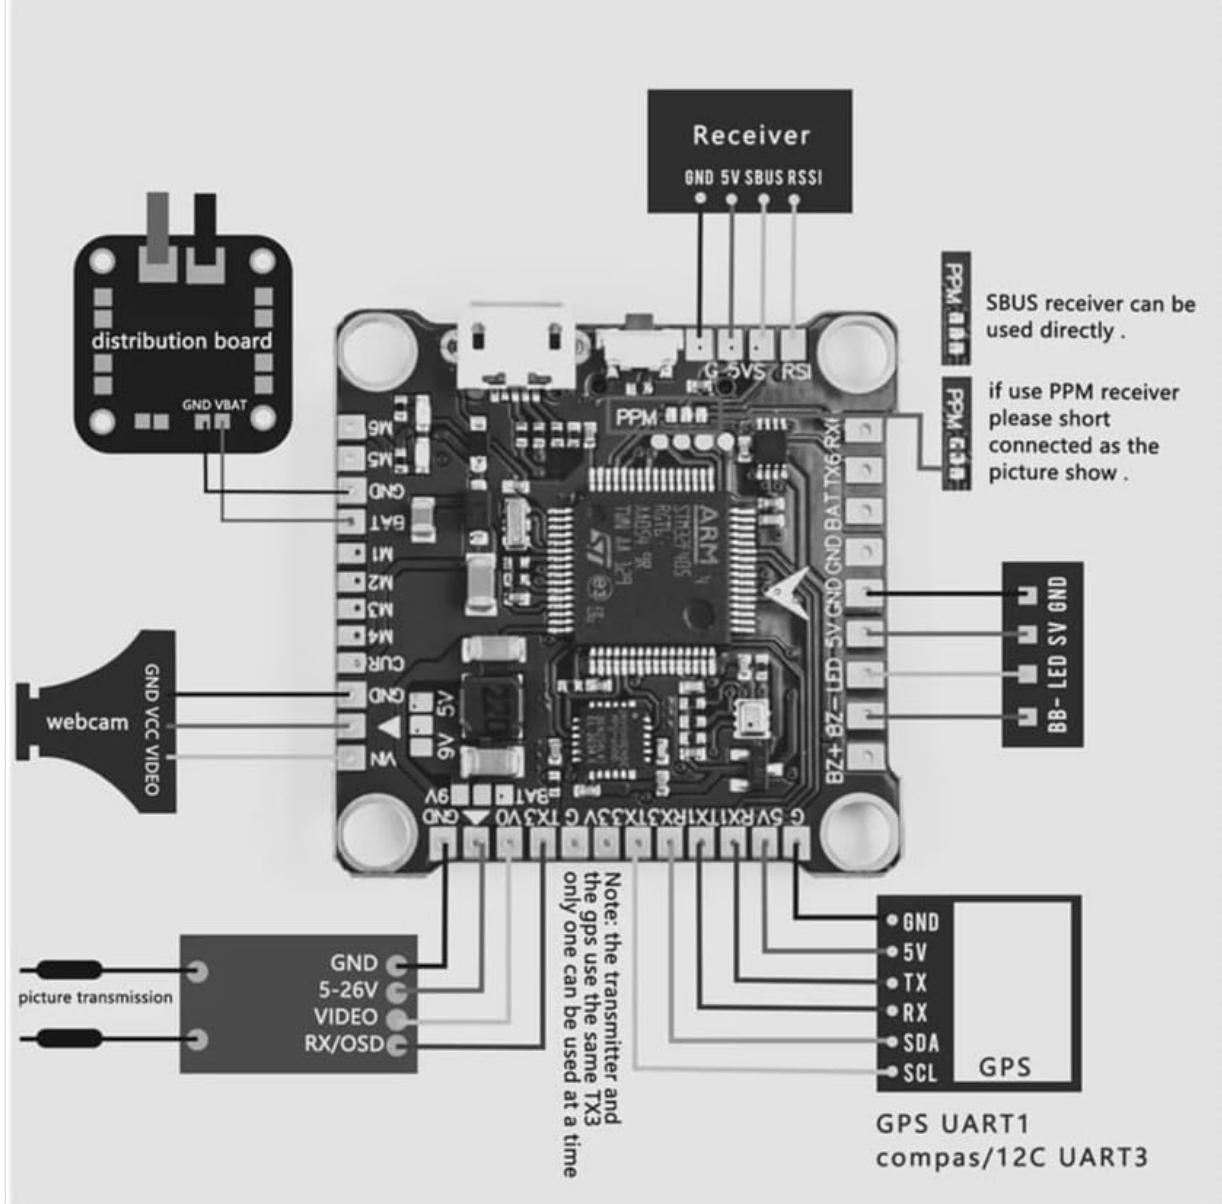


Figure 4.1: Comprehensive wiring diagram for the F4V3S Plus Flight Controller, showing connections for receiver (SBUS/PPM), ESCs, GPS, VTX, camera, and power distribution. Note that the transmitter and receiver (RX/OSD) can only be used one at a time.

- **Power (VBAT):** Connect your main battery voltage to the VBAT pads on the PDB. The PDB will provide regulated 5V and 9V outputs.
- **ESCs:** Connect the signal wires from your Electronic Speed Controllers (ESCs) to the M1-M6 pads on the flight controller. Connect ESC ground to FC ground.
- **Receiver:**
 - For SBUS receivers, connect the SBUS signal wire to the SBUS pad.
 - For PPM receivers, short the PPM pad as indicated in the diagram and connect the PPM signal wire.
 - Connect receiver 5V and GND to the corresponding 5V and GND pads.
- **GPS (M8N):** Connect the GPS module to UART1 (TX1/RX1) for data and I2C (SDA/SCL) for the compass. Ensure 5V and GND connections are correct.
- **Video Transmitter (VTX):** Connect VTX video input to the Video Out pad, and VTX power (5-26V) and ground to the PDB.
- **Camera:** Connect camera video output to the Video In pad, and camera power (5V) and ground to the

FC.

- **LED Strip:** Connect LED strips to the LED pad and 5V/GND.

4.3 Firmware Flashing

The F4V3S Plus Flight Controller comes pre-flashed with **OMNIBUSF4SD(AIRB)** firmware. If you need to update or re-flash the firmware:

1. Download the latest Betaflight Configurator or INAV Configurator software.
2. Connect the flight controller to your computer using a USB Type-C cable.
3. In the configurator, select the correct target (OMNIBUSF4SD) and flash the desired firmware version.
4. Follow the on-screen instructions for DFU mode if necessary.

4.4 Software Configuration

After flashing, configure the flight controller using Betaflight or INAV Configurator:

1. Connect to the flight controller via USB.
2. Perform initial setup, including accelerometer calibration.
3. Configure UARTs for your receiver, GPS, VTX telemetry, etc., according to your wiring.
4. Set up your receiver protocol (e.g., SBUS, Crossfire, ELRS).
5. Configure ESC protocol (e.g., DShot600).
6. Set up modes (Arm, Angle, Acro, GPS Rescue, etc.).
7. Verify motor direction and propeller installation.

5. OPERATING

Once the flight controller is fully installed and configured, you can proceed with operation. Always ensure a safe environment for flight.

1. **Pre-Flight Check:** Before each flight, verify all connections are secure, propellers are correctly installed, and battery is fully charged.
2. **Arming:** Arm the drone using the configured switch on your remote controller. Ensure the drone is on a level surface for accurate accelerometer calibration at startup.
3. **Flight Modes:** Utilize the configured flight modes (e.g., Angle, Acro, GPS Hold) as appropriate for your flying style and conditions.
4. **GPS Functionality:** For GPS-dependent modes, wait for a sufficient number of satellites to be acquired before arming. The M8N GPS module provides reliable positioning.
5. **Disarming:** Disarm the drone immediately after landing or in an emergency situation.

6. MAINTENANCE

Regular maintenance helps ensure the longevity and reliable performance of your flight controller.

1. **Cleaning:** Periodically inspect the board for dust, dirt, or debris. Use a soft brush or compressed air to gently clean the components. Avoid using liquids.
2. **Connection Check:** Regularly inspect all solder joints and connectors for signs of wear, corrosion, or loose connections. Re-solder or replace as needed.

3. **Firmware Updates:** Keep your flight controller firmware updated to benefit from new features, bug fixes, and performance improvements. Always back up your configuration before updating.
4. **Physical Inspection:** Check for any physical damage to the PCB, components, or mounting hardware after crashes or hard landings.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Flight controller not powering on	Incorrect power connection, short circuit, damaged board.	Check VBAT and GND connections. Inspect for shorts. Test with a known good power source.
No connection to Betaflight/INAV Configurator	Incorrect USB driver, faulty USB cable, FC not in DFU mode.	Install Zadig for correct DFU drivers. Try a different USB cable. Manually put FC into DFU mode (bootloader button).
Motors not spinning or erratic behavior	Incorrect ESC wiring, wrong motor direction, ESC protocol mismatch, calibration issues.	Verify ESC signal and ground connections. Check motor direction in configurator. Ensure ESC protocol (e.g., DShot) is set correctly. Calibrate ESCs if necessary.
No GPS lock or inaccurate position	Poor satellite visibility, incorrect UART/GPS settings, interference.	Ensure clear sky view. Verify GPS UART and protocol settings in configurator. Move GPS away from noisy components (VTX, ESCs).

8. SPECIFICATIONS

Feature	Specification
Item Name	F4V3S PLUS Flight Controller
Firmware	OMNIBUSF4SD(AIRB)
USB Port	TYPE-C
Size	36x36mm
Mounting Holes	30.5x30.5mm
Barometer	BMP280
GPS Module	M8N with QMC5883 Compass
Item Weight	1.76 ounces (approx. 50g for the package)

Feature	Specification
Manufacturer	ScYWdLi
Item Model Number	ScYWdLi190101

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Please refer to the manufacturer's official website or your point of purchase for specific warranty terms and conditions. Typically, electronic components like flight controllers come with a limited warranty covering manufacturing defects.

9.2 Technical Support

For technical assistance, firmware updates, or further inquiries, please visit the ScYWdLi official website or contact their customer support channels. Online communities and forums dedicated to FPV drones can also be valuable resources for troubleshooting and configuration advice.