

[Manuals.plus](#) /

> [Pinmoco](#) /

> Pinmoco TV Stand User Manual

Pinmoco G700412K-RST

Pinmoco TV Stand User Manual

Model: G700412K-RST

1. INTRODUCTION

Welcome to your new Pinmoco TV Stand. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your entertainment center. Please read it thoroughly before beginning assembly.



Image: The Pinmoco TV Stand in white, featuring an open-shelf design with a metal frame and wooden top.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Do not exceed the maximum weight capacity for each shelf. (Refer to specifications for details).
- Ensure all screws and fasteners are securely tightened before use.
- Place the TV stand on a flat, stable, and level surface.
- Keep small parts away from children during assembly.
- Avoid placing hot items directly on the surface without protection.

3. PRODUCT DIMENSIONS AND WEIGHT CAPACITY

Understanding the dimensions and weight limits of your TV stand is crucial for safe and proper use. This stand is designed to accommodate TVs up to 47 inches.



Image: A detailed diagram illustrating the product dimensions (47.25 inches / 120 cm length, 22.1 inches / 56 cm height, 16.34 inches / 41.5 cm depth) and individual shelf weight capacities (100 lbs for top, 30 lbs for lower shelves).

- Overall Dimensions (L x W x H): 47 x 12 x 22 inches (120 x 30.5 x 56 cm)
- Top Shelf Weight Capacity: Up to 100 lbs (45 kg)

- Lower Shelf Weight Capacity: Up to 30 lbs (13.6 kg) per shelf
- Suitable for TVs up to 47 inches.

4. ASSEMBLY INSTRUCTIONS

Assembly of your Pinmoco TV Stand is designed to be straightforward. Please follow these steps carefully. It is recommended to have two people for assembly.

1. Unpack all components and verify against the parts list (not provided in this manual, refer to included packaging).
2. Identify all metal frame pieces and wooden panels.
3. Attach the side frames to the main support beams using the provided screws. Do not overtighten initially.
4. Insert the mesh shelves into their designated slots, ensuring they are level.
5. Secure the top wooden panel to the assembled frame.
6. Attach the four handy hooks to the designated points on the side frames.
7. Once all components are in place, tighten all screws securely.
8. Place the stand in its desired location, ensuring it is stable.

5. OPERATING AND USAGE GUIDELINES

Your Pinmoco TV Stand is designed for optimal organization and airflow for your entertainment devices.

- **Open Design for Airflow:** The open-shelf design prevents electronics from overheating and allows for easy access to cables.
- **Spacious Storage:** Utilize the 2 large open mesh shelves and 4 handy hooks to neatly organize your TV, game consoles (Xbox, PS), media players, DVDs, and other accessories.
- **Cable Management:** Route cables through the open back of the shelves to maintain a tidy appearance and prevent tangles.
- **Versatile Use:** While ideal for TVs, this stand can also serve as a stylish storage solution for living rooms, bedrooms, offices, or other areas requiring organized shelving.



Image: The Pinmoco TV Stand in a living room setting, showcasing its use with a television, gaming console, media players, and decorative items, highlighting the open storage and cable management.

6. MAINTENANCE AND CARE

To ensure the longevity and appearance of your TV stand, follow these simple care instructions:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the shelves and frame to prevent buildup.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the wood particleboard.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or warping.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly/unstable.	Screws are loose; uneven floor.	Ensure all screws are fully tightened. Move to a level surface or use shims under legs.
Parts do not fit together.	Incorrect orientation of parts; manufacturing defect.	Review assembly instructions carefully. Contact customer support if parts are damaged or incorrect.
Scratches on surface.	Rough handling; abrasive cleaning.	Use furniture polish or touch-up pen for minor scratches. Always use soft cloths for cleaning.

8. SPECIFICATIONS

Brand: Pinmoco

Model Number: G700412K-RST

Material: Wood (Particleboard) and Metal

Color: White

Product Dimensions (L x W x H): 47 x 12 x 22 inches (120 x 30.5 x 56 cm)

Item Weight: 18.5 pounds (8.4 kg)

Maximum TV Size: Up to 47 inches

Special Feature: Open Storage Shelves, Soundbar Shelf, 4 Handy Hooks

GTIN (UPC): 00810187172892

9. WARRANTY AND SUPPORT

Pinmoco stands behind the quality of its products. For warranty information, missing parts, or technical support, please contact Pinmoco customer service directly. Please have your model number (G700412K-RST) and purchase details ready.

For further assistance, visit the official Pinmoco store on Amazon: [Pinmoco Store](#)