

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Devoko](#) /

› [Devoko 50 Cu.ft Outdoor Vertical Resin Storage Shed Instruction Manual DV250811](#)

Devoko DV250811

Devoko 50 Cu.ft Outdoor Vertical Resin Storage Shed Instruction Manual

Model: DV250811

INTRODUCTION

Thank you for choosing the Devoko 50 Cu.ft Outdoor Vertical Resin Storage Shed. This manual provides essential information for the safe assembly, operation, and maintenance of your new storage cabinet. Designed for durability and convenience, this shed offers a spacious solution for organizing your outdoor and indoor items. Please read this manual thoroughly before assembly and retain it for future reference.



Image: The Devoko 50 Cu.ft Outdoor Vertical Resin Storage Shed in its closed state, showcasing its design.

IMPORTANT SAFETY INFORMATION

Always follow these safety guidelines to prevent injury or damage to the product.

- **Assembly Safety:** Assembly involves handling heavy components. Ensure you have adequate assistance and use proper lifting techniques to avoid strain or injury.
- **Secure Placement:** The storage shed must be placed on a stable, level surface to ensure proper function and prevent tipping.
- **Locking Mechanisms:** Always ensure the dual-locking system (foot pedal release and top magnetic latch) is engaged when the shed is not in use to secure contents and prevent accidental opening.
- **Weight Limits:** Do not exceed the recommended weight capacity for the shed or any installed shelves (sold separately). Overloading can compromise structural integrity.
- **Children and Pets:** Keep children and pets away from the assembly area. Do not allow children to play inside or around the shed to prevent entrapment or injury.
- **Ventilation:** While the shed is designed for outdoor storage, ensure adequate ventilation if storing items that may emit fumes.

SETUP AND ASSEMBLY

Assembly is required for this storage cabinet. It is recommended to have at least two people for assembly. Ensure all parts are present before beginning.

Before You Begin:

- **Unpack:** Carefully unpack all components and verify against the parts list (not provided in this manual, refer to packaging).
- **Tools Required:** Basic hand tools (e.g., screwdriver, hammer) may be necessary.
- **Location:** Choose a flat, level, and stable surface for installation. The reinforced base with stabilizing pins helps prevent shifting, but a solid foundation is crucial.


Assembly Steps (General Guidance):

1. **Base Assembly:** Assemble the base frame according to the manufacturer's instructions. Ensure all stabilizing pins are securely in place.
2. **Side Panels:** Attach the side panels to the base. The double-layer panels are designed for strength.
3. **Back Panel:** Secure the back panel to the side panels and base.
4. **Roof Installation:** Carefully place and secure the roof panel.
5. **Door Installation:** Attach the doors, ensuring they swing freely and align correctly. Install the handles and verify the dual-locking system (foot pedal and magnetic latch) functions properly.
6. **Optional Shelves:** If using shelves (sold separately), install them into the designated slots inside the cabinet.



Image: The storage shed with its doors open, demonstrating its spacious interior and potential for organizing various items.

ORGANIZE YOUR GARDEN TOOLS IN AN ORDERLY MANNER.

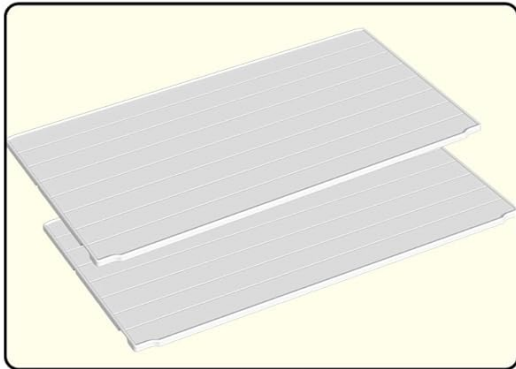

**ADDITIONAL SHELVES
ARE SOLD SEPARATELY**



Image: Interior view of the storage shed showing how garden tools can be organized. Note that additional shelves are sold separately.

OPERATING INSTRUCTIONS

Opening the Shed:

- To open the doors, gently press the foot pedal release located at the bottom of the door.
- Simultaneously, disengage the top magnetic latch by pulling the door handle.
- Swing the doors open. The design allows for easy one-handed access.

Closing and Securing the Shed:

- Close the doors firmly until the top magnetic latch engages.
- Ensure the foot pedal mechanism is fully engaged, securing the bottom of the doors.
- For additional security, a padlock (not included) can be used with the integrated lockable handles.



Image: Detailed view of the shed's operational features, including the step-on lock, comfortable handle, and magnetic door latch.

MAINTENANCE

The Devoko storage shed is designed for low maintenance, thanks to its high-density polyethylene resin construction, which offers superior waterproofing, UV resistance, and heat tolerance.

- **Cleaning:** Periodically clean the exterior with mild soap and water. Rinse thoroughly with a garden hose. Avoid abrasive cleaners or harsh chemicals that could damage the resin.
- **Inspection:** Regularly inspect the shed for any signs of wear or damage, especially to the door hinges, latches, and base. Ensure all components remain secure.
- **Weather Resistance:** The shed is designed to withstand various weather conditions, including rain, snow, and UV exposure, without fading or deteriorating.



Image: Visual representation of the shed's weather resistance, highlighting its durability against snow, rain, and UV radiation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doors do not close properly or are misaligned.	<ul style="list-style-type: none"> • Uneven ground. • Hinges are loose or damaged. • Obstruction in the door path. 	<ul style="list-style-type: none"> • Ensure the shed is on a completely level surface. Adjust if necessary. • Check and tighten all hinge screws. If damaged, contact customer support. • Remove any items blocking the door's closing path.
Foot pedal or magnetic latch not engaging.	<ul style="list-style-type: none"> • Mechanism is dirty or obstructed. • Misalignment of doors. 	<ul style="list-style-type: none"> • Clean the foot pedal and latch areas. • Refer to door alignment solutions above.

Problem	Possible Cause	Solution
Water leakage inside the shed.	<ul style="list-style-type: none"> Improper assembly of roof or panels. Damage to the resin material. 	<ul style="list-style-type: none"> Re-check all panel and roof connections to ensure they are sealed and properly secured. Inspect the resin for cracks or holes. Contact customer support if significant damage is found.

PRODUCT SPECIFICATIONS

Brand	Devoko
Model Number	DV250811
Color	White
Material	High-Density Polyethylene Resin (Frame Material: Metal)
Product Dimensions (D x W x H)	25.5"D x 48"W x 72"H
Storage Capacity	50 Cu.ft
Item Weight	64.8 Pounds
Water Resistance Level	Waterproof
Assembly Required	Yes
Door Style	Single Hinged Door with Foot Pedal Release and Magnetic Latch

Product Dimension

Chaos to Order in One Cabinet



Two packages
delivered separately



50 Cu.ft
Storage Capacity

170 LBS
Roof Weight Capacity

Image: Diagram illustrating the product dimensions (25.5\"D x 48\"W x 72\"H) and storage capacity (50 Cu.ft).

WARRANTY AND CUSTOMER SUPPORT

For any questions, concerns, or issues regarding your Devoko 50 Cu.ft Outdoor Vertical Resin Storage Shed, please contact our customer support team.

- **Customer Support:** Refer to your purchase documentation or the Devoko brand website for specific contact information.
- **Returns:** This product is returnable until January 31, 2026. Please check your purchase details for the most accurate return policy.
- **Warranty:** Specific warranty details are typically provided with the product packaging or on the manufacturer's official website. Please retain your proof of purchase for warranty claims.

For additional information or to explore other Devoko products, visit the official [Devoko Store on Amazon](#).

