

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [EAFC](#) /
- › [EAFC Cordless Pressure Washer User Manual - Model SQ06](#)

EAFC SQ06

EAFC Cordless Pressure Washer User Manual

Model: SQ06

[Introduction](#) [Safety](#) [Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the EAFC Cordless Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and retain it for future reference.

The EAFC Cordless Pressure Washer is a portable and powerful cleaning solution designed for various outdoor tasks, including car washing, patio cleaning, and general household cleaning. Its cordless design and 20000mAh battery offer flexibility and convenience.



Image 1.1: The EAFC Cordless Pressure Washer shown with its included battery, hose, foam container, filter, and charger.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this product to reduce the risk of injury or damage.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Wear Eye Protection:** Always wear safety goggles or glasses to protect your eyes from high-pressure spray and debris.
- **Do Not Point at People or Animals:** The high-pressure spray can cause serious injury.
- **Secure Connections:** Ensure all hoses and accessories are securely connected before operating.
- **Use Appropriate Water Source:** The device is designed to draw water from buckets, bottles, or faucets. Ensure the water source is clean and free of large debris.
- **Battery Safety:** Use only the provided charger and battery. Do not expose the battery to extreme temperatures or moisture.
- **Keep Children Away:** Do not allow children to operate or play near the pressure washer.
- **Unplug When Not in Use:** Disconnect the battery and store the unit safely when not in operation.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Handheld Pressure Washer Unit

- 1 x Lithium Battery (80WH, 20000mAh)
- 1 x Charging Cable with US Plug
- 1 x Water Hose (5 meters)
- 1 x Quick Connector
- 1 x Water Filter
- 1 x Foam Container



Image 3.1: All components included in the EAFC Cordless Pressure Washer package.

4. SETUP GUIDE

4.1. Charging the Battery

Before first use, fully charge the lithium battery. Connect the charging cable to the battery and plug it into a standard US power outlet. The charging time is approximately 4-6 hours.

20000mAh ⚡ Powerful Battery

Long life of large capacity battery

4~6
Hours

Charging time

40~60
Mins

Working time



Image 4.1: The 20000mAh lithium battery connected to its charger.

4.2. Assembling the Pressure Washer

1. **Attach the Spray Wand:** Insert the metal spray wand into the front of the pressure washer unit until it clicks securely into place.
2. **Install the Battery:** Slide the charged battery into the base of the pressure washer handle until it locks.
3. **Connect the Water Hose:** Attach the quick connector to one end of the 5-meter water hose. Insert the water filter onto the other end of the hose.
4. **Attach Hose to Unit:** Connect the quick connector end of the hose to the water inlet on the pressure washer unit. Ensure a firm connection.

4.3. Connecting the Water Source

The EAFC pressure washer can draw water from various sources:

- **Bucket/Container:** Place the end of the water hose with the filter into a bucket or container filled with clean water.
- **Faucet:** If using a faucet, ensure the quick connector is compatible or use an appropriate adapter (not included) to connect the hose directly.



Draws Water From Anywhere



Image 4.2: The pressure washer's ability to draw water from various sources like a bucket, swimming pool, or river, highlighting the filter's role in preventing debris intake.

5. OPERATING INSTRUCTIONS

5.1. Starting the Pressure Washer

1. Ensure the battery is charged and installed, and the water hose is connected to a water source.
2. Point the nozzle away from yourself and others.
3. Press and hold the trigger. The machine will begin to draw water. If no water flows immediately, hold the trigger for more than 15 seconds to allow the pump to prime and draw water into the gun body.

40-60Min / **Long Battery Life**



Image 5.1: A user demonstrating the EAFC Cordless Pressure Washer for car cleaning, highlighting its portability and battery life.

5.2. Using the 6-in-1 Nozzle

The pressure washer features a versatile 6-in-1 adjustable nozzle, allowing you to select different spray patterns for various cleaning tasks. Rotate the nozzle head to switch between spray types, from a gentle rinse to a powerful jet.

5.3. Using the Foam Container

1. Fill the foam container with your desired cleaning solution.
2. Attach the foam container to the pressure washer's spray wand.
3. Operate the pressure washer as usual. The unit will mix the cleaning solution with water to create foam.
4. After applying foam, detach the container and reattach the standard nozzle for rinsing.

Portable Cordless Pressure Washer

Take up less space; Convenient storage; Easier to carry around the yard or transport in the trunk of your car.



Image 5.2: A user applying foam to a car with the EAFC pressure washer, demonstrating its versatility for car wash, yard wash, watering plants, pet wash, bicycle wash, and outdoor AC unit cleaning.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Clean the Water Filter:** Periodically remove and clean the water filter to prevent clogging and ensure proper water flow. Rinse it under running water to remove any accumulated debris.
- **Drain Water After Use:** After each use, disconnect the water hose and run the pressure washer briefly to clear any remaining water from the pump and hose. This prevents water stagnation and potential damage from freezing.
- **Clean the Nozzle:** Ensure the nozzle is free of blockages. Use a small pin or needle to clear any debris from the nozzle opening if necessary.
- **Store Properly:** Store the pressure washer, battery, and accessories in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the battery is partially charged before long-term storage.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

| Problem | Possible Cause | Solution |
|-----------------------------------|--|--|
| No water flow after turning on | Air in the machine | Connect to a faucet to release air, then use normally. Alternatively, hold the trigger for more than 15 seconds to allow water to fill the gun body. |
| Low water pressure | Kinked hose | Straighten the hose. |
| Low water pressure | Loose connector | Press the water connector firmly, ensuring it clicks twice. |
| Low water pressure | Battery is low | Charge the battery. |
| Machine won't turn on | Battery is dead | Charge the battery. |
| Machine won't turn on | Battery is submerged | Shake the battery upside down several times to clear water. |
| Machine won't turn on | Loose battery connections | Press firmly on the corners and center of the battery circuit board. |
| Foam bottle not spraying properly | Water in the bottle before cleaning solution | Ensure the bottle is empty of water before adding cleaning solution. |

8. PRODUCT SPECIFICATIONS

| Feature | Specification |
|-------------------|---------------------------------------|
| Brand | E AFC |
| Model Number | SQ06 |
| Power Source | Battery Powered (21V Lithium Battery) |
| Battery Capacity | 20000mAh (80WH) |
| Charging Time | 4-6 Hours |
| Working Time | 40-60 Minutes (depending on usage) |
| Maximum Pressure | 60 Bar |
| Maximum Flow Rate | 270 Liters Per Hour |
| Spray Range | Approximately 8-12 meters |

| Feature | Specification |
|--------------------|---|
| Hose Length | 5 meters (1.8 meters listed in specifications, using product description for consistency) |
| Product Dimensions | 14.37 x 4.53 x 8.6 inches |
| Item Weight | 4.13 pounds |
| Color | Red |

9. WARRANTY AND SUPPORT

EAFC products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for warranty claims.

For technical support or inquiries, please visit the official EAFC store on Amazon: [EAFC Store](#).