

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool WCW707HTSB Built-in Combined Microwave Oven User Manual](#)

Whirlpool WCW707HTSB

Whirlpool WCW707HTSB Built-in Combined Microwave Oven User Manual

Model: WCW707HTSB

This manual provides essential information for the safe and efficient use of your Whirlpool WCW707HTSB microwave oven.

1. INTRODUCTION

Thank you for choosing a Whirlpool appliance. This user manual is designed to guide you through the installation, operation, and maintenance of your new Whirlpool WCW707HTSB built-in combined microwave oven. Please read these instructions carefully before using the appliance and keep them for future reference. This appliance combines microwave, grill, and convection cooking functionalities, offering versatility for various culinary needs.



2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open or if the door is damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Regularly clean the oven and remove any food deposits.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Ensure the appliance is properly grounded.
- Do not immerse the cord or plug in water.

3. SETUP AND INSTALLATION

This appliance is designed for built-in installation. Ensure that the installation is performed by a qualified technician in accordance with local regulations and the provided installation template (if applicable).

- **Unpacking:** Carefully remove all packaging materials. Check the appliance for any damage.
- **Location:** Install the oven in a cabinet opening that meets the specified dimensions. Ensure adequate ventilation around the appliance.
- **Electrical Connection:** Connect the oven to a properly grounded electrical outlet. The appliance requires a 220-240V AC supply with a connection load of 3200W. The cable length is 1.5m.
- **Securing the Oven:** Secure the oven into the cabinet using the provided screws.



Image 2: Whirlpool WCW707HTSB built-in microwave oven installed in a kitchen.



Image 3: Detailed view of the installed Whirlpool WCW707HTSB microwave oven.

4. OPERATING INSTRUCTIONS

Your Whirlpool WCW707HTSB features intuitive touch controls and an LCD display for easy operation.

4.1. Control Panel Overview



Image 4: Close-up of the control panel.

The control panel features a digital LCD display and touch-sensitive buttons for various functions. Familiarize yourself with the icons for power, time, cooking modes, and special functions.

4.2. Setting the Clock

1. Ensure the oven is powered on.
2. Press the clock icon (if available) or refer to the full manual for specific clock setting instructions.
3. Use the '+' and '-' buttons to adjust the hour and minute.
4. Confirm the setting.

4.3. Cooking Functions

This combined microwave oven offers multiple cooking modes:

- **Microwave Cooking:** Ideal for reheating, cooking, and defrosting. The oven offers 7 power levels. Select the desired power level and cooking time using the touch controls.
- **Grill Function:** Use the 2000W grill for browning and toasting. Place food on the grill rack.
- **Convection Cooking:** For baking and roasting, similar to a traditional oven. This function uses a fan to circulate hot air evenly.
- **Combined Cooking:** Combines microwave power with grill or convection for faster cooking and browning.
- **Crisp Function:** Specifically designed to achieve an unparalleled crispness for dishes like gratins, pizzas, and pies. Use with the dedicated Crisp plate (if included).
- **Jet Defrost Function:** Provides exceptionally rapid and uniform defrosting for various food types. Select the food type and weight, and the oven will calculate the optimal defrosting time.
- **Steam Cooking:** For healthy cooking of vegetables, fish, and other foods. Use with a steam accessory (if included).
- **Auto Cook Function:** Pre-programmed settings for common dishes. Select the desired program and weight, and the oven will automatically adjust cooking parameters.
- **Keep Warm Function:** Maintains food at a serving temperature without overcooking.



Image 5: Interior view of the oven with racks and tray.



4.4. Child Protection

The oven is equipped with a child lock feature to prevent accidental operation. Refer to the full manual for instructions on how to activate and deactivate the child lock.

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance ensure the longevity and optimal performance of your appliance.

- Interior Cleaning:** The oven features an **Hydrolyse** self-cleaning technology. This system uses steam to loosen food residues, making them easier to wipe away. Follow the specific instructions in the full manual for activating the Hydrolyse cycle.
- Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners.
- Door Seal:** Keep the door seal clean to ensure proper closure and efficient operation.
- Light Bulb Replacement:** If the interior light bulb needs replacement, contact a qualified service technician.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

- Oven does not start:** Check if the appliance is plugged in and the circuit breaker has not tripped. Ensure the door is fully closed.
- Food not cooking evenly:** Stir or rotate food during cooking. Ensure appropriate cookware is used.
- Display shows an error code:** Note the error code and consult the full manual or contact customer support.
- Unusual noises:** Some operational noises are normal. If noises are excessive or unusual, discontinue use and contact service.

7. SPECIFICATIONS

Detailed technical specifications for the Whirlpool WCW707HTSB microwave oven:

Specification	Value
Product Type	Combined Microwave Oven
Placement	Built-in
Internal Capacity	53 L
Color	Black
Microwave Power	950 W
Control Type	Touch
Display Type	LCD
Grill Power	2000 W
Number of Power Levels	7

Specification	Value
Self-cleaning Technology	Hydrolyse
Door Opening Type	Pull down
Door Hinge	Bottom
Turntable	No
Interior Light	Yes
Clock Type	Electronic
Timer Type	Digital
Child Protection	Yes
Internal Material	Enamelled
Cable Length	1.5 m
Convection Cooking	Yes
Steam Cooking	Yes
Keep Warm Function	Yes
Defrost Function	Yes
Auto Cook Function	Yes
Connection Load	3200 W
AC Input Voltage	220 - 240 V
Product Dimensions (W x D x H)	54.3 x 55.9 x 45.5 cm
Product Weight	41.6 kg

8. WARRANTY AND SUPPORT

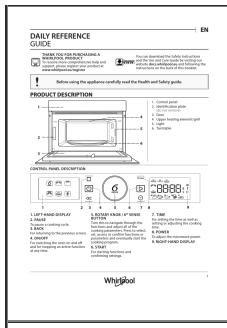
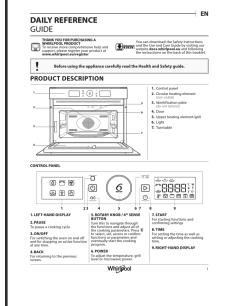
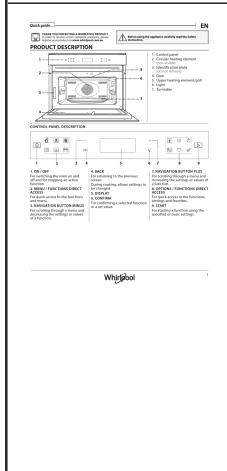
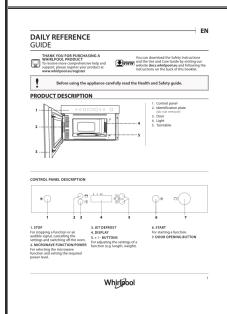
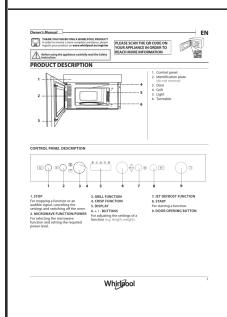
Whirlpool products are manufactured to high-quality standards and are backed by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your appliance or visit the official Whirlpool website.

For technical assistance, spare parts, or service requests, please contact Whirlpool Customer Service. Have your appliance model number (WCW7O7HTSB) and serial number ready when contacting support.

You can find more information and support on the official Whirlpool website: www.whirlpool.com

© 2025 Whirlpool Corporation. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

	<p><u>Whirlpool Microwave Oven: Daily Reference Guide and Functions</u></p> <p>A comprehensive guide for Whirlpool microwave ovens, detailing functions like 6th Sense, Jet Defrost, and Grill, along with usage instructions, cleaning tips, and troubleshooting advice.</p>
	<p><u>Whirlpool Oven Daily Reference Guide</u></p> <p>A comprehensive guide to using and maintaining your Whirlpool oven, covering product description, accessories, functions, daily use, cleaning, troubleshooting, and first-time setup.</p>
	<p><u>Whirlpool W Collection Microwave Oven: Quick Start Guide and User Manual</u></p> <p>Explore the features and functions of your Whirlpool W Collection microwave oven. This guide covers product description, control panel, accessories, cooking functions, cleaning, and troubleshooting.</p>
	<p><u>Whirlpool CHEF PLUS MCP 341 / MCP 343 Microwave Oven Instruction Manual</u></p> <p>Comprehensive instruction manual for the Whirlpool CHEF PLUS MCP 341 and MCP 343 microwave ovens, covering installation, safety, operation, functions, maintenance, and technical specifications.</p>
	<p><u>Whirlpool Microwave Daily Reference Guide</u></p> <p>This guide provides essential information for the daily use, cleaning, and troubleshooting of your Whirlpool microwave. It includes product descriptions, control panel explanations, function details, and safety instructions.</p>
	<p><u>Whirlpool Microwave Oven User Manual</u></p> <p>Comprehensive user manual for Whirlpool microwave ovens, detailing product features, operation, accessories, cleaning, and troubleshooting. Learn how to use microwave, grill, crisp, and defrost functions for optimal cooking results.</p>

