

[manuals.plus](#) /

- › [Fisher](#) /
- › [Fisher Pro Active Noise Cancelling Headphones SBHP550ANB User Manual](#)

Fisher SBHP550ANB

Fisher Pro Active Noise Cancelling Headphones User Manual

Model: SBHP550ANB

1. INTRODUCTION

Thank you for choosing the Fisher Pro Active Noise Cancelling Headphones. These over-ear wireless headphones are designed to provide an immersive audio experience with advanced noise cancellation, Bluetooth 5.3 connectivity, and a comfortable design. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.



Image 1.1: Fisher Pro Active Noise Cancelling Headphones (Navy Blue)

This image displays the Fisher Pro Active Noise Cancelling Headphones in Navy Blue, showcasing their over-ear design and sleek finish.

2. PRODUCT OVERVIEW

2.1 Package Contents

- Fisher Pro Active Noise Cancelling Headphones
- USB Charging Cable
- 3.5mm Audio Cable
- User Manual (this document)

2.2 Headphone Components and Controls

Familiarize yourself with the various parts and controls of your headphones:



Image 2.1: Right Earcup Controls

This image highlights the control buttons located on the right earcup, including power, volume, and playback controls.

- **Power Button:** Press and hold to power on/off. Short press for play/pause.
- **Volume Up (+):** Increase volume.
- **Volume Down (-):** Decrease volume.
- **ANC Button:** Activate or deactivate Active Noise Cancellation.
- **Microphone:** For hands-free calls.
- **3.5mm Audio Jack:** For wired connection.
- **USB-C Charging Port:** For charging the headphones.
- **LED Indicator:** Displays power, charging, and pairing status.

3. SETUP

3.1 Charging the Headphones

Before first use, fully charge your headphones. A full charge provides up to 16 hours of playback time. The quick charge feature allows for several hours of use from a short charging session.

1. Connect the USB charging cable to the USB-C port on the headphones.
2. Connect the other end of the cable to a USB power source (e.g., computer USB port, wall adapter).
3. The LED indicator will show charging status (e.g., red for charging, blue for fully charged).



Image 3.1: 16 Hours Music Time

This graphic illustrates the extended battery life of up to 16 hours on a single charge.

3.2 Bluetooth Pairing

Pair your headphones with your Bluetooth-enabled device (smartphone, tablet, laptop) for wireless audio.

1. Ensure the headphones are charged and powered off.
2. Press and hold the Power button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "Fisher Pro Headphones" from the list.
5. Once paired, the LED indicator will flash blue slowly or turn solid blue.

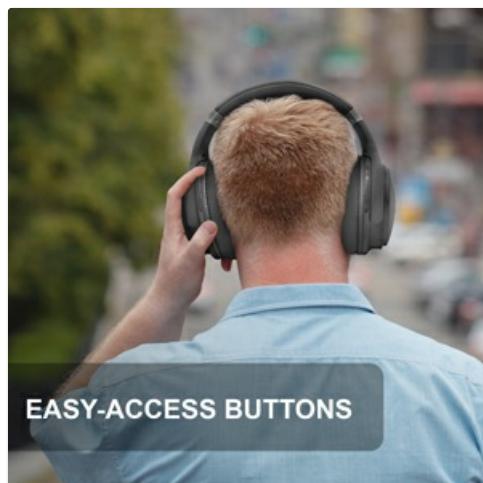


Image 3.2: Bluetooth 5.3 Connectivity

This image illustrates the headphones' compatibility with various devices such as phones, tablets, laptops, desktops, and TVs via Bluetooth 5.3.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds until the LED indicator lights up.
- **Power Off:** Press and hold the Power button for approximately 3 seconds until the LED indicator turns off.

4.2 Active Noise Cancellation (ANC)

The Active Noise Cancellation feature reduces ambient noise for a more focused listening experience.

- **Activate ANC:** Press the ANC button once. The ANC indicator light will illuminate.
- **Deactivate ANC:** Press the ANC button again. The ANC indicator light will turn off.



Image 4.1: Active Noise Cancellation

This graphic visually represents how active noise cancellation technology works to reduce external sounds.

4.3 Music Playback

- **Play/Pause:** Short press the Power button.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.

4.4 Call Management

Use the built-in microphone for hands-free calling.

- **Answer/End Call:** Short press the Power button.
- **Reject Call:** Press and hold the Power button for 2 seconds.
- **Voice Assistant:** Double-press the Power button to activate your device's voice assistant (e.g., Google Assistant, Siri).

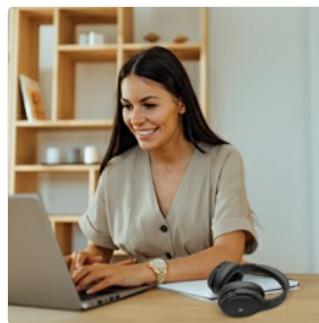


Image 4.2: Hands-Free Calling

This image shows a man using the headphones for a call, demonstrating the hands-free microphone functionality.

4.5 Wired Connection

You can use the included 3.5mm audio cable to connect the headphones to devices without Bluetooth or when the battery is depleted.

1. Plug one end of the 3.5mm audio cable into the headphone's audio jack.
2. Plug the other end into your audio device's 3.5mm output.
3. Note: ANC functionality may still be available in wired mode if the headphones have battery power.

5. MAINTENANCE

5.1 Cleaning

- Wipe the headphones with a soft, dry cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Keep the charging port and audio jack free of dust and debris.

5.2 Storage

- Store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures.
- When traveling, use a protective case to prevent damage. The foldable design allows for compact storage.



Image 5.1: Foldable Design

This image shows the headphones folded, demonstrating their compact design for easy storage and portability.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution

Issue	Possible Cause	Solution
Headphones will not power on.	Low battery; Power button not pressed long enough.	Charge the headphones fully. Press and hold the Power button for at least 3 seconds.
Cannot pair with device.	Headphones not in pairing mode; Bluetooth off on device; Device too far.	Ensure headphones are in pairing mode (flashing blue/red LED). Enable Bluetooth on your device. Move device closer to headphones.
No sound or low volume.	Volume too low; Incorrect audio source; Loose 3.5mm cable.	Increase volume on headphones and device. Check if the correct audio output is selected on your device. Ensure 3.5mm cable is securely connected.
Buzzing or static noise.	Interference; Faulty connection; ANC malfunction.	Move away from other electronic devices. Re-pair the headphones. Try turning ANC off and on. If persistent, contact customer support.
ANC not effective.	ANC not activated; Type of noise.	Ensure ANC is activated (ANC indicator light on). ANC is most effective against low-frequency, constant noises.

7. SPECIFICATIONS

Feature	Detail
Model Name	SBHP550ANB
Noise Control	Active Noise Cancellation
Connectivity Technology	Wireless (Bluetooth 5.3)
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Earpiece Shape	Over Ear
Battery Life	Up to 16 Hours
Audio Driver Type	Dynamic Driver (40mm)
Frequency Response	20 Hz (Lower limit provided, typical range is 20Hz-20kHz)
Impedance	32 Ohms
Headphones Jack	3.5 mm Jack
Control Method	Touch (referring to button presses)
Material	Plastic
Item Weight	6.6 ounces (0.41 Pounds)
Product Dimensions	8.1 x 7.5 x 3.15 inches
Manufacturer	Migear Intl, LLC
UPC	721702327997

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Fisher website. If you encounter issues not covered in this manual, please contact Fisher customer service for assistance.

Online Support: [Visit the Fisher Store on Amazon](#)