Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Kinglucky /
- > Kinglucky Upgraded Clip-On Earbuds User Manual

Kinglucky J8

Kinglucky Upgraded Clip-On Earbuds User Manual

Model: J8 | Brand: Kinglucky

1. Introduction

Welcome to the Kinglucky Upgraded Clip-On Earbuds user manual. These earbuds are designed for comfort, clear sound, and extended battery life, making them ideal for daily use, sports, and work. This manual provides detailed instructions on how to set up, operate, and maintain your new earbuds.

2. PRODUCT OVERVIEW

2.1 Package Contents

The Kinglucky Upgraded Clip-On Earbuds package includes the following items:

- Kinglucky ClipFree Earbuds (Model J8)
- · Charging Case
- USB-C Charging Cable
- User Manual (this document)

What's in the Box









2.2 Key Features

- **Upgraded Clip-On Design:** Lightweight (4.0g per earbud) and flexible C-shaped clip for comfortable, pressure-free wear, even with glasses or earrings.
- Crystal-Clear Sound: Tuned drivers for crisp vocals, rich mids, and balanced audio.
- **Noise Cancelling Calls:** Dual beamforming microphones with advanced ENC noise cancelling for clear conversations in various environments.
- Extended Playtime: Up to 6 hours on a single charge, and up to 50 hours total with the charging case.
- Bluetooth 5.4 Connectivity: Ensures faster pairing, stable signal, and low-latency streaming.
- IP56 Water-Resistant: Protected against sweat, light rain, and daily splashes.
- MultiPoint Pairing: Seamlessly connect to two devices simultaneously.



Image: Kinglucky Clip-On Earbuds and charging case.



Image: Illustration of the earbuds' lightweight design.

3. SETUP

3.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and a power source. The indicator light on the case will show charging status.


- Charging Case: Connect the USB-C cable to the charging port. The LED indicator will illuminate to show charging progress.
- Charging Earbuds: Place the earbuds into the charging case. They will automatically begin charging.

3.2 Wearing the Earbuds


The Kinglucky Clip-On Earbuds feature a flexible C-shaped design for a secure and comfortable fit.

- 1. Gently clip the earbuds onto the top edge of your ear.
- 2. Move the earbud slightly up or down to find your perfect fit. The flexible design allows for adjustment to various ear shapes.

How to Wear Your Charm

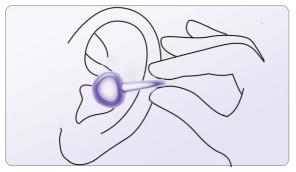

1. Gently clip the earbuds onto the top edge of your ear.

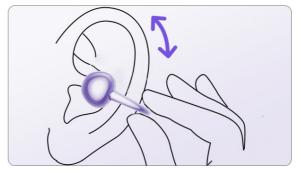

2. Move slightly up or down to find your perfect fit.

Image: Instructions for wearing the earbuds.

Follow these steps to pair your Kinglucky Earbuds with your device:

- 1. Open the charging case. The earbuds will automatically enter pairing mode.
- 2. On your device (smartphone, tablet, computer), enable Bluetooth.
- 3. Search for "Kinglucky J8" in the list of available Bluetooth devices.
- 4. Select "Kinglucky J8" to connect. Once connected, you will hear a confirmation tone.

For MultiPoint Pairing, connect to the first device, then disable Bluetooth on the first device. Connect to the second device. Re-enable Bluetooth on the first device, and the earbuds should connect to both simultaneously.



Image: MultiPoint Pairing with a phone and laptop.

4. OPERATING INSTRUCTIONS

4.1 Touch Controls

The Kinglucky Earbuds feature intuitive touch controls on each earbud. The touch panel is located on the outer surface of the earbud.

Action	Function
Single Tap (Music)	Volume Up / Down (Left/Right earbud)
Double Tap (Music)	Play / Pause
Single Tap (Call)	Answer Call
Press and Hold for 2s (Call)	Reject Call
Triple Tap	Activate Voice Assistant



Smarter Touch Controls

Enjoy effortless control with just a few taps. Adjust volume, play or pause music, and activate your voice assistant right from the touch panel.



Image: Smarter Touch Controls diagram.

4.2 Power On/Off

- Power On: Open the charging case, or take the earbuds out of the case. They will automatically power on.
- Power Off: Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Kinglucky Earbuds.

- Cleaning: Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use harsh chemicals or abrasive materials.
- Water Resistance: The earbuds are IP56 water-resistant, meaning they can withstand sweat and light rain. Do not submerge them in water or expose them to strong jets of water. Ensure they are dry before placing them back in the charging case.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage. Store in a cool, dry place away from extreme temperatures.



Image: IP56 Water-Resistant feature.

6. TROUBLESHOOTING

If you encounter issues with your Kinglucky Earbuds, refer to the following common solutions:

• Earbuds not pairing:

- Ensure the earbuds are fully charged.
- Make sure Bluetooth is enabled on your device.
- Place the earbuds back in the case, close the lid, wait a few seconds, then open it again to re-enter pairing mode.
- Forget "Kinglucky J8" from your device's Bluetooth list and try pairing again.

· No sound from one earbud:

- Ensure both earbuds are charged.
- Place both earbuds back in the charging case, close the lid, and then take them out again.
- Try resetting the earbuds (refer to specific reset instructions if available in product documentation, otherwise, a full charge and re-pairing often resolves this).

Charging case not charging:

- Check the USB-C cable and power adapter to ensure they are working correctly.
- Ensure the charging port on the case is clean and free of debris.

• Poor sound quality:

- Ensure the earbuds are properly seated on your ears.
- Move closer to your connected device to avoid interference.
- Clean any debris from the earbud speakers.

7. Specifications

Feature	Detail
Model Name	J8
Brand	Kinglucky
Connectivity Technology	Wireless (Bluetooth 5.4)
Ear Placement	Open Ear (Clip-On)
Form Factor	True Wireless
Item Weight	3.2 ounces (total package)
Earbud Weight	4.0g (each earbud)
Battery Life	Up to 6 hours (earbuds), 50 hours (with charging case)
Water Resistance	IP56
Noise Control	ENC Noise Cancelling (for calls)

Feature	Detail
Impedance	32 Ohm
Material	Plastic


8. WARRANTY AND SUPPORT

Kinglucky products come with a standard manufacturer's warranty. For detailed warranty information, product support, or technical assistance, please refer to the warranty card included in your package or visit the official Kinglucky website. You may also contact Kinglucky customer service directly through the retailer where you purchased the product.

For further assistance, please visit: Kinglucky Official Store on Amazon

© 2025 Kinglucky. All rights reserved.

Related Documents - J8

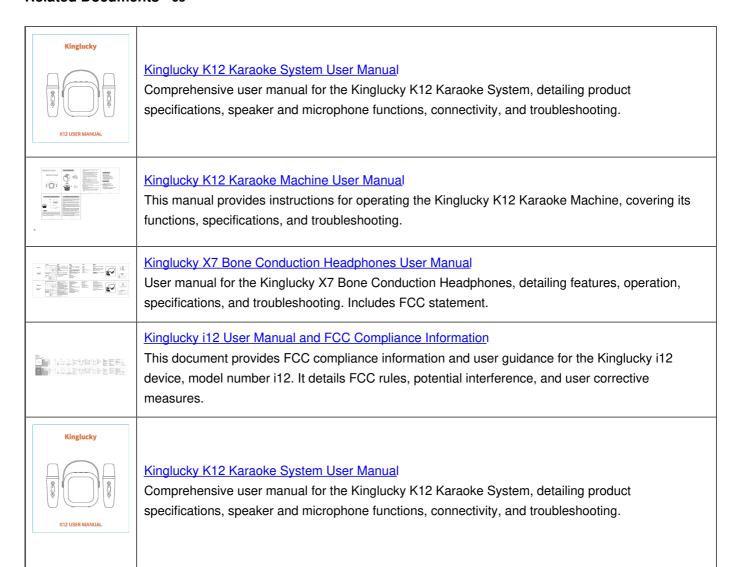



Kinglucky K12 Karaoke Machine User Manual

This manual provides instructions for operating the Kinglucky K12 Karaoke Machine, covering its functions, specifications, and troubleshooting.