

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FASTWD](#) /

› [FASTWD Android 15 Tablet 11-inch User Manual](#)

FASTWD FASTWD Android 15 Tablet 11-inch

FASTWD Android 15 Tablet 11-inch User Manual

Model: FASTWD Android 15 Tablet 11-inch

1. INTRODUCTION

Welcome to the user manual for your new FASTWD Android 15 Tablet 11-inch. This guide provides essential information for setting up, operating, and maintaining your device. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

The FASTWD Android 15 Tablet features an 11-inch 2K QHD display, an Octa-Core T615 processor, 36GB RAM, 256GB ROM, and an 8000mAh battery. It supports 5G WiFi, 4G LTE, and includes AI-enhanced cameras, Gemini AI, and Widevine L1 for high-quality streaming.

2. PACKAGE CONTENTS

Upon unboxing, please verify that all items listed below are present in your package:

- FASTWD Android 15 Tablet (11-inch)
- Mouse
- Keyboard
- Click Pen
- Leather Case
- Charger
- Data Cable (USB Type-C)
- Tablet User Manual

Extensive Tablet Accessories



1. FASTWD tablet	2. Mouse	3. Keyboard	4. Click Pen
5. Leather case	6. charger	7. Data cable	8. Tablet User Manual

Figure 2.1: Included accessories with the FASTWD Android 15 Tablet.

3. DEVICE OVERVIEW

The FASTWD Android 15 Tablet features a sleek, lightweight metal body with a slim profile and straight edges. The display bezel measures 7.8mm, contributing to an immersive viewing experience.

Physical Features

- Display:** 11-inch 2K QHD (2560x1440) In-cell Display with 90Hz refresh rate and Wide Viewing Angle.
- Body:** Metal construction, weighing approximately 568g.
- Ports:** USB Type-C for charging and data transfer, SIM/MicroSD card slot.
- Cameras:** Rear 13MP + 3MP with autofocus and Low Light LED Flash; Front 8MP with autofocus.
- Audio:** Four Amplitude Speakers with Artificial Intelligence Noise Cancellation technology.

Android 15 Tablet



- Screenshot detection
- Multi-tasking window
- Lock screen custom elements
- AI Smart Detection

FASTWD 11-inch tablet



- 11" Maximum Screen Size
- 11 inches
- FHD 2000*1200 FHD resolution
- 16:10 Screen Ratio
- Wear-resistant and sweat-resistant
- Wide Viewing Angle Incell Display

Sleek, Lightweight Metal Body

- Metal body
- Straight Edge
- Display Bezel 7.8 mm
- Slim and portable 568g



Worry-free charging

- Large battery 9580mAh
- Convenient charging Type-C



Figure 3.1: Overview of the tablet's design and key features.



Four Amplitude Speakers

Artificial Intelligence Noise Cancellation technology to automatically filter out ambient noise



HD Video Cal
Rear 13MP+3MP autofocus

Low Light
LED Flash
Capture Unlock
Face

Auto Focus
Front 8MP



Figure 3.2: Detail of the tablet's connectivity ports and speaker placement.

4. SETUP

4.1 Initial Charging

Before first use, fully charge your tablet using the provided USB Type-C cable and charger. Connect the cable to the tablet's USB-C port and the charger to a power outlet. The battery indicator on the screen will show charging progress.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the FASTWD logo appears on the screen.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options that appear on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

4.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. This includes selecting your language,

connecting to a Wi-Fi network, setting up your Google account, and configuring basic security settings.

4.4 SIM and MicroSD Card Installation

Locate the SIM/MicroSD card tray on the side of the tablet. Use the provided SIM ejector tool to open the tray. Insert your Nano-SIM card (for 4G LTE connectivity) and/or a MicroSD card (for expanded storage) into the designated slots, ensuring correct orientation. Gently push the tray back into the tablet.

4.5 Bluetooth Device Pairing

To connect Bluetooth accessories like the included keyboard or mouse:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select 'Pair new device' and choose your device from the list.
5. Follow any on-screen prompts to complete pairing.



Figure 4.1: Bluetooth device connection interface.

4.6 Face Recognition Unlock

For convenient and secure unlocking, you can set up Face Recognition:


1. Go to **Settings > Security & privacy > Device unlock > Face unlock.**
2. Follow the on-screen instructions to register your face. Ensure you are in a well-lit environment.

FASTWD Tablet Android 15, New System! New Experience!


Easy pairing of Apps




Easily free up storage space

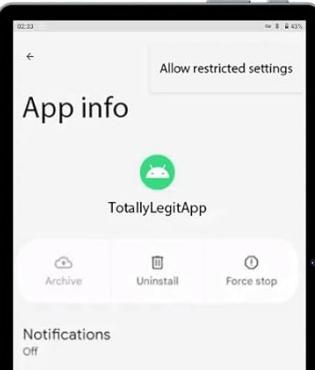

Quick Connect Bluetooth

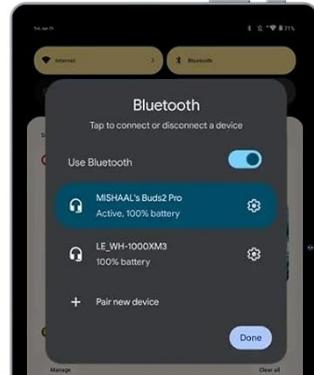

Face Recognition Unlock

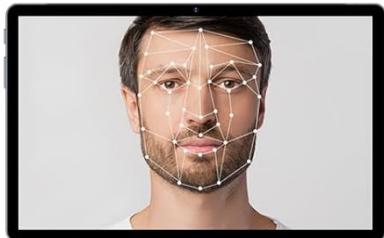

Double-tap the screen

Automatically light up the screen



Parental control of tablet use time

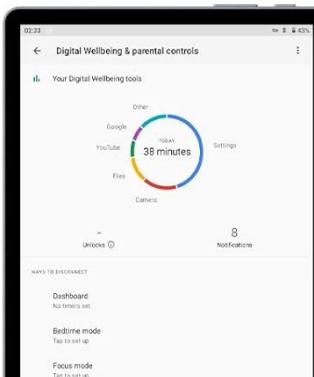


Figure 4.2: Face Recognition Unlock setup.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

The tablet uses standard Android touch gestures:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through pages or lists.
- **Pinch-to-zoom:** Zoom in or out on images and web pages.
- **Long press:** Access contextual menus or move app icons.

5.2 Wi-Fi and 4G LTE Connectivity

- **Wi-Fi:** Go to **Settings > Network & internet > Internet**. Select your desired Wi-Fi network and enter the password if required. The tablet supports 2.4G/5G dual-band Wi-Fi.
- **4G LTE:** If a SIM card is installed, go to **Settings > Network & internet > SIMs** to manage mobile data settings. The tablet supports 4G LTE TDD+FDD and VoLTE.



Figure 5.1: Connectivity features of the tablet.


5.3 App Management

To manage your applications:


- **Install Apps:** Use the Google Play Store to download and install new applications.
- **Uninstall Apps:** Long-press an app icon on the home screen or app drawer, then drag it to 'Uninstall' or select 'App info' and choose 'Uninstall'.
- **Free Up Storage Space:** Go to **Settings > Apps > See all apps**. Select an app, then choose 'Storage & cache' to clear cache or data, or 'Force stop' to temporarily halt its operation.

FASTWD Tablet Android 15, New System! New Experience!


Easy pairing of Apps

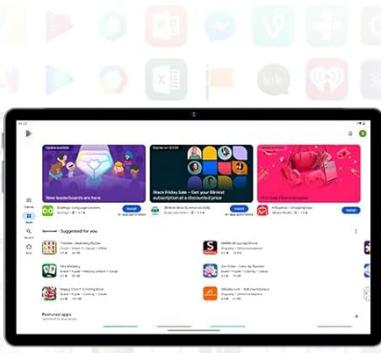


Easily free up storage space

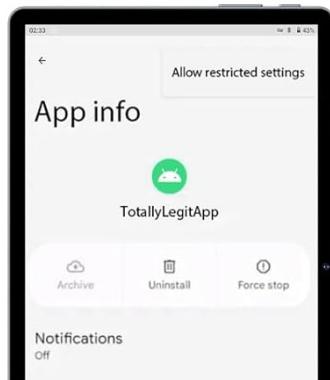

Quick Connect Bluetooth

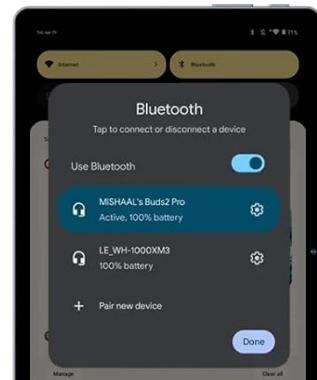

Face Recognition Unlock

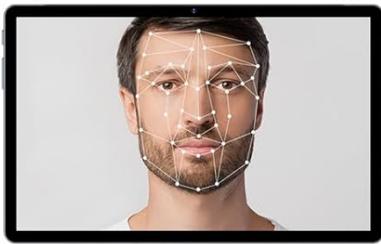

Double-tap the screen

Automatically light up the screen



Parental control of tablet use time

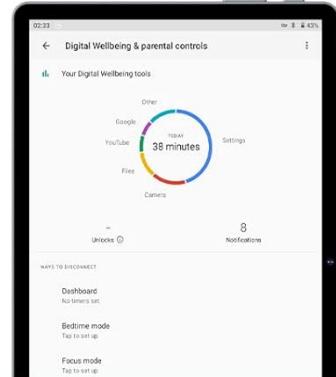



Figure 5.2: App management options.

5.4 Parental Controls

Manage and monitor tablet usage for children using parental controls:

1. Go to **Settings > Digital Wellbeing & parental controls**.
2. Set up screen time limits, app restrictions, and content filters.

Parental Controls

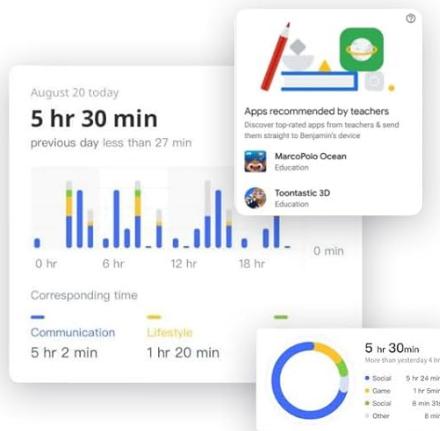

Drag and drop functionality



Customise Tablet Pages



Scalable Text

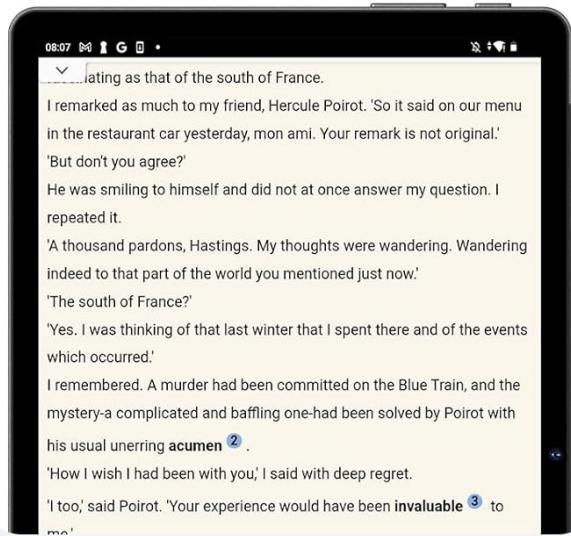



Figure 5.3: Parental control settings.

5.5 Double-tap to Wake


To quickly wake the screen without pressing the power button, simply double-tap the display. This feature can usually be enabled or disabled in **Settings > Display > Lock screen display**.

FASTWD Tablet Android 15, New System! New Experience!


Easy pairing of Apps

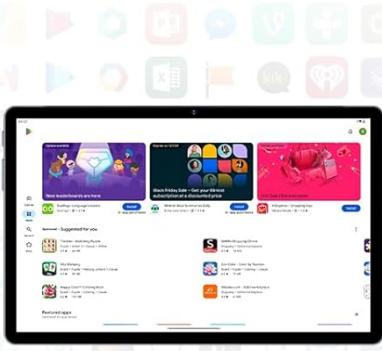


Easily free up storage space

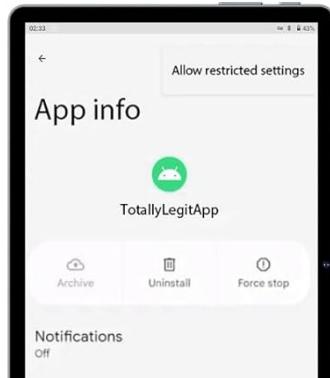

Quick Connect Bluetooth

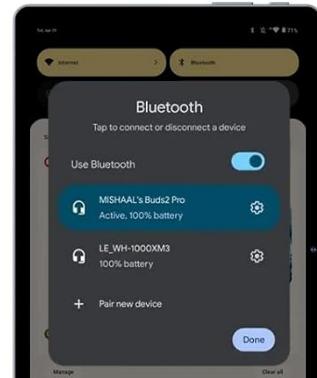

Face Recognition Unlock

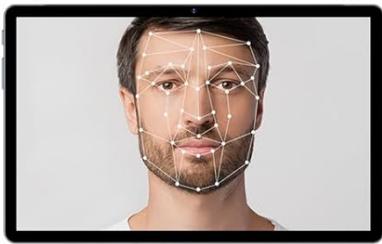

Double-tap the screen

Automatically light up the screen



Parental control of tablet use time


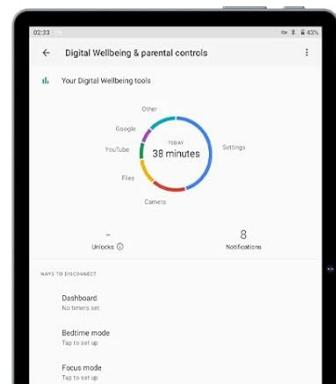


Figure 5.4: Double-tap to wake functionality.

5.6 Customizing Tablet Pages

Personalize your tablet's home screens by long-pressing on an empty area to access wallpaper, widgets, and home screen settings. You can also rearrange app icons and create folders.

Parental Controls

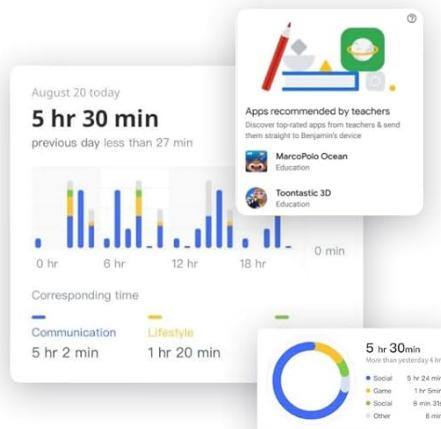

Drag and drop functionality



Customise Tablet Pages



Scalable Text

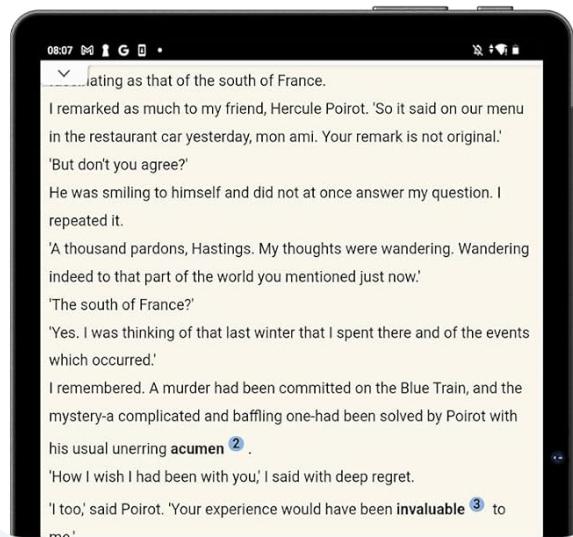



Figure 5.5: Example of a customized tablet page.

6. ADVANCED FEATURES

6.1 Display and Multimedia

- 2K QHD 90Hz Display:** Enjoy smooth visuals and vibrant colors on the 11-inch 2560x1440 resolution display. The 90Hz refresh rate enhances scrolling and gaming experiences.
- Widevine L1 DRM:** Supports Widevine L1 Digital Rights Management, enabling high-definition (1080P) streaming from services like Netflix.
- DP HD Screen Throwing:** Allows for high-definition screen mirroring or extension to compatible external displays.
- Scalable Text:** Adjust text size for improved readability via display settings.

Parental Controls

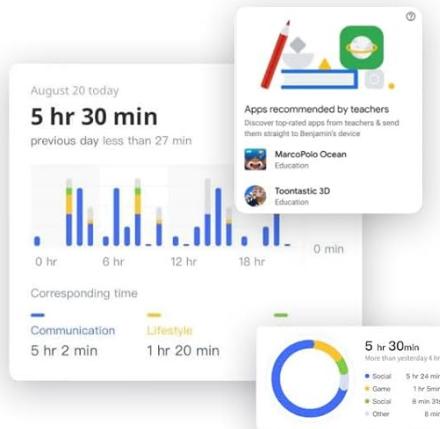

Drag and drop functionality



Customise Tablet Pages



Scalable Text

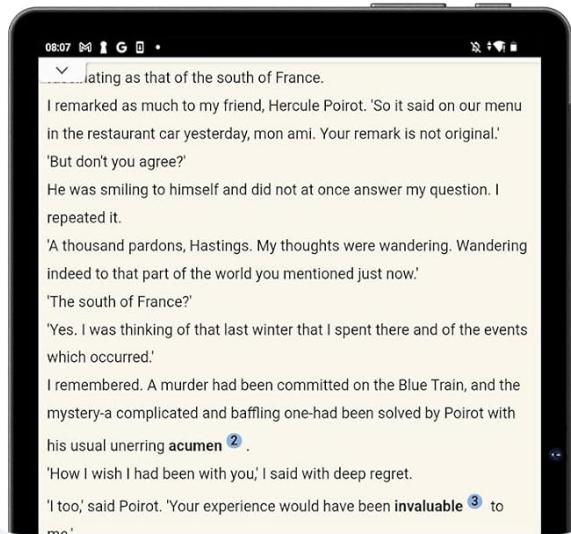


Figure 6.1: Scalable text feature for enhanced readability.

6.2 Performance and AI

- **Octa-Core T615 Processor:** Equipped with a powerful 12nm Octa-Core T615 processor (4x A73 + 4x A53) and Mali-G72 GPU for efficient multitasking and smooth application performance.
- **Gemini AI Integration:** Leverages Gemini AI for enhanced smart features and optimized user experience.
- **AI Smart Detection:** The tablet incorporates AI for various smart detection functionalities, improving user interaction and device efficiency.

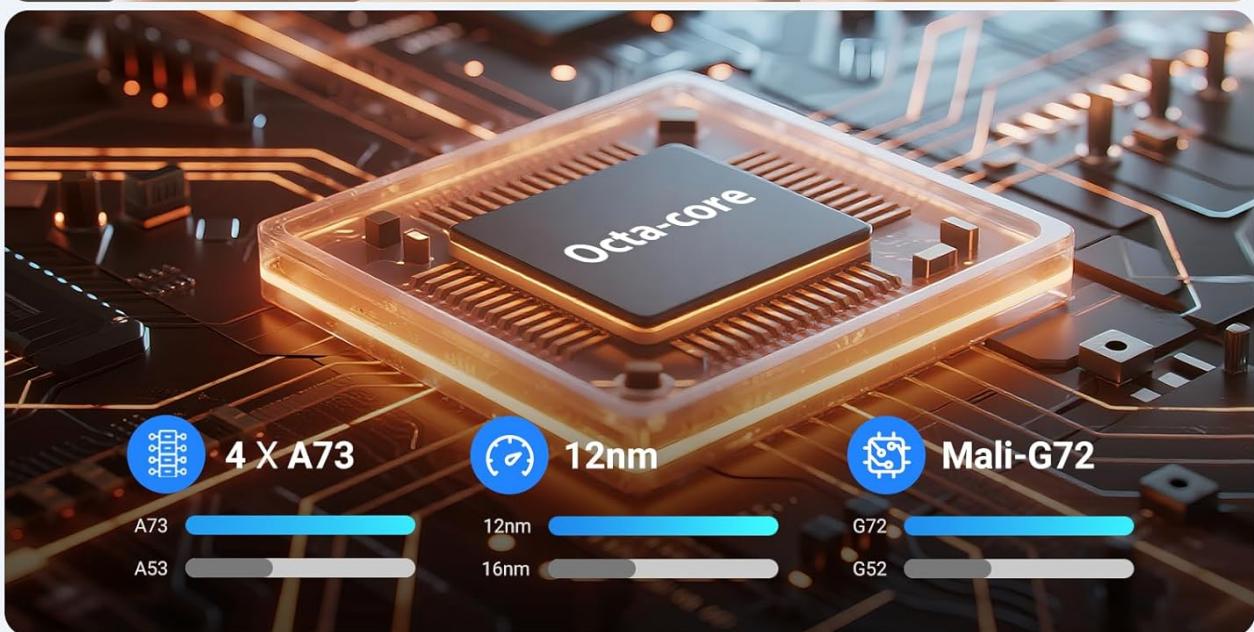


Figure 6.2: Octa-core processor specifications.

6.3 Camera Features

The tablet is equipped with AI-enhanced cameras:

- **Rear Cameras:** 13MP + 3MP with HD Video Call support, autofocus, and Low Light LED Flash.
- **Front Camera:** 8MP with autofocus.
- **Capture Unlock Face:** Utilize the front camera for face recognition to unlock the device.

6.4 Audio System

Experience clear audio with the tablet's advanced sound system:

- **Four Amplitude Speakers:** Delivers rich and immersive sound.
- **AI Noise Cancellation:** Artificial Intelligence Noise Cancellation technology automatically filters out ambient noise for clearer audio output.

7. MAINTENANCE AND CARE

7.1 Cleaning the Tablet

Use a soft, lint-free cloth to gently wipe the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

7.2 Battery Care

The tablet is equipped with an 8000mAh battery, providing approximately 8 hours of usage. To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the provided charger for optimal charging.
- Reduce screen brightness and disable unnecessary features (Wi-Fi, Bluetooth, GPS) when not in use.

7.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update** to check for available updates.

7.4 Storage Management

The tablet comes with 256GB of internal storage, expandable up to 1TB via MicroSD card. To manage storage:

- Regularly delete unnecessary files and apps.
- Move large files (photos, videos) to the MicroSD card or cloud storage.
- Clear app cache periodically via **Settings > Storage**.

8. TROUBLESHOOTING

This section addresses common issues you might encounter with your tablet.

8.1 Tablet Not Turning On

- Ensure the battery is charged. Connect the tablet to the charger for at least 30 minutes.
- Press and hold the Power button for 10-15 seconds to perform a forced restart.

8.2 Wi-Fi Connection Issues

- Restart your Wi-Fi router and the tablet.
- Ensure you are within range of the Wi-Fi signal.
- Verify the Wi-Fi password is correct.
- Forget the network in Wi-Fi settings and reconnect.

8.3 Slow Performance

- Close unused applications running in the background.
- Clear app caches and free up storage space.
- Restart the tablet periodically.
- Consider performing a factory reset if performance issues persist **Note:** This will erase all data on the tablet. (Back up important data first).

8.4 Screen Unresponsive

- Perform a forced restart by holding the Power button.
- Ensure the screen is clean and free of moisture or debris.

9. SPECIFICATIONS



Feature	Specification
Brand	FASTWD
Model Name	FASTWD Android 15 Tablet 11-inch
Operating System	Android 15
Processor	Octa-Core T615 (4x A73, 4x A53, 12nm)
GPU	Mali-G72
RAM	36GB (12GB + 24GB virtual)
Internal Storage	256GB
Expandable Storage	Up to 1TB MicroSD
Display Size	11 Inches
Display Resolution	2560x1440 (2K QHD)
Refresh Rate	90Hz
Battery Capacity	8000 mAh
Battery Life	Approximately 8 hours
Rear Camera	13MP + 3MP with Autofocus and LED Flash
Front Camera	8MP with Autofocus
Wi-Fi	802.11ac (2.4G/5G Dual-band)
Cellular Connectivity	4G LTE (TDD+FDD), VoLTE
Bluetooth	Yes
Ports	USB Type-C
Dimensions (Product)	26L x 16W x 0.8H cm
Weight	Approximately 568g
DRM Support	Widevine L1
Other Features	Gemini AI, GPS, TÜV Certified (implied from product title)

10. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included in your product packaging or contact your point of purchase. Warranty terms and conditions may vary by region and retailer.

If you encounter issues not covered in this manual or require further assistance, please contact FASTWD customer support through the contact information provided with your product or on the official FASTWD website.

Related Documents - FASTWD Android 15 Tablet 11-inch

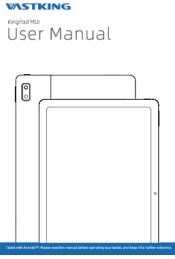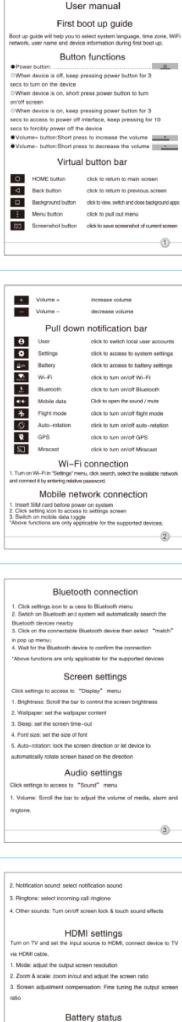 <p>FASTWD User Manual Read the manual before using the product.</p>	<p>FASTWD Tablet User Manual</p> <p>Comprehensive user manual for the FASTWD Tablet, covering setup, features, troubleshooting, and warranty information. Learn how to get started, navigate the home screen, manage settings, connect to networks, and troubleshoot common issues.</p>
	<p>TABWEE T20 User Manual & Warranty Card</p> <p>User manual and warranty information for the TABWEE T20 tablet, including setup, safety guidelines, maintenance, and regulatory compliance.</p>
 <p>VASTKING KingPad M10 User Manual</p>	<p>VASTKING KingPad M10 User Manual</p> <p>Official user manual for the VASTKING KingPad M10 tablet, providing detailed instructions on setup, features, and operation of your Android device.</p>
 <p>User manual First boot up guide Boot up guide will help you to select system language, time zone, WiFi network, and more when you first boot up the tablet. Button functions ●Power button: When device is off, keep pressing power button for 3 seconds to turn on the device ●When device is on, short press power button to turn device off ●When device is on, keep pressing power button for 3 seconds to access to power off interface, keep pressing for 10 seconds to turn off the device ●Volume button:Short press to increase the volume ●Volume button:Short press to decrease the volume Virtual button bar HOME button: click to main screen Back button: click to return to previous screen Background button: click to view, edit or close background apps Menu button: click to open menu Home button: click to go to home Home button: click to save screenshot of current screen Pull down notification bar Volume +: increase volume Volume -: decrease volume Wi-Fi connection 1. Turn on the Wi-Fi in "Settings" menu, click search, select the available network and connect to the network. Mobile network connection 1. Insert SIM card before power on the system 2. Click setting to access to setting screen 3. Select "Mobile network" in "Setting" menu 4. Move functions are only applicable to the supported devices. Bluetooth connection 1. Click settings icon to access to "Bluetooth" menu 2. Sketch on Bluetooth and system will automatically search the Bluetooth devices nearby 3. Select the device you want to connect and then select "pairing" In prep up menu: 1. Select "Bluetooth" in "Setting" menu 2. Sketch on the device to connect the connection *Above functions are only applicable to the supported devices. Screen settings Click settings to access to "Display" menu 1. Brightness: Scroll the bar to control the screen brightness 2. Wallpaper: set the wallpaper content 3. Sleep: set the screen time-out 4. Point size: set the point size 5. Auto-rotate: lock the screen orientation or let device to automatically rotate screen based on the direction Audio settings Click settings to access to "Sound" menu 1. Volume: Scroll the bar to adjust the volume of media, alarm and ringtone. 2. Notification sound: select notification sound 3. Ringer: select incoming call engine 4. Other sounds: Turn on/off screen lock & touch sound effects HDMI settings Turn on TV and set the signal source to HDMI, connect device to TV via HDMI cable. 1. Mode: adjust the output screen resolution 2. Zoom: zoom in/out and adjust the screen ratio 3. Screen adjustment compensation: fine tuning the output screen size Battery status Please charge the battery to 100% before using the product.</p>	

Lock settings icon to access to "battery" menu; battery usage can be viewed in the "battery" menu.
Power button: switch on/off the toggle to turn on/off power remain percentage display.
*Above functions are only applicable for the supported devices

Connect to PC
Device can be connected with PC via USB cable to perform copy/delete actions.
1. Connect the system including Windows 7 and above version will automatically install MTP drivers when device connecting to PC at first time.
2. For Windows XP, Windows Media Player 11 must be installed before connecting device to PC.
Application management
Click "Settings" to access to application menu to perform actions including un-installation, clean default action, clean cache & data and force close application.
1. Third party applications: Un-installable
2. System application: cannot be un-installed
Users
Click settings icon to access to "User" menu
1. System supports multi-user mode
2. Each user can set its personal application and contents

Location
1. Click settings icon to access to "Location" menu
2. Click "mode" to select the accuracy
Security
Click settings icon to access to "Security" menu
1. Screen lock mode: can select between the swipe, Pattern, Pin and password mode.
2. Unknown source: to allow/deny the app installation from unknown sources
Language and input
Click settings icon to access to "Language & input" menu
1. Language: select system language
2. Input: choose the desired system input method and its relative settings

Accounts management
Click settings icon to access to "Accounts" menu
1. Add accounts for related applications
2. Manage the account data sync
Factory reset
1. Choose "factory data reset" to restore the system
2. Factory reset will clean all personal data, please do backup before taking the action
Date & time
Click settings icon to access to "Date & time" selected menu
1. Select "Automate date & time" to let system to sync the local time when connecting to Internet. You can manually adjust the time by turning off the function.
2. Select "Set time zone" to let system to sync the local time zone when connecting to Internet. You can manually adjust the time zone by turning off the function.
3. 24-hour format: choose the 12-hour or 24-hour display format

USB OTG function
USB OTG function can be used to exchange data with other portable devices (USB drive, mobile hard disk, SD cards, mouse and keyboard).
1. Device need to be connected to this product via OTG cable.
2. Please keep device power above 50% while using OTG function, separated power supply is needed for high-power consumption devices.

[YUMKEM L211 Tablet User Manual and First Boot Up Guide](#)

A comprehensive guide to the YUMKEM L211 tablet, covering initial setup, button functions, connectivity options (Wi-Fi, Bluetooth, Mobile Data, HDMI), screen and audio settings, PC connection, application management, user accounts, location services, security features, language and input, account management, factory reset, date and time settings, and USB OTG functionality.



[Android 14 Tablet - 10.1 Inch, 5MP+8MP Camera, Octa-Core CPU](#)

Information about the Android 14 tablet featuring a 10.1-inch display, Octa-Core CPU, 5MP+8MP dual camera, 5000mAh battery, 8+16GB RAM, and 256GB ROM. Includes manufacturer details and safety instructions.



[MESWAO MES-B3 User Manual](#)

User manual for the MESWAO MES-B3 tablet, covering introduction, specifications, getting started, user interface, basic operations, apps and features, connectivity, settings, safety, warranty, and disclaimer.