

FASTWD Android 15 Tablet 10 Inch

FASTWD Android 15 Tablet 10 Inch User Manual

Model: Android 15 Tablet 10 Inch

INTRODUCTION

This manual provides detailed instructions for the use and maintenance of your FASTWD Android 15 Tablet. This device is designed for versatile use, offering a seamless experience for study, work, and entertainment. It features the Android 15 operating system with Gemini-AI technology for enhanced data protection and smart notification control.

Key features include:

- **Operating System:** Android 15 with Gemini-AI for optimized performance and security.
- **Memory:** 36GB RAM (12GB + 24GB extended) and 128GB ROM, expandable up to 1TB.
- **Display:** 10-inch IPS screen with 1280x800 resolution, featuring blue light filtering.
- **Battery:** 8000mAh battery with AI power management for extended use.
- **Connectivity:** 5G Dual-Band WiFi and Bluetooth 5.0.
- **Cameras:** 8MP rear camera and 5MP front camera with AI scene recognition.
- **Audio:** Symmetric stereo speakers for clear sound.

FASTWD

10 inch 36GB RAM 128GB ROM



Android 15



5G WiFi



8000mAh



BT 5.0



Image: Front and back view of the FASTWD Android 15 Tablet, showcasing its sleek design.

SETUP GUIDE

1. Unboxing and Initial Power On

Carefully remove all components from the packaging. The package includes the tablet, a Bluetooth keyboard, a mouse, a touch screen stylus, a charging device, and a leather case.



Image: All accessories included with the FASTWD Android 15 Tablet, such as the keyboard, mouse, stylus, and charger. Press and hold the power button located on the side of the tablet until the screen lights up. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and complete the initial setup.

2. Connecting Accessories

- **Bluetooth Keyboard & Mouse:** Turn on the keyboard and mouse. Go to *Settings > Connected devices > Bluetooth* on your tablet. Enable Bluetooth and select the keyboard/mouse from the list of available devices to pair.
- **Stylus:** The touch screen stylus can be used directly on the screen for navigation, writing, and drawing. No pairing is required.
- **Leather Case:** Insert the tablet into the provided leather case for protection and convenience.

3. Wi-Fi and Network Setup

During initial setup, you will be prompted to connect to a Wi-Fi network. If you skip this step, you can connect later via *Settings > Network & internet > Wi-Fi*. Select your desired network and enter the password. The tablet supports 2.4GHz and 5GHz dual-band Wi-Fi for stable and fast connectivity.



Image: Illustrates the process of inserting an SD card into the tablet for memory expansion.

For memory expansion, locate the SD card slot on the side of the tablet and insert a compatible microSD card (up to 1TB).

Your browser does not support the video tag.

Video: An overview of the TAB30 Tablet, demonstrating its features and included accessories during unboxing and initial setup.

OPERATING INSTRUCTIONS

1. Basic Navigation and Android 15 Features

The Android 15 operating system offers an intuitive user interface. Navigate by tapping, swiping, and pinching on the touchscreen. Utilize features like the taskbar, floating window, and split-screen mode for enhanced multitasking.

New Experience Android 15 Tablet

The new Android 15 update brings even more new features. Design pages, system functions and privacy security give you a different experience.

Image: Demonstrates the new features of the Android 15 Tablet, including split-screen functionality and PC mode.

2. Display and Visual Experience

The 10-inch IPS display provides clear and rich colors. Adjust brightness and display settings via *Settings > Display*.

The blue light filtering feature helps reduce eye strain during prolonged use. The tablet supports Widevine L1 for high-definition streaming content.



Image: Close-up of the 10-inch IPS display, emphasizing its 1280x800 resolution and vibrant color reproduction.

3. Camera Functions

The tablet is equipped with an 8MP rear camera and a 5MP front camera. Open the Camera app to capture photos and videos. The AI scene recognition and automatic face attribute detection optimize shooting effects.

Dual camera

5MP Front camera

8MP Rear camera



Four Amplitude Speakers

Artificial Intelligence Noise Cancellation technology to automatically filter out ambient noise

Image: Details the tablet's dual camera system (5MP front, 8MP rear) and its four amplitude speakers.

4. Battery Management

The 8000mAh battery provides approximately 8 hours of online video playback. To optimize battery life, utilize the AI power management features, dark theme, and night mode available in *Settings > Battery*.



Image: The tablet connected to a charger, highlighting its 8000mAh battery capacity.

MAINTENANCE

1. Cleaning the Tablet

To clean the screen, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials. For the tablet body, a dry, soft cloth is sufficient.

2. Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal longevity. Use only the provided charger or a certified compatible charger.

3. Software Updates

Regularly check for software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to *Settings > System > System update* to check for and install available updates.

TROUBLESHOOTING

Common Issues and Solutions:

- **Tablet not turning on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Slow performance:** Close unnecessary background applications. Clear cache from apps via *Settings > Apps > [App Name] > Storage & cache > Clear cache*. Consider performing a factory reset if issues persist (backup data first).
- **Wi-Fi connectivity issues:** Restart your Wi-Fi router and the tablet. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
- **Bluetooth pairing problems:** Ensure both devices have Bluetooth enabled and are in pairing mode. Move devices closer to each other.
- **Screen not responding:** Restart the tablet. If the issue persists, a factory reset might be necessary.

For further assistance, refer to the support section or contact customer service.

SPECIFICATIONS

Feature	Detail
Brand	FASTWD
Model Name	Android 15 Tablet 10 Inch
Operating System	Android 15
Screen Size	10 Inches
Display Resolution	1280x800 IPS
RAM Memory Size	36 GB (12GB + 24GB extended)
Storage Capacity	128 GB (Expandable up to 1TB)
Battery Capacity	8000 mAh
Average Battery Life	8 Hours
Rear Camera Resolution	8 MP
Front Camera Resolution	5 MP
Video Capture Resolution	4K UHD 2160p
Wireless Technology	Bluetooth 5.0, Wi-Fi (2.4GHz/5GHz)
Cellular Technology	5G
Processor Manufacturer	ARM
Compatible Devices	Keyboard, Mouse, Touch screen stylus

WARRANTY INFORMATION

The FASTWD Android 15 Tablet comes with a two-year extended warranty. This warranty covers manufacturing defects and malfunctions under normal use conditions. Please retain your proof of purchase for warranty claims. For detailed terms and conditions of the warranty, please refer to the documentation included in your product packaging or contact customer support.

SUPPORT

Should you encounter any issues or require assistance with your FASTWD Android 15 Tablet, please contact the FASTWD customer service team through Amazon.

You can typically find contact information on the product page on Amazon or within your Amazon order details.