

## KIDISLE CG9406

# KIDISLE Conical Burr Coffee Grinder CG9406 Instruction Manual

Model: CG9406

## INTRODUCTION

---

Thank you for choosing the KIDISLE Conical Burr Coffee Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee grinder. Please read all instructions carefully before use and retain this manual for future reference.



Image: The KIDISLE Conical Burr Coffee Grinder, a sleek black appliance designed for home use.

## IMPORTANT SAFEGUARDS

---

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

1. Read all instructions before operating the appliance.
2. Ensure the voltage shown on the rating plate matches your local power supply.
3. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped. Contact customer service for repair.
4. Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
5. Do not let the cord hang over the edge of a table or hot surfaces.
6. Do not immerse the motorized base in water or other liquids.
7. Close supervision is necessary when any appliance is used by or near children or infirm persons.
8. Ensure fingers are kept well away from moving parts.
9. Do not remove the lid until the blade has completely stopped.
10. Do not attempt to operate the appliance without the bean hopper lid in place.
11. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
12. Check the bean hopper for foreign objects before use.

13. Do not operate the appliance for other than its intended use.

14. Do not use outdoors.

## PRODUCT OVERVIEW AND PARTS IDENTIFICATION

---

Familiarize yourself with the components of your KIDISLE coffee grinder:

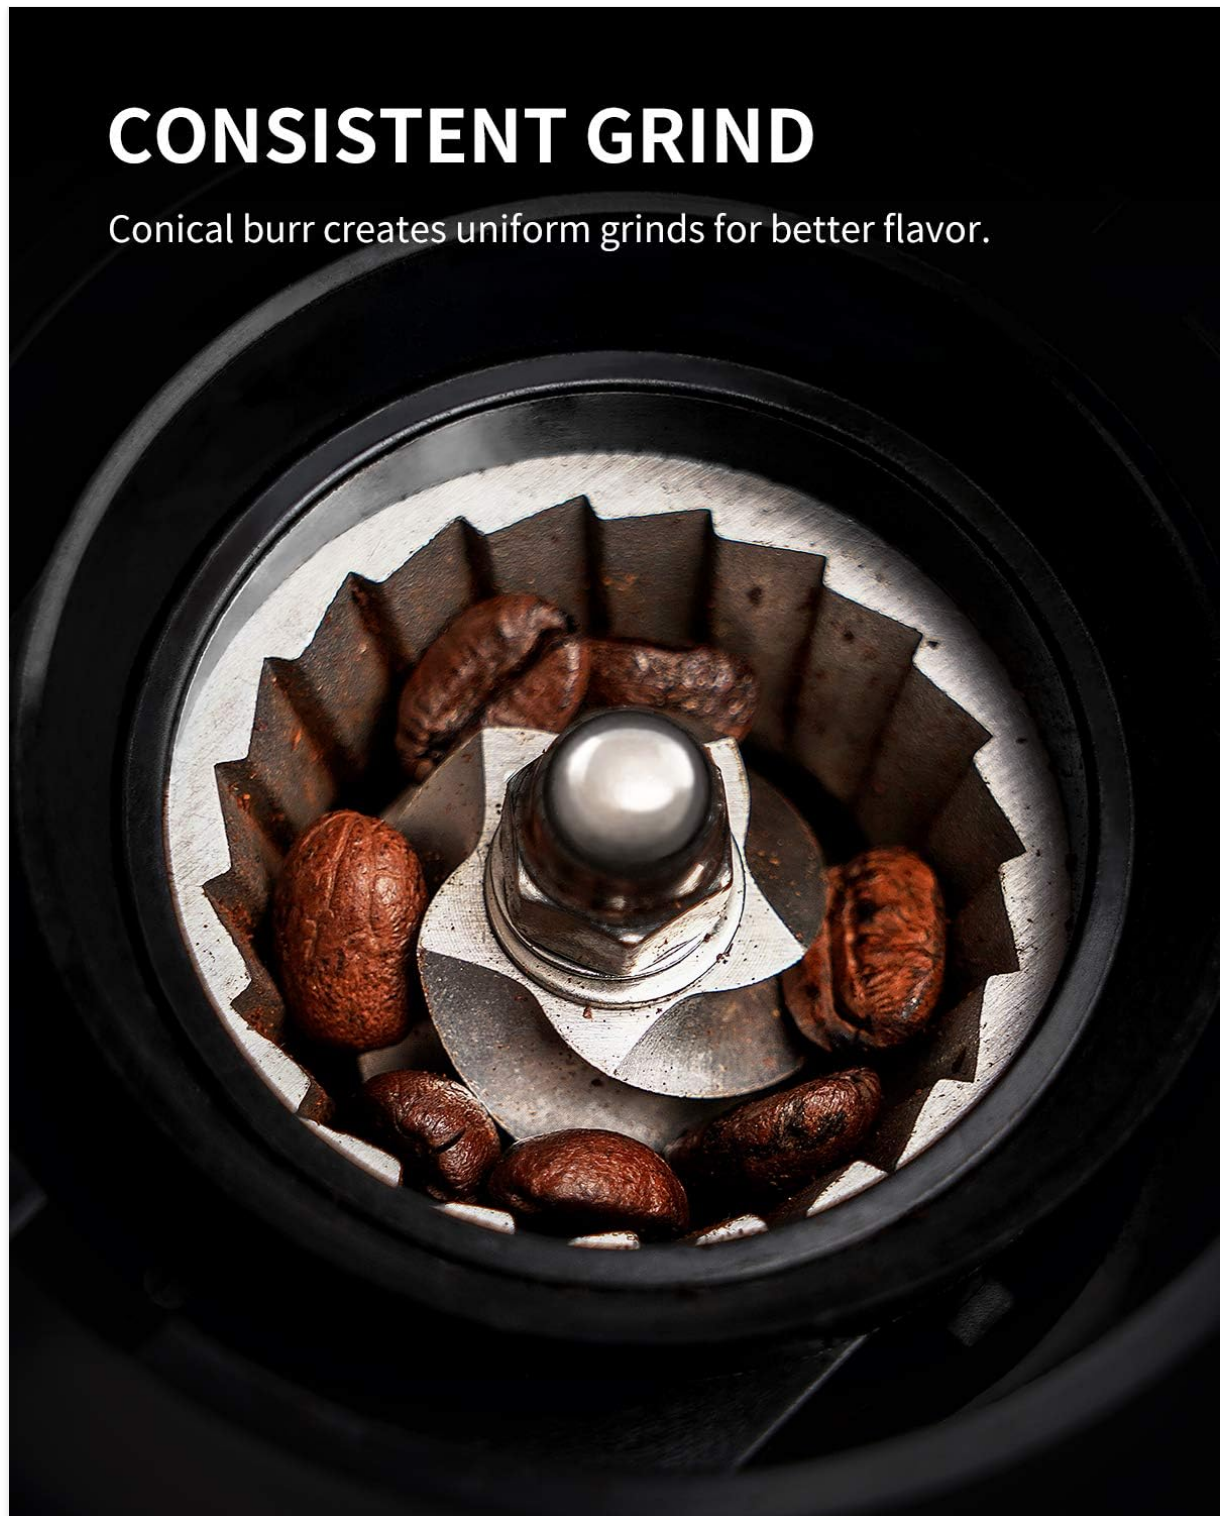


Image: Exploded view of the KIDISLE coffee grinder showing its main components.

- **Bean Hopper Lid:** Covers the bean hopper.
- **Bean Hopper:** Holds whole coffee beans for grinding.
- **Grinding Settings Dial:** Adjusts the fineness of the grind (1-35).
- **On/Off Button:** Initiates and stops the grinding process.

- **Cup Selector Dial:** Selects the desired number of cups (2-12).
- **Grinding Chamber Lid:** Covers the ground coffee container.
- **Grinding Chamber (Ground Coffee Container):** Collects the ground coffee.
- **Removable Ring Burr:** The upper burr, removable for cleaning.
- **Motor Housing:** The main body of the grinder containing the motor.
- **Cleaning Brush:** Used for cleaning the burrs and chute.
- **Coffee Scoop:** For measuring coffee beans.

## SETUP

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the bean hopper, bean hopper lid, grinding chamber lid, grinding chamber, and coffee scoop in warm, soapy water. Rinse thoroughly and dry completely. The removable ring burr can be cleaned with the provided brush.
3. **Assemble:** Place the grinding chamber (ground coffee container) onto the base. Ensure the bean hopper is securely locked into position on the motor housing. Place the bean hopper lid on top.
4. **Placement:** Position the grinder on a stable, flat, and dry surface.

## OPERATING INSTRUCTIONS

---

1. **Add Beans:** Open the bean hopper lid and pour whole coffee beans into the bean hopper. Do not overfill.
2. **Select Grind Size:** Rotate the grinding settings dial to your desired fineness. Refer to the 'Grind Settings Guide' section for recommendations.
3. **Select Cup Quantity:** Rotate the cup selector dial to choose the number of cups you wish to grind (2-12 cups).
4. **Start Grinding:** Press the On/Off button to begin grinding. The grinder will automatically stop once the selected quantity is processed.
5. **Remove Ground Coffee:** Once grinding is complete, remove the grinding chamber from the base. Carefully remove the grinding chamber lid and dispense the fresh grounds.

# CUSTOMIZABLE QUANTITY

2-12 cup meets your need.



Image: Close-up of the cup selector dial on the KIDISLE coffee grinder, showing settings from 2 to 12 cups.

## GRIND SETTINGS GUIDE

---

The KIDISLE coffee grinder offers 35 precision grind settings to suit various brewing methods:

# 35 CUSTOMIZED GRIND SETTINGS

Can grind super-fine to super-coarse with ease.



Image: The grind settings dial on the KIDISLE coffee grinder, indicating ranges for Espresso, Drip/Pour Over, and French Press.

Brewing Method	Grind Size	Recommended Settings
Espresso	Fine	1-14
Drip Coffee / Pour Over	Medium	15-25
French Press	Coarse	26-35

*Note:* Experiment with settings to find your preferred taste. Finer grinds are suitable for shorter brewing times, while coarser grinds are for longer brewing times.

## CARE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Disassemble:** Remove the bean hopper lid, bean hopper, grinding chamber lid, and grinding chamber.
3. **Clean Removable Parts:** Wash the bean hopper, lids, and grinding chamber in warm, soapy water. Rinse thoroughly and dry completely.
4. **Clean Burrs:** Remove the removable ring burr by twisting it counter-clockwise and lifting it out. Use the provided cleaning brush to remove any coffee residue from both the removable ring burr and the lower burr.
5. **Clean Chute:** Use the cleaning brush to clear any coffee grounds from the grinding chute.
6. **Wipe Base:** Wipe the motor housing with a damp cloth. Do not immerse the motor housing in water.
7. **Reassemble:** Ensure all parts are completely dry before reassembling. Place the lower burr back into position, then insert the removable ring burr and twist clockwise to lock it. Reattach the bean hopper, lids, and grinding chamber.

# EXTREMELY EASY TO CLEAN

Comes with a brush for cleaning.



Image: A hand using the provided brush to clean the removable burr of the KIDISLE coffee grinder.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start	Not plugged in; bean hopper not properly seated; power outage.	Check power connection; ensure bean hopper is locked in place; check circuit breaker.
Grinder stops during operation	Overheating; beans jammed; insufficient beans.	Allow to cool for 30 minutes; clear any jammed beans; add more beans.

Problem	Possible Cause	Solution
Inconsistent grind	Burrs are dirty or worn; incorrect grind setting.	Clean burrs thoroughly; adjust grind setting as needed.
Ground coffee static cling	Environmental factors.	This model features an anti-static design to minimize cling. Ensure the grinding chamber is clean and dry.

## SPECIFICATIONS

---

- **Model:** CG9406
- **Brand:** KIDISLE
- **Color:** Black
- **Grind Settings:** 35 (Fine to Coarse)
- **Cup Selector:** 2-12 cups
- **Voltage:** 120 Volts
- **Power:** 200W
- **Bean Hopper Capacity:** 8.46 oz
- **Grinding Chamber Capacity:** 4.58 oz
- **Product Dimensions:** 5.2"L x 4.72"W x 11.81"H
- **Item Weight:** 1 pounds
- **Material:** Plastic
- **Special Features:** Anti-Static Design, Conical Burr Grinding Mechanism

# COMPACT DESIGN

Stylish and functional.



Image: The KIDISLE coffee grinder showcasing its compact dimensions on a kitchen counter.

## WARRANTY AND SUPPORT

Your KIDISLE Conical Burr Coffee Grinder comes with a **1-year default warranty period**. We strongly recommend that you record your purchase date and order ID for your own reference.

### Extend Your Warranty to 2 Years

To extend your warranty to 2 years, register your product within 3 days after receiving it. Please follow these steps:

1. Call our Customer Service Department at **1-833-366-3477**.
2. Provide your order details, including order ID and purchase date.
3. Send a picture of the product to the provided email address.

For any questions, concerns, or support needs, please contact KIDISLE Customer Service. We are here to help!