

- Manuals.plus /
- › Forno /
- › Forno Paolo 36-Inch Freestanding Electric Range User Manual

Forno C-FFSEL6011-36WHT

Forno Paolo 36-Inch Freestanding Electric Range User Manual

Model: C-FFSEL6011-36WHT

1. INTRODUCTION

Thank you for choosing the Forno Paolo 36-Inch Freestanding Electric Range. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: Front view of the Forno Paolo 36-Inch Freestanding Electric Range with the oven door open, showcasing the interior racks and lighting.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, injury to persons, or damage when using the appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Ensure proper installation by a qualified technician in accordance with all local codes.
- Never use the appliance for warming or heating the room.
- Do not leave children unattended near the appliance.
- Wear proper apparel. Loose-fitting or hanging garments should never be worn while using the appliance.
- Do not store flammable materials in or near the appliance.
- Always use dry potholders. Moist or damp potholders on hot surfaces may result in burns from steam.

- Do not touch heating elements or interior surfaces of the oven.
- Clean the appliance regularly to prevent grease buildup and potential fire hazards.

3. PRODUCT OVERVIEW

The Forno Paolo 36-Inch Freestanding Electric Range combines a powerful radiant cooktop with a true convection oven, designed for versatile cooking performance.

3.1. Components

- **Smooth Ceramic Glass Cooktop:** Features five radiant elements, including a 100-watt warming zone and a 3,300-watt rapid-boil element.
- **True Convection Oven:** A 4.38 cu.ft. capacity oven with a 1,200-watt convection fan and 3,000-watt total bake and broil output.
- **Hidden Bake Element:** Located beneath the oven floor for easier cleaning and protection against spills.
- **Dual-Element Broiler:** Provides precise control for high-heat searing or gentle broiling.
- **Oven Interior:** Equipped with bright halogen lighting, a large viewing window, two adjustable racks, and five rack positions.
- **Controls:** Intuitive front knob controls for both cooktop and oven settings.
- **Finish:** Durable stainless steel construction with a white color finish.



Figure 2: Front view of the Forno Paolo 36-Inch Freestanding Electric Range with the oven door closed, highlighting its sleek design.



Figure 3: Detailed view of the front-positioned control knobs for the cooktop and oven.



Figure 4: Close-up of the smooth ceramic glass cooktop with radiant elements.

4. SETUP AND INSTALLATION

4.1. Unpacking

Carefully remove all packaging materials and protective films from the range. Inspect the appliance for any shipping damage. Report any damage immediately to your dealer.

4.2. Electrical Requirements

This electric range requires a 240 Volt electrical supply. Ensure your home's electrical system meets these requirements and that installation is performed by a certified electrician.

4.3. Leveling the Range

The range comes with adjustable legs. Use a level to ensure the appliance is perfectly level for optimal cooking performance and stability. Adjust the legs by turning them clockwise or counter-clockwise.

4.4. Anti-Tip Bracket Installation

WARNING: The anti-tip bracket must be installed to prevent the range from tipping over. Failure to do so can result in serious injury.

Follow the instructions provided with the anti-tip bracket kit to securely fasten it to the wall or floor behind the range.

5. OPERATING INSTRUCTIONS

5.1. Cooktop Operation

The smooth ceramic glass cooktop features five radiant elements with varying power outputs for diverse cooking needs.

- **Turning On/Off:** Push and turn the corresponding knob to the desired heat setting (LO to HI). The indicator light will illuminate when an element is active.
- **Warming Zone:** Use the 100-watt warming zone to keep food at serving temperature.
- **Rapid-Boil Element:** The 3,300-watt element provides quick heating for boiling water or rapid cooking.
- **Heat Settings:** Adjust the knobs to select precise heat levels for simmering, sautéing, or boiling.

5.2. Oven Operation

The 4.38 cu.ft. true convection oven offers multiple cooking functions.

- **Baking:** Turn the oven control knob to the desired temperature. The oven light will illuminate, and the convection fan will activate if selected.
- **Broiling:** Use the dual-element broiler for high-heat searing or gentle broiling. Select the appropriate broil setting (e.g., High Broil for intense heat).
- **True Convection:** The 1,200-watt convection fan circulates heat evenly, reducing cooking times and ensuring consistent results. Activate the convection fan using its dedicated button.
- **Oven Lighting:** Press the 'Light' button on the control panel to turn the interior halogen lights on or off, allowing you to monitor food without opening the door.
- **Adjustable Racks:** The oven includes two adjustable racks with five positions to accommodate various dish sizes.



Figure 5: Interior view of the oven showing the two adjustable racks and convection fan.

Your browser does not support the video tag.

Video 1: An official product video demonstrating the features and operation of the Forno Paolo 36-Inch Freestanding Electric Range.

6. MAINTENANCE AND CLEANING

6.1. Cooktop Cleaning

Allow the cooktop to cool completely before cleaning. Use a ceramic cooktop cleaner and a non-abrasive pad to remove spills and stains. Wipe with a clean, damp cloth and dry thoroughly.

6.2. Oven Interior Cleaning

For light spills, wipe with a damp cloth and mild detergent once the oven has cooled. For heavier soil, consult the self-cleaning instructions if available, or use an oven cleaner as directed by the product manufacturer. The hidden bake element simplifies cleaning the oven floor.

6.3. Exterior Cleaning

Clean stainless steel surfaces with a soft cloth and a stainless steel cleaner. Avoid abrasive cleaners or scouring pads that can scratch the finish.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Range does not operate	No power supply	Check circuit breaker or fuse box. Ensure the range is properly plugged in.
Cooktop element not heating	Incorrect knob setting	Ensure the knob is pushed in and turned to a heat setting (not OFF).
Oven not heating	Incorrect oven setting or door not closed properly	Verify oven function and temperature settings. Ensure the oven door is fully closed.
Uneven cooking in oven	Improper rack placement or convection fan issue	Adjust rack position. Ensure convection fan is operating correctly.

8. SPECIFICATIONS

Feature	Detail
Brand	Forno
Model Number	C-FFSEL6011-36WHT
Installation Type	Freestanding
Cooktop Type	Smooth Glass Radiant
Number of Radiant Elements	5 (including warming zone)
Total Cooktop Power Output	9,800 Watts
Oven Capacity	4.38 cu.ft.
Oven Type	True Convection
Convection Fan Power	1,200 Watts
Bake/Broil Output	3,000 Watts
Control Type	Knob
Voltage	240 Volts
Material	Stainless Steel
Color	White

Feature	Detail
Item Weight	248 pounds
Package Dimensions	38 x 36 x 28.9 inches
Certification	CSA, UL
Included Components	Electric Range

9. WARRANTY AND SUPPORT

The Forno Paolo 36-Inch Freestanding Electric Range comes with an industry-leading **2-year in-house warranty**. For warranty claims, technical support, or service inquiries, please contact Forno customer service. Keep your purchase receipt and model number handy for faster assistance. For additional information and support, visit the official Forno Store: [Forno Store on Amazon](#).

© 2025 Forno Appliances. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FD3DG9YW>

More documents and user manuals: <https://manuals.plus/>