

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MAXSHOT](#) /

› [MAXSHOT Electric Scooter Adults User Manual](#)

MAXSHOT PR09

MAXSHOT Electric Scooter Adults User Manual

Model: PR09 | Brand: MAXSHOT

INTRODUCTION

This user manual provides essential information for the safe operation, maintenance, and troubleshooting of your MAXSHOT Electric Scooter Adults. Please read this manual thoroughly before your first ride to ensure optimal performance and safety.

SAFETY INFORMATION

Your safety is paramount. Always wear a helmet and appropriate protective gear. Adhere to local traffic laws and regulations. Avoid riding in adverse weather conditions or on slippery surfaces. Do not perform stunts or ride with passengers. Ensure the scooter is in good working order before each use.

- Always wear a certified helmet and protective gear (knee pads, elbow pads, wrist guards).
- Do not ride under the influence of alcohol or drugs.
- Observe all local traffic laws and regulations.
- Avoid riding in heavy rain, snow, or on icy surfaces.
- Maintain a safe distance from other vehicles and pedestrians.
- Regularly check brakes, tires, and all connections before each ride.
- The scooter is designed for one rider only. Do not carry passengers.
- Recommended age for riders is 14 years and above.
- Maximum weight limit: 265 lbs (120 kg).

PACKAGE CONTENTS

Please verify that all items are present in the package:

- MAXSHOT Electric Scooter
- Power Adapter/Charger
- User Manual (this document)
- Assembly Tools (if required)

SETUP

1. Unfolding the Scooter

Carefully remove the scooter from its packaging. Locate the folding mechanism near the base of the handlebar stem. Release the latch and lift the handlebar stem until it locks securely into the upright position. Ensure the dual-lock folding design is engaged for enhanced stability.



Image: The MAXSHOT Electric Scooter shown in both its fully unfolded, ready-to-ride position and its compact, folded state for storage or transport. This illustrates the scooter's portability and ease of setup.



Image: A visual representation of the MAXSHOT Electric Scooter's dimensions when unfolded (46 inches long, 17 inches wide, 48 inches high) and folded (46 inches long, 17 inches wide, 20.5 inches high), highlighting its portable weight of 42 lbs.

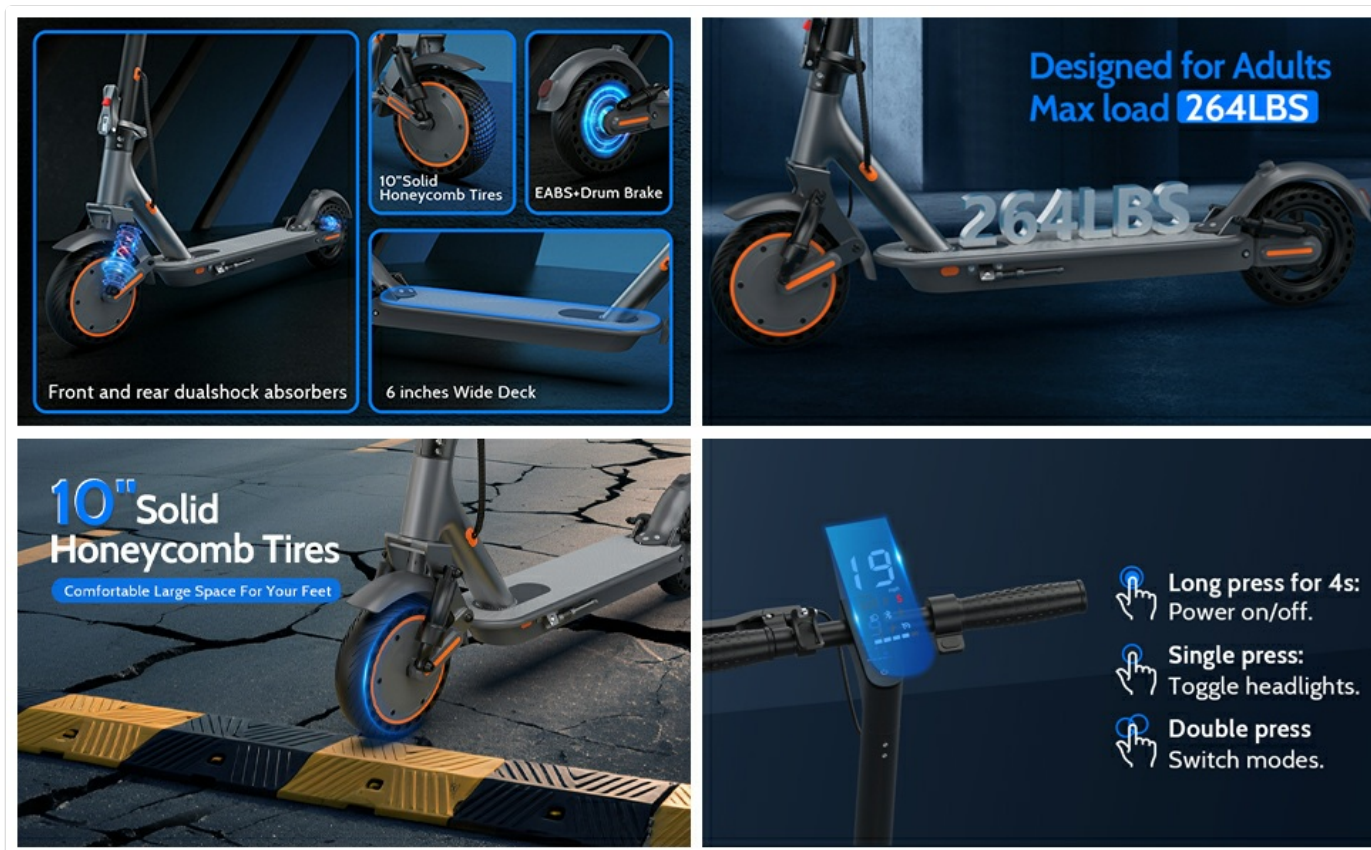


Image: A graphic illustrating the simple 3-step process for folding the MAXSHOT Electric Scooter, emphasizing its user-friendly design for quick storage and portability.

2. Initial Charging

Before your first ride, fully charge the scooter's battery. Connect the charger to the charging port on the scooter and then to a power outlet. The indicator light on the charger will change (e.g., from red to green) when charging is complete. The first charge should be 6 hours. Subsequent charges should not exceed 5 hours. Always use the provided charger.

19-31 MILES

Travel Range

36V 9Ah
High Capacity Battery

5H
Fast Charging

SAFE
Battery Safety Protection

Image: This image highlights the scooter's travel range of 19-31 miles, its 36V 9Ah high-capacity battery, and the 5-hour fast charging capability, along with battery safety protection features.

OPERATING INSTRUCTIONS

1. Powering On/Off

To power on the scooter, long press the power button on the display for 4 seconds. The digital display will illuminate. To power off, long press the power button again for 4 seconds.



Image: A close-up of the scooter's digital display and controls, showing instructions for long pressing for 4 seconds to power on/off, single pressing to toggle headlights, and double pressing to switch riding modes.

2. Riding Modes

The scooter features multiple riding modes. Double press the power button to cycle through the available modes (e.g., Eco, Standard, Sport). Each mode offers different speed and power characteristics. Refer to the digital display for the current mode indication.

3. Starting the Motor

The scooter supports two start modes: Zero Start and Non-Zero Start. If the throttle does not respond, check the start mode in the APP settings. If Zero Start is selected, the motor will start when you press the throttle. If Non-Zero Start is selected, you must coast first (push off with your foot) before the throttle activates the motor.

4. Braking System

The MAXSHOT scooter is equipped with a dual braking system (drum brake + EABS anti-lock) for reliable stopping power. Apply the brake lever gently to slow down and firmly for emergency stops. The brake taillight will illuminate when braking.



Image: A rider on the MAXSHOT Electric Scooter at night, showcasing the LED headlight and taillight system, and highlighting the dual braking system for enhanced safety.

5. Suspension and Tires

The scooter features upgraded front hydraulic and rear spring suspension for a comfortable ride, absorbing shocks and reducing vibration. It is equipped with 10-inch honeycomb solid tires, which do not require maintenance or repair, providing durability and a smooth ride even on rough surfaces.

10"



Front and rear dualshock absorbers



Image: A close-up view of the scooter's front wheel and suspension, emphasizing the 10-inch front and rear dual shock absorbers designed for a smoother ride over various terrains.



Image: A person riding the MAXSHOT Electric Scooter, with graphics highlighting the "Comfortable Riding Experience" provided by the Dual Shock Absorbers and 10-inch Honeycomb Solid Tires.

MAINTENANCE

1. Battery Care

- Avoid fully draining the battery before recharging.
- Charge the battery regularly, even if the scooter is not in use for extended periods (at least once every 30 days).
- Do not charge in unventilated or flammable environments.
- Ensure the matching battery and correct charging method are used.
- Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.

2. Tire Inspection

Although the scooter uses solid honeycomb tires that do not require inflation, regularly inspect them for any signs of wear, cracks, or damage. Ensure no debris is lodged in the tire tread.

3. Cleaning

Clean the scooter with a damp cloth. Do not use high-pressure water jets or immerse the scooter in water. Avoid using abrasive cleaners that could damage the finish.

4. General Checks

- Check all screws and bolts regularly to ensure they are tight.
- Inspect the brake system for proper function and wear.
- Ensure the folding mechanism is clean and operates smoothly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter does not power on.	Low battery; Power button not pressed correctly.	Charge the battery; Long press the power button for 4 seconds.
Throttle not responding.	Incorrect start mode selected (Non-Zero Start); Loose connection.	Check APP settings for start mode (Zero Start vs. Non-Zero Start); Ensure all cables are securely connected. If Non-Zero Start, push off first.
Reduced range or speed.	Low battery; Overload; Riding uphill; Extreme temperatures.	Fully charge battery; Ensure rider weight is within limits; Avoid steep inclines; Operate within recommended temperature range.
Brakes feel loose or ineffective.	Brake cable adjustment needed; Worn brake pads.	Adjust brake cable tension; Consult a qualified technician for brake pad replacement.

For issues not listed here, please contact MAXSHOT customer support.

SPECIFICATIONS

Feature	Detail
Brand	MAXSHOT
Model Name	PR09
Motor Power	500W Brushless Motor
Max Speed	22 MPH (35 km/h)
Max Range	19-31 Miles (30-50 km)
Battery	36V 9Ah High Capacity
Charging Time	Approx. 5 hours (6 hours for first charge)
Tires	10-inch Honeycomb Solid Tires
Suspension	Upgraded Front Hydraulic & Rear Spring Suspension

Feature	Detail
Braking System	Dual Braking (Drum Brake + EABS Anti-lock)
Max Climbing Angle	20°
Weight Limit	265 lbs (120 kg)
Product Dimensions (Unfolded)	46"L x 17"W x 48"H
Product Dimensions (Folded)	46"L x 17"W x 20.5"H
Net Weight	36 lbs (16.3 kg)
Waterproof Rating	IP54
Safety Certification	UL 2272 Tested



Image: An exploded view graphic illustrating the powerful 500W motor, highlighting its capabilities including a 22 MPH max speed, 20° max

climbing angle, and 10-inch solid tires.

WARRANTY AND SUPPORT

The MAXSHOT Electric Scooter comes with a one-year warranty. If you encounter any problems with your product, please contact MAXSHOT customer support. We aim to reply within 24 hours.

For further assistance, please visit the official MAXSHOT store on Amazon: [MAXSHOT Store](#).

© 2025 MAXSHOT. All rights reserved.