

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Casio](#) /

> [Casio Enticer MTP-B185G-9AVDF Analog Watch User Manual](#)

Casio MTP-B185G-9AVDF

Casio Enticer MTP-B185G-9AVDF Analog Watch User Manual

Model: MTP-B185G-9AVDF (A2470)

INTRODUCTION

This manual provides essential instructions for the proper use and care of your Casio Enticer MTP-B185G-9AVDF analog watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. Keep this manual for future reference.



Figure 1: Front view of the Casio Enticer MTP-B185G-9AVDF Analog Watch.

SETUP

1. Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure all protective films are removed from the crystal and case back.

2. Adjusting the Bracelet

The watch features an adjustable metal bracelet. To adjust the length, locate the clasp mechanism. Some

clasps allow for fine adjustments by moving the spring bar to different slots. For significant length reduction, links may need to be removed by a qualified jeweler or watch technician.

3. Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) out to the first click for date adjustment, and to the second click for time adjustment.
2. **Set the time:** Rotate the crown to move the hour and minute hands. Set the time to the desired hour, ensuring the AM/PM is correctly set if the watch has a 24-hour indicator (this model does not, so observe the date change around midnight).
3. **Set the date:** If the crown is pulled to the first click, rotate it to adjust the date. Avoid setting the date between 9:00 PM and 1:00 AM, as this can interfere with the automatic date change mechanism.
4. **Push the crown back:** Once the time and date are set, push the crown back in completely to its normal position. This engages the movement and starts the watch.



Figure 2: Side view illustrating the watch crown for time and date adjustment.

OPERATING INSTRUCTIONS

Reading the Time

The watch displays time using traditional hour, minute, and second hands on an analog dial.

Date Display

The watch features a date display window. The date automatically advances once every 24 hours. If the date does not change at midnight, it may be due to incorrect AM/PM setting during initial setup. Re-adjust the time as described in the 'Setting the Time and Date' section.

Water Resistance (50 Meters)

Your Casio Enticer watch is water resistant up to 50 meters (5 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water, such as washing hands. It is **not** suitable for swimming, diving, or showering with hot water, as steam and pressure changes can compromise the seals. Always ensure the crown is fully pushed in before any contact with water.

MAINTENANCE

Cleaning

Wipe the watch case and bracelet periodically with a soft, dry cloth to remove dirt and moisture. For metal bracelets, a soft brush and mild soapy water can be used, followed by thorough rinsing and drying. Avoid using chemical cleaners or abrasive materials.

Battery Replacement

The watch is powered by a single A battery (included). When the watch stops or the hands move erratically, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance. Attempting to replace the battery yourself may void the warranty and damage the watch.

Care Precautions

- **Temperature:** Avoid exposing the watch to extreme temperatures (below 0°C or above 40°C) or sudden temperature changes.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields, such as those emitted by speakers, refrigerators, or mobile phones, as this can affect timekeeping accuracy.
- **Shocks:** While durable, avoid strong impacts or dropping the watch.
- **Chemicals:** Do not expose the watch to gasoline, cleaning solvents, aerosols, adhesives, paints, or other chemicals, as they can damage the case, band, or seals.

TROUBLESHOOTING

- **Watch has stopped:** This typically indicates a depleted battery. Arrange for battery replacement by a professional.
- **Incorrect time/date:** Refer to the 'Setting the Time and Date' section to re-adjust. Ensure the crown is fully pushed in after adjustment.
- **Condensation inside the crystal:** This may indicate a breach in the watch's water resistance. Seek immediate professional service to prevent further damage.

For issues not listed here, or if troubleshooting steps do not resolve the problem, contact Casio customer support or an authorized service center.

SPECIFICATIONS



Figure 3: Watch dimensions for reference.

Feature	Detail
Model Name	MTP-B185G-9AVDF
Item Model Number	A2470
Display Type	Analog
Water Resistance	50 meters (5 ATM)
Power Source	Battery Powered
Battery Type	1 A battery (included)
Product Dimensions (LxWxH)	20.5 x 0.7 x 3.3 cm
Item Weight	80 g
Country of Origin	China



Figure 4: Case back details, including model and water resistance markings.

WARRANTY AND SUPPORT

Warranty Information

Your Casio watch is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase for detailed information. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, service, or warranty inquiries, please contact Casio customer support. In India, the product is imported by Casio India Co Pvt Ltd. Contact details can typically be found on the official Casio website for your region or on the warranty documentation.

Importer: Casio India Co Pvt Ltd, A-41, 1st Floor, MCIE, Mathura Road, New Delhi-110044