

[manuals.plus](#) /› [AMACOOL](#) /› [AMACOOL Table Fan Instruction Manual](#)

AMACOOL TF02

AMACOOL Table Fan User Manual

Model: TF02 | Brand: AMACOOL

INTRODUCTION

Thank you for choosing the AMACOOL TF02 Table Fan. This compact and efficient air circulator is designed to provide comfortable airflow in various settings, including homes, offices, bedrooms, bathrooms, and kitchens. Featuring 3 adjustable wind speeds, an 8-hour timer, and a 270° pivoting head, it offers personalized cooling with quiet operation and energy efficiency. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image: The AMACOOL TF02 Table Fan, showcasing its compact design and the included AC power adapter.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Read all instructions before using this fan.
- Always unplug the fan from the power outlet before cleaning or performing any maintenance.
- Do not use the fan near water or in excessively humid environments (e.g., bathrooms, laundry areas).
- Keep fingers, hair, and loose clothing away from the fan blades during operation.
- Do not operate any fan with a damaged cord or plug. If the cord or plug is damaged, contact customer support.
- Place the fan on a stable, flat surface to prevent it from tipping over.
- Do not cover the fan or obstruct its airflow openings.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental

capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present:

- AMACOOL TF02 Table Fan Unit
- AC Power Adapter (12V/1A)

SETUP

Setting up your AMACOOL TF02 Table Fan is quick and easy:

1. Unpack the fan unit and the AC power adapter from the packaging.
2. Place the fan on a stable, flat, and dry surface.
3. Connect the AC power adapter cable into the power input port located on the back of the fan.
4. Plug the AC power adapter into a standard electrical wall outlet (100-240V AC, 50/60Hz).



Image: A visual representation of the fan's dimensions and the connection point for the AC adapter, highlighting the 1.5m/4.92ft charging cord.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel on the top of the fan:

Power Button (): Turns the fan On/Off.

Timer Button (): Sets the auto-off timer.

Fan Speed Button (): Cycles through fan speeds.

0-8h Choosable Auto-OFF Timer There's Always A Choice for You



Image: A detailed view of the fan's control panel, showing the power, timer, and fan speed buttons, along with indicators for timer settings (2H, 4H, 6H, 8H) and fan speeds (1, 2, 3).

Power On/Off

- To turn on the fan, press the Power button (). The fan will start at Speed 1.
- To turn off the fan, press and hold the Fan Speed button (⌚) for 2 seconds at any speed.

Adjusting Fan Speed

- With the fan on, press the Fan Speed button (⌚) repeatedly to cycle through the three available speeds: Speed 1 (Low), Speed 2 (Medium), and Speed 3 (High).
- The corresponding indicator light (1, 2, or 3) on the control panel will illuminate to show the current speed setting.

3 Strong Fan Speeds



Image: The fan positioned in a living room, demonstrating its use in a home environment, with an overlay indicating the three distinct fan speeds (Speed 1, Speed 2, Speed 3).

Setting the Timer

- Press the Timer button () repeatedly to set the auto-off timer.
- Available timer settings are 2 hours (2H), 4 hours (4H), 6 hours (6H), and 8 hours (8H).
- The corresponding indicator light will illuminate to show the selected timer duration.
- The fan will automatically turn off after the set time has elapsed.

Adjusting Pivoting Head

- The fan features a 270° adjustable pivoting head.
- Manually tilt the fan head up or down to direct the airflow precisely where desired.

Adjustable 270°Angle

More Precise Blowing Position



Image: The fan on an outdoor balcony, with an inset diagram illustrating its 270-degree adjustable pivoting head for precise airflow direction.

Fewer Wires, More Safer

Quiet White Noise



Image: The fan operating quietly in a bedroom setting, demonstrating its suitability for undisturbed sleep, with an icon indicating quiet white noise.

MAINTENANCE

Regular cleaning and proper storage will help maintain the performance and longevity of your fan.

Cleaning

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- For dust accumulation on the blades, use a vacuum cleaner with a brush attachment or compressed air to gently remove dust from the grilles. Do not attempt to disassemble the fan for cleaning.
- Ensure the fan is completely dry before plugging it back in.

Storage

- If storing the fan for an extended period, unplug it and clean it thoroughly.
- Store the fan in its original packaging or a suitable box in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your AMACOOL TF02 Table Fan, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Ensure the AC adapter is securely plugged into both the fan and a working electrical outlet.
Weak or no airflow.	Fan speed is too low.	Increase the fan speed using the Fan Speed button.
	Air intake/outlet blocked.	Ensure nothing is obstructing the front or back grilles of the fan.
Fan is making unusual noise.	Fan is not on a stable surface.	Place the fan on a flat, stable surface.
	Dust accumulation.	Clean the fan grilles and blades as described in the Maintenance section.
Timer function not working.	Timer not set correctly.	Press the Timer button repeatedly until the desired timer duration indicator light is illuminated.

SPECIFICATIONS

Brand	AMACOOL
Model Name	TF02 Table Fan
Item Model Number	TF02
Color	Black
Electric Fan Design	Table Fan
Power Source	AC

Wattage	7 watts
Product Dimensions (D x W x H)	3.7"D x 10.39"W x 11.57"H
Item Weight	2.5 pounds
Special Features	Adjustable Tilt (270° Pivoting Head), Portable, Timer (8-Hour)
Recommended Uses	Air Circulation, Cooling
Room Type	Bathroom, Bedroom, Home Office, Kitchen

Same Wind Power But More Energy-savings

Runs at Only **7** Watts



Image: The fan in a kitchen setting, emphasizing its energy-saving operation at only 7 watts while providing effective airflow.

WARRANTY AND SUPPORT

AMACOOL is committed to providing high-quality products and customer satisfaction. This product comes with a standard manufacturer's warranty. For specific warranty details, including duration and coverage, please refer to the warranty card included with your purchase or visit the official AMACOOL website.

If you have any questions, require technical assistance, or need to claim warranty service, please contact AMACOOL customer support through the following channels:

- Official Website:** [Visit the AMACOOL Store on Amazon](#)
- Email Support:** Refer to your product packaging or official website for the most current contact email.

Please have your product model number (TF02) and purchase information ready when contacting support.

© 2025 AMACOOL. All rights reserved.

Related Documents - TF02

 TF02-Pro-W User Manual	<p>Benewake TF02-Pro-W User Manual: LiDAR Distance Sensor Guide</p> <p>Comprehensive user manual for the Benewake TF02-Pro-W LiDAR distance sensor. Covers technical specifications, operation, maintenance, communication protocols (UART, I2C), parameter configuration, quick testing, and firmware updates.</p>
 TF02-Pro User Manual	<p>Benewake TF02-Pro User Manual: Comprehensive Guide</p> <p>Explore the Benewake TF02-Pro User Manual for detailed information on product introduction, usage, maintenance, and troubleshooting. Learn about technical specifications, communication protocols, and parameter configuration for this advanced LiDAR sensor.</p>
 印刷说明 材质：双面纸张 对折尺寸：105x150mm 装订方式：双面九折页 注意：此页不需印刷	<p>WindMaster Smart Tower Fan Pro TF-02 User Manual Provitec</p> <p>Comprehensive user manual for the WindMaster Smart Tower Fan Pro (Model TF-02) by Provitec. Includes safety instructions, assembly guide, operation details, troubleshooting, and warranty information.</p>
 YURSAT	<p>Autec Endüstriyel Uzaktan Kumanda Sistemleri ve Yedek Parça Kataloğu</p> <p>YURSAT tarafından sunulan Autec marka endüstriyel uzaktan kumanda sistemleri, alıcıları, vericileri, şarj cihazları ve diğer aksesuarların detaylı ürün listesi ve teknik bilgileri.</p>

