

ALLIMITY RMF-TX500P

ALLIMITY RMF-TX500P Replacement Voice Remote Control User Manual

For Sony Bravia Smart TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY RMF-TX500P Replacement Voice Remote Control. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance with your compatible Sony Bravia Smart TV.

The RMF-TX500P remote is designed to replace original Sony voice remotes, offering similar functionality and ease of use.



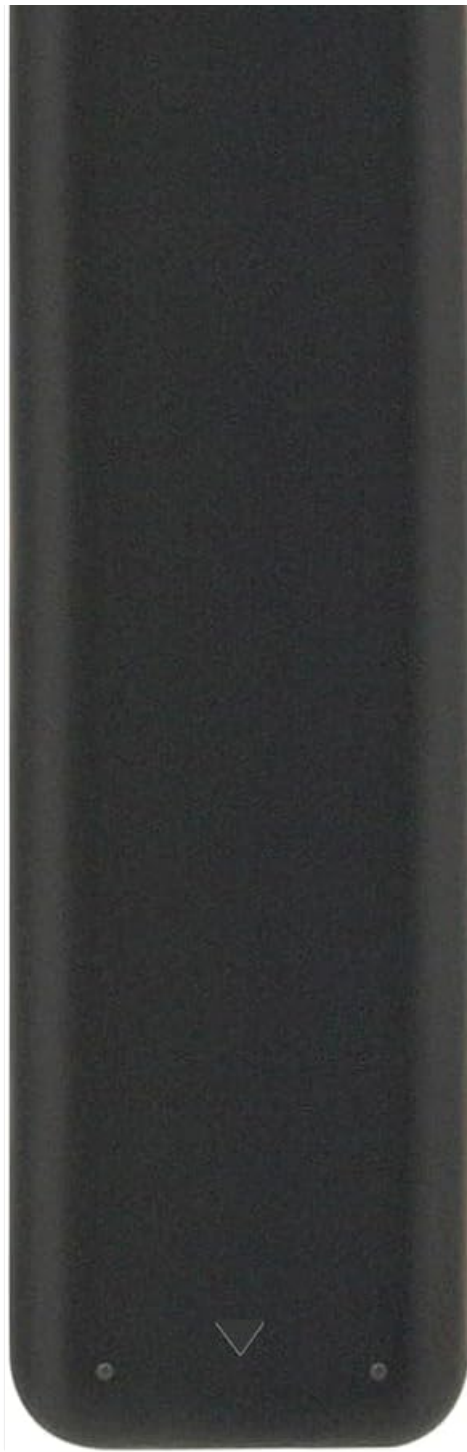


Figure 1: Front view of the ALLIMITY RMF-TX500P replacement voice remote control. This image shows the sleek, black design of the remote with its primary buttons visible.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



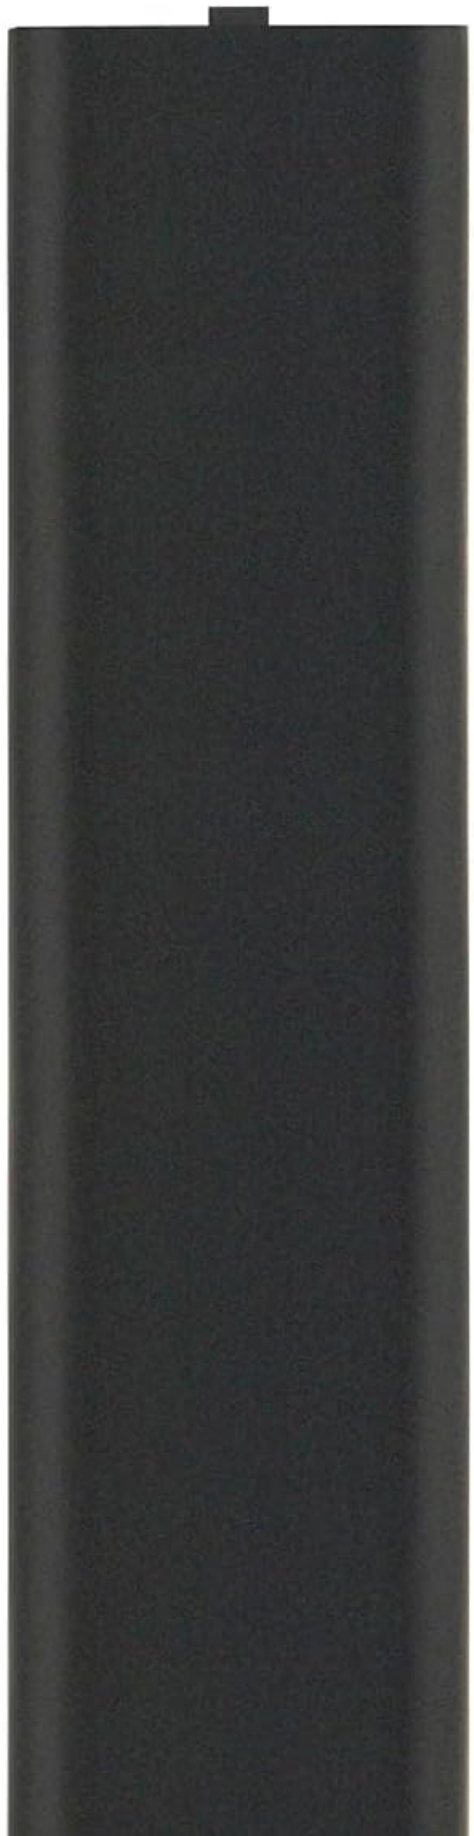




Figure 2: Back view of the ALLIMITY RMF-TX500P remote control with the battery compartment open. This image illustrates where to insert the AAA batteries.

2.2 Pairing the Remote Control

The RMF-TX500P remote control needs to be paired with your Sony Smart TV before its voice control and some advanced functions can be used. The pairing process typically involves the following steps:

1. Ensure your TV is powered on.
2. On your Sony Smart TV, navigate to the **Settings** menu.
3. Select **Remote Control & Accessories** or a similar option.
4. Choose **Bluetooth settings** or **Pair remote control**.
5. Follow the on-screen instructions to put your TV in pairing mode.
6. On the RMF-TX500P remote, press and hold the **Volume Down (-)** button and the **Microphone** button simultaneously for a few seconds until the LED indicator on the remote starts flashing.
7. Once the remote appears on your TV's screen as a discoverable device, select it to complete the pairing process.

Note: Specific pairing steps may vary slightly depending on your Sony TV model. Refer to your TV's user manual for detailed instructions if needed.

3. OPERATING THE REMOTE CONTROL

The RMF-TX500P remote control provides intuitive access to your Sony Smart TV's functions. Point the remote control directly towards the TV's remote control sensor, ensuring no obstacles block the signal.

3.1 Basic Functions

- **Power Button ()**: Turns the TV on or off.
- **Number Buttons (0-9)**: For direct channel selection.
- **Volume Up/Down (+/-)**: Adjusts the TV volume.
- **Channel Up/Down (CH +/-)**: Changes TV channels.
- **Home Button**: Accesses the TV's main menu or smart hub.
- **Back Button**: Returns to the previous screen or menu.
- **Navigation Pad (Up/Down/Left/Right) & Enter Button**: Navigates through menus and confirms selections.
- **Netflix / Google Play Buttons**: Direct access to streaming services.



Figure 3: Angled view of the ALLIMITY RMF-TX500P remote control, highlighting the layout of all buttons. This image helps users identify specific function buttons.

3.2 Voice Control Function

After successful pairing, you can use the voice control feature:

1. Press the **Microphone** button on the remote control.
2. Speak clearly into the microphone located on the remote.
3. You can issue commands such as "Open Netflix," "Search for action movies," or "Switch to HDMI 1."



Figure 4: The ALLIMITY RMF-TX500P remote control with the microphone button highlighted. This image indicates the location of the voice control activation button.

4. MAINTENANCE

4.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, alcohol, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or if the LED indicator does not light up during operation. Always replace both batteries at the same time with new AAA batteries.

5. TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly installed and not depleted. Replace batteries if necessary. Check for any obstructions between the remote and the TV's sensor.
- **Voice control not working:** Verify that the remote is properly paired with your TV (refer to Section 2.2). Ensure there are no background noises interfering with voice commands.
- **Intermittent functionality:** This could indicate low battery power or a temporary signal interference. Try moving closer to the TV or replacing batteries.
- **Remote does not control TV:** Confirm that the remote is compatible with your specific Sony TV model. A list of compatible models is provided in Section 6.

If issues persist after following these steps, please contact ALLIMITY customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Name	RMF-TX500P
Brand	ALLIMITY
Connectivity Technology	Bluetooth
Compatible Devices	Television (Sony Bravia Smart TVs)
Maximum Range	33 Feet (approx. 10 meters)
Power Source	2 x AAA Batteries (not included)
Color	Black
Item Weight	1 Ounce (approx. 28 grams)
Dimensions (L x W x H)	5"L x 2"W x 0.6"H (approx. 12.7cm x 5.08cm x 1.52cm)



23 cm / 9.06 in



Figure 5: Dimensions of the ALLIMITY RMF-TX500P remote control. This image provides a visual representation of the remote's length and width.

6.1 Compatible Sony TV Models

This remote control is compatible with a wide range of Sony Bravia Smart TV models, including but not limited to:

- RMF-TX510V, RMF-TX500T
- KD-43X7400H, KD-43X7500H, KD-43X8000H, KD-43X8007H, KD-43X8050H, KD-43X8500H
- KD-49X7400H, KD-49X7500H, KD-49X8000H, KD-49X8007H, KD-49X8050H, KD-49X8500H, KD-49X9500H
- KD-55X7400H, KD-55X7500H, KD-55X7577H, KD-55X8000H, KD-55X8007H, KD-55X8050H, KD-55X8500G, KD-55X8507G, KD-55X8577G, KD-55X9000H, KD-55X9007H, KD-55X9077H, KD-55X9500G, KD-55X9500H, KD-55X9507G, KD-55X9507H
- KD-65X7400H, KD-65X7500H, KD-65X7577H, KD-65X8000H, KD-65X8007H, KD-65X8050H, KD-65X8500G, KD-65X8507G, KD-65X8577G, KD-65X9000H, KD-65X9007H, KD-65X9077H, KD-65X9500G, KD-65X9500H, KD-65X9507G, KD-65X9507H
- KD-75X8000H, KD-75X8007H, KD-75X8050H, KD-75X8077H, KD-75X8500G, KD-75X8507G, KD-75X9000H, KD-75X9007H, KD-75X9500G, KD-75X9500H, KD-75X9507G
- KD-85X8000H, KD-85X8007H, KD-85X8500G, KD-85X9000H, KD-85X9500G, KD-85X9507G

If your specific TV model is not listed, please contact ALLIMITY customer support to confirm compatibility.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for the ALLIMITY RMF-TX500P remote control are typically provided at the point of purchase or can be obtained directly from ALLIMITY customer service. Please retain your proof of purchase for any warranty claims.

7.2 Customer Support

For any questions, technical assistance, or issues not covered in this manual, please contact ALLIMITY customer support. You can typically reach them through the seller's contact information on the platform where the product was purchased.

When contacting support, please provide your product model (RMF-TX500P) and a detailed description of the issue.