

SPEAKA PROFESSIONAL SP-TVS-600

SpeaKa Professional SP-TVS-600 TV Floor Stand Instruction Manual

Model: SP-TVS-600 (Part No. SP-13382656)

For 37-86 inch Televisions

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient assembly, operation, and maintenance of your SpeaKa Professional SP-TVS-600 TV Floor Stand. Please read this manual thoroughly before installation and retain it for future reference.

The SP-TVS-600 is designed to support televisions and monitors ranging from 37 to 86 inches, with a maximum load capacity of 45 kg. It features tool-free tilt adjustment, adjustable height for the screen (900 to 1100 mm), and an integrated cable management system. An additional height-adjustable storage shelf (200 to 910 mm) is included for media devices.

2. SAFETY INFORMATION

WARNING: Failure to read, understand, and follow all instructions can result in serious personal injury, property damage, or voiding of your warranty.

- Ensure the floor stand is placed on a stable, level surface.
- Do not exceed the maximum load capacity of 45 kg (99 lbs).
- Verify that your TV's VESA mounting pattern is compatible with the stand (100x100 to 600x400 mm).
- Always use two people for lifting and positioning the TV onto the stand.
- Keep children and pets away from the stand during assembly and operation.
- Do not hang on the stand or TV.
- Regularly check all screws and connections to ensure they remain secure.
- Dispose of packaging materials responsibly.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact your retailer.

- TV Floor Stand (disassembled components)
- Instruction Manual (this document)
- Safety Data Sheet
- Hardware Kit (screws, washers, spacers, tools for assembly)



Figure 1: Front view of the SpeakA Professional SP-TVS-600 TV Floor Stand.

4. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your TV floor stand. It is recommended to have a second person assist with assembly, especially when mounting the television.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.

2. **Assemble the Base:** Attach the main support column to the base plate using the provided screws and tools. Ensure all connections are tight and secure.
3. **Install TV Brackets:** Attach the VESA mounting brackets to the back of your television using the appropriate screws, washers, and spacers from the hardware kit. Refer to your TV's manual for specific screw requirements. Ensure the brackets are level and securely fastened.
4. **Mount the TV:** With assistance, carefully lift the television and hook the TV brackets onto the main support column's mounting plate. Secure the TV in place using the safety screws or locking mechanisms provided.
5. **Attach the Shelf:** Install the media shelf onto the main support column at your desired height. Secure it with the designated fasteners.
6. **Cable Management:** Route all TV and device cables through the integrated cable management system within the stand's column for a tidy appearance.



Figure 2: Front view of the stand showing the adjustable shelf.



Figure 3: Side view of the stand, illustrating the profile and stability.

5. OPERATING INSTRUCTIONS

5.1 Adjusting TV Height

The TV mounting plate can be adjusted in height from 900 mm to 1100 mm. To adjust, loosen the height adjustment screws on the main column, carefully slide the TV to the desired height (with assistance), and then securely tighten the screws.

5.2 Adjusting TV Tilt

The stand features tool-free tilt adjustment. Gently push or pull the top or bottom of the TV to achieve your desired

viewing angle. The mechanism will hold the TV in place.

5.3 Adjusting Shelf Height

The media shelf can be adjusted in height from 200 mm to 910 mm. Loosen the shelf adjustment screws, move the shelf to the preferred height, and then re-tighten the screws firmly.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the stand. For stubborn marks, a slightly damp cloth with mild detergent can be used, followed by drying. Avoid abrasive cleaners or solvents.
- **Periodic Checks:** Regularly inspect all screws, bolts, and connections to ensure they are tight and secure. Re-tighten if necessary.
- **Damage:** If any part of the stand becomes damaged, discontinue use immediately and contact customer support for replacement parts or advice.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Screws are loose; stand is on an uneven surface; weight capacity exceeded.	Ensure all assembly screws are tightened. Move stand to a level surface. Verify TV weight is within 45 kg limit.
TV does not tilt smoothly or stays in position.	Tilt mechanism needs adjustment or is obstructed.	Check for any obstructions. Ensure the tilt mechanism is clean.
Cables are not neatly managed.	Cables not routed through the designated channels.	Re-route cables through the integrated cable management system in the main column.

8. SPECIFICATIONS

Model: SP-TVS-600

Part Number: SP-13382656

Brand: SPEAKA PROFESSIONAL

Mounting Type: Floor Stand

Movement Type: Tilttable

Material: Alloy Steel

Color: White/Black

Compatible TV Sizes: 37 - 86 inches (94.0 cm - 218.4 cm)

VESA Compatibility: 100x100, 200x100, 200x200, 300x200, 400x200, 300x300, 400x300, 400x400, 600x400 mm

Maximum Load Capacity: 45 kg (99 lbs)

TV Height Adjustment: 900 - 1100 mm

Shelf Height Adjustment: 200 - 910 mm

Compatible Devices: Television, Monitor

Item Weight: 12.505 kg (12505 Grams)

Country of Origin: China

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This SpeaKa Professional product comes with a 2-year manufacturer's warranty. Please refer to the terms and conditions provided with your purchase or visit the official SpeaKa Professional website for full details. Keep your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, missing parts, or warranty inquiries, please contact your retailer or SpeaKa Professional customer support. Contact information can typically be found on the product packaging or the official brand website.

