

Annex Aubert Lenore Catman of Paris The 01 S

Generic Annex Aubert Lenore Catman of Paris The 01 S Canvas Print Instruction Manual

INTRODUCTION

This manual provides instructions for the proper setup, usage, and maintenance of your Generic Annex Aubert Lenore Catman of Paris The 01 S Canvas Print. This wall art is designed to enhance your living space with its premium quality print on a wooden frame.

SETUP AND INSTALLATION

Your canvas print arrives ready to hang. Follow these steps for safe and secure installation:

1. **Unpacking:** Carefully remove the canvas print from its packaging. Inspect for any damage during transit.
2. **Location Selection:** Choose a wall location that is clean, dry, and away from direct sunlight or extreme temperature fluctuations to prevent fading or warping.
3. **Mounting Hardware:** Determine the appropriate mounting hardware for your wall type (e.g., picture hooks, nails, screws with anchors). Ensure the hardware can support the weight of the canvas print.
4. **Leveling:** Use a level to mark the desired hanging position on the wall.
5. **Hanging:** Securely attach the mounting hardware to the wall. Carefully hang the canvas print, ensuring it is level and stable.

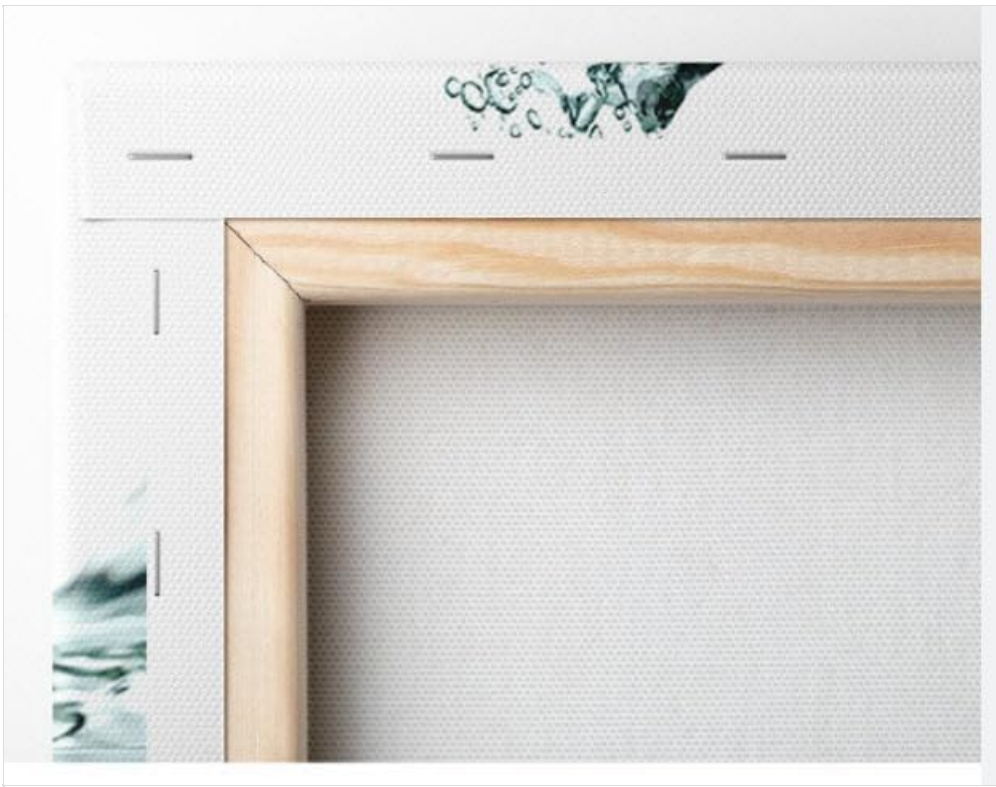


Image: Detail of the canvas print's wooden frame and stapled canvas, illustrating the construction.

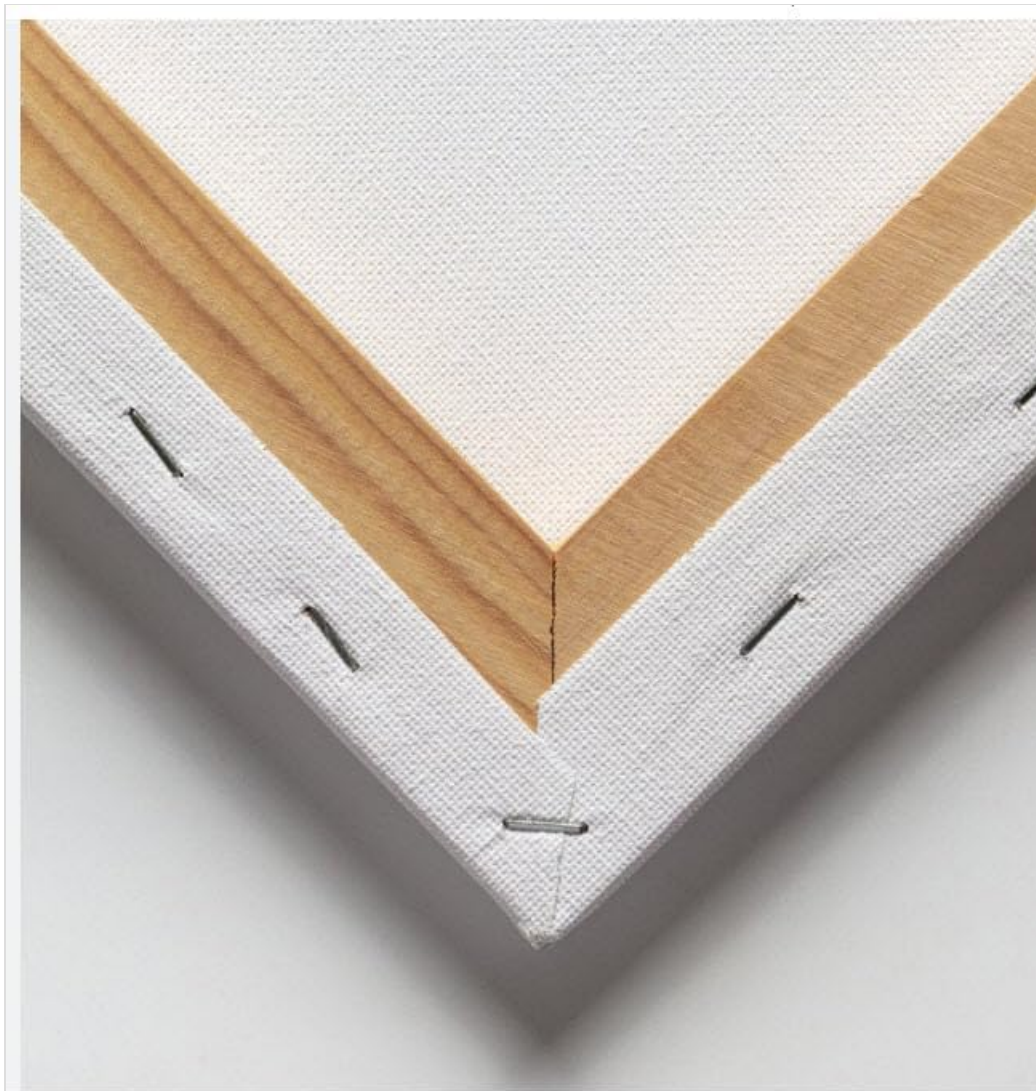


Image: Rear view of a canvas print corner, highlighting the wrapped canvas and wooden frame structure.

USAGE

Once installed, your canvas print requires no further operation. It is intended for static display as a decorative wall art piece. Ensure it is securely fastened to prevent accidental falls.



Image: Example of the canvas print displayed on a wall in a room setting.

CARE AND MAINTENANCE

To maintain the quality and longevity of your canvas print, follow these care guidelines:

- **Dusting:** Gently dust the surface of the canvas with a soft, dry cloth or a feather duster regularly to prevent dust buildup.
- **Cleaning:** Do not use water, cleaning sprays, or abrasive cleaners on the canvas. If necessary, a very slightly damp cloth can be used on the wooden frame, but avoid contact with the canvas itself.
- **Environmental Conditions:** Avoid hanging the print in areas with high humidity, extreme temperatures, or direct sunlight, as these can cause fading, warping, or damage to the canvas and frame.
- **Handling:** When moving the print, handle it by the wooden frame to avoid touching or damaging the canvas surface.

TROUBLESHOOTING

Most issues with canvas prints are related to environmental factors or handling. Consider the following:

- **Fading Colors:** If colors appear to be fading, check if the print is exposed to direct sunlight. Relocate the print to an area with less direct light.
- **Canvas Sagging:** Minor sagging can sometimes occur due to humidity changes. Ensure the environment is stable. For significant sagging, professional restretching may be required, though this is rare for new prints.
- **Frame Warping:** Warping of the wooden frame is usually caused by extreme humidity or temperature fluctuations. Ensure the print is in a stable environment.
- **Dust/Dirt Accumulation:** Refer to the "Care and Maintenance" section for proper cleaning methods.

Avoid harsh chemicals.

SPECIFICATIONS

Feature	Detail
Product Model	Annex Aubert Lenore Catman of Paris The 01 S
Brand	Generic
ASIN	B0FD88631N
Size	24"x36" (60cm x 90cm)
Item Dimensions (L x W)	35.43"L x 23.62"W
Orientation	Landscape
Item Shape	Rectangular
Color	Multi
Frame Type	Wrapped Canvas
Frame Material	Wood

WARRANTY AND SUPPORT

This product comes with a **100% satisfaction guarantee**. If you encounter any issues or are not completely satisfied with your purchase, please refer to the seller's return policy or contact the retailer where the product was purchased for assistance.



Image: Premium Quality Guaranteed badge, representing product assurance.