

Pro70 earbuds

Wireless Earbuds Pro70 User Manual

Model: Pro70 Earbuds | Brand: Generic

1. INTRODUCTION

Thank you for choosing the Wireless Earbuds Pro70. These true wireless stereo (TWS) earbuds are designed to provide a superior audio experience with advanced features such as Bluetooth 5.3 connectivity, deep bass, ENC noise-cancelling microphone, and IPX7 waterproofing. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

2. PACKAGE CONTENTS

- Wireless Earbuds Pro70 (Left and Right)
- Wireless Charging Case
- USB Charging Cable
- Multiple Sizes of Silicone Ear Tips
- User Manual

3. PRODUCT OVERVIEW



This image displays the green Wireless Earbuds Pro70 nestled within their transparent-lidded charging case. The case is open, revealing both earbuds. The charging case features a digital display in the center, showing '80', indicating the battery percentage. The earbuds themselves are a vibrant green, with small red indicator lights visible on each. The overall design is sleek and compact.

Earbud Components:

- **Touch Control Area:** For playback, call management, and voice assistant activation.
- **Microphone:** For calls and voice commands, featuring ENC noise cancelling.
- **LED Indicator:** Shows pairing status, charging status, and battery level.
- **Charging Contacts:** For charging within the case.

Charging Case Components:

- **Earbud Charging Slots:** Securely holds and charges the earbuds.
- **Digital Battery Display:** Shows the remaining battery percentage of the charging case.
- **USB-C Charging Port:** For charging the case.
- **Lid:** Protects the earbuds and charging slots.

4. SETUP

First Use:

1. Fully charge the charging case and earbuds before first use.
2. Select the most comfortable silicone ear tips for a secure and optimal listening experience.

Pairing with Your Device:

1. Open the charging case. The earbuds will automatically power on and enter pairing mode. The LED indicators on the earbuds will flash.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "Pro70 Earbuds" from the list.
4. Once connected, the earbud LED indicators will turn off or flash slowly, and you will hear a confirmation tone.
5. The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

5. OPERATING INSTRUCTIONS

Basic Touch Controls:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant (Siri/Google Assistant):** Triple tap on either earbud.
- **Power On:** Open the charging case or press and hold the touch area for 3 seconds.
- **Power Off:** Place earbuds back into the charging case and close the lid, or press and hold the touch area for 5 seconds.

ENC Noise Cancelling Microphone:

The built-in ENC (Environmental Noise Cancellation) microphone reduces ambient noise during calls, ensuring clearer communication for both you and the person on the other end.

6. CHARGING

Charging the Earbuds:

Place the earbuds into the charging case. They will automatically begin charging. The LED indicators on the earbuds will show charging status, and the digital display on the case will indicate the case's battery level.

Charging the Case:

Connect the provided USB charging cable to the charging port on the case and plug the other end into a USB power source (e.g., wall adapter, computer USB port). The digital display will show the charging progress. A full charge provides up to 3 additional charges for the earbuds, extending total playtime to approximately 32 hours.

7. WATER RESISTANCE (IPX7)

The Wireless Earbuds Pro70 are IPX7 waterproof, meaning they can withstand submersion in up to 1 meter of water for 30 minutes. This makes them suitable for:

- Wearing in the rain
- Workouts at the gym
- Running and jogging
- Hiking and yoga
- General travel

Note: The charging case is not waterproof. Do not expose the charging case to water or moisture. Ensure earbuds are completely dry before placing them back into the charging case to prevent damage.

8. MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging contacts with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Temperature:** Avoid exposing the earbuds and case to extreme temperatures (hot or cold) or direct sunlight for extended periods.
- **Avoid Drops:** Handle the earbuds and case with care to prevent damage from drops or impacts.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Earbuds not pairing with device	Bluetooth off; earbuds not in pairing mode; device too far.	Ensure Bluetooth is on; open case to activate pairing; move device closer (within 33 ft).
Only one earbud working	Low battery; earbuds not properly synced.	Charge both earbuds fully. Place both earbuds back in case, close lid, then reopen to re-sync.
Earbuds not charging	Poor contact; dirty charging contacts; faulty cable/charger.	Ensure earbuds are correctly seated. Clean charging contacts. Try a different USB cable or power source.
Low volume or poor sound quality	Ear tips not sealed; earbud grilles blocked; device volume low.	Try different size ear tips. Gently clean earbud grilles. Increase volume on your device.

10. SPECIFICATIONS

Model Name	Pro70 earbuds
Brand	Generic
Connectivity Technology	Wireless (Bluetooth 5.3)
Ear Placement	In Ear
Form Factor	In Ear
Color	Green
Playtime (Earbuds)	Up to 8 hours per charge
Charging Case Battery	400 mAh (provides up to 3 full charges for earbuds)
Total Playtime with Case	Up to 32 hours
Water Resistance Rating	IPX7
Included Components	Wireless Charging Case
Manufacturer	China
ASIN	B0FD8HR9Y2
Date First Available	June 15, 2025

11. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the packaging or the retailer's website for specific warranty terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact the seller or manufacturer through the platform where you purchased the product.

Please retain your proof of purchase for warranty purposes.