

Dyzeryk MP3 Player

Dyzeryk MP3 Player User Manual

Model: MP3 Player with 16GB Micro SD Card

INTRODUCTION

Thank you for choosing the Dyzeryk MP3 Player. This manual provides essential information for setting up, operating, and maintaining your device. Please read these instructions carefully to ensure proper use and to maximize your experience with the MP3 player's features, including music playback, FM radio, voice recording, photo/video viewing, and e-book reading.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- Dyzeryk MP3 Player (Dark Blue)
- 16GB Micro SD Card
- Wired Earphones
- USB Charging Cable
- User Manual (this document)

DEVICE OVERVIEW

Familiarize yourself with the physical components of your Dyzeryk MP3 Player.



An image showing the blue Dyzyrk MP3 player, a 16GB Micro SD card, and a pair of white wired earphones. The MP3 player's screen displays music playback information with an equalizer graphic. The player has a circular control pad with 'M', 'Play/Pause', 'Skip', and 'VOL' buttons. The back of the player shows a speaker grille and an 'OFF' switch.

Controls and Ports:

- **Screen:** Displays menus, music information, photos, and videos.
- **Circular Control Pad:** Navigates menus and controls playback.
- **'M' Button:** Menu button, typically used to go back or access options.
- **Play/Pause Button:** Center button on the control pad, used to start/pause playback.
- **Skip Buttons (◀◀ / ▶▶):** Used to navigate between tracks or fast forward/rewind.
- **'VOL' Button:** Volume control.
- **Micro SD Card Slot:** For inserting the memory card.
- **Headphone Jack:** For connecting earphones.
- **USB Port:** For charging and data transfer.
- **Power Switch (OFF):** Located on the side/back to turn the device completely off.
- **Built-in Speaker:** Located on the back for audio output without earphones.

SETUP

1. Charging the Device

1. Connect the small end of the USB charging cable to the MP3 player's USB port.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The battery indicator on the screen will show charging status. Allow approximately 2-3 hours for a full charge.
4. Disconnect the cable once fully charged.

2. Inserting the Micro SD Card

1. Locate the Micro SD card slot on the side of the MP3 player.
2. Gently insert the provided 16GB Micro SD card into the slot with the gold contacts facing down (or as

indicated by a small icon next to the slot).

3. Push the card in until it clicks into place. To remove, push it in again until it springs out.

3. Loading Music and Other Files

1. Ensure the MP3 player is powered on.
2. Connect the MP3 player to your computer using the USB cable.
3. The player will appear as a removable disk drive on your computer.
4. Open the drive and drag-and-drop your music files (e.g., MP3, WMA), photos (e.g., JPEG), videos (e.g., AMV), or e-books (e.g., TXT) into the appropriate folders on the Micro SD card. You may create new folders for organization.
5. Once files are transferred, safely eject the removable disk from your computer before disconnecting the USB cable.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Slide the 'OFF' switch to the 'ON' position. The screen will light up.
- **To Power Off:** Slide the 'OFF' switch to the 'OFF' position. The screen will turn off.

2. Basic Navigation

- Use the circular control pad's directional buttons (up, down, left, right) to navigate through menus.
- Press the center Play/Pause button to select an option or confirm an action.
- Press the 'M' button to go back to the previous menu or exit a function.

3. Music Playback

1. From the main menu, select 'Music' or 'Audio'.
2. Navigate through your folders and select a song. Press the Play/Pause button to start playback.
3. During playback:
 - Press Play/Pause to pause or resume.
 - Press ►► to skip to the next track.
 - Press ◀◀ to go to the beginning of the current track or the previous track.
 - Press and hold ►► or ◀◀ to fast forward or rewind.
 - Use the 'VOL' button to adjust the volume level.
4. Press 'M' to return to the music list or main menu.

4. FM Radio

1. Connect the earphones; they act as the antenna for the FM radio.
2. From the main menu, select 'FM Radio'.
3. Use the navigation buttons to scan for stations or manually tune.
4. Press Play/Pause to start/stop the radio.

5. Voice Recorder

1. From the main menu, select 'Recorder' or 'Voice Record'.
2. Select 'Start Recording' to begin.
3. Press Play/Pause to stop and save the recording.

- Recordings are typically saved in a 'RECORD' folder and can be played back from the 'Music' or 'Files' menu.

6. E-Book Reader

- From the main menu, select 'E-Book'.
- Navigate to your desired TXT file and press Play/Pause to open it.
- Use the navigation buttons to scroll through pages.

7. Photo and Video Playback

- From the main menu, select 'Photos' or 'Videos'.
- Navigate to your desired file and press Play/Pause to view/play.
- For videos, ensure they are in a compatible format (e.g., AMV) for smooth playback on the device's screen.

8. Built-in Speaker

The device features a built-in speaker for audio playback without earphones. When earphones are disconnected, audio will typically output through the speaker. Adjust volume using the 'VOL' button.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

If you encounter issues with your MP3 player, refer to the following common problems and solutions:

- **Device does not turn on:**
 - Ensure the 'OFF' switch is in the 'ON' position.
 - Charge the device for at least 30 minutes. The battery may be completely depleted.
- **No sound or low volume:**
 - Check if earphones are properly connected. If using the built-in speaker, ensure earphones are disconnected.
 - Adjust the volume using the 'VOL' button.
 - Ensure the audio file is not corrupted. Try playing a different file.
- **Music files not appearing or playing:**
 - Ensure files are transferred to the Micro SD card and are in a compatible format (e.g., MP3, WMA).
 - Check if the Micro SD card is properly inserted.
- **Device freezes or becomes unresponsive:**
 - Try sliding the 'OFF' switch to 'OFF' and then back to 'ON' to restart the device.
 - If a reset button is available (often a small pinhole), use a thin object (like a paperclip) to press it gently.
- **Poor FM radio reception:**
 - Ensure earphones are connected, as they function as the antenna.
 - Try moving to a different location to improve signal strength.


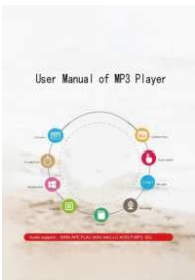

SPECIFICATIONS

Brand	Dyzeryk
Model	MP3 Player
Screen Size	1.8 Inches
Included Storage	16GB Micro SD Card
Max Storage Support	Up to 128GB (Micro SD Card)
Battery	1 9V battery required (included)
Item Weight	4.2 ounces
Package Dimensions	4.09 x 2.13 x 1.46 inches
ASIN	B0FD8LKZ2C
UPC	639558243760, 639558243753, 639558243777, 639558243616

WARRANTY AND SUPPORT

This product may come with a manufacturer's warranty. For specific warranty details, including duration and coverage, please refer to any documentation included with your purchase or contact the retailer where the product was acquired. If you require technical assistance or have questions not covered in this manual, please reach out to the seller or retailer for support.

Related Documents - MP3 Player

	Dyzeryk MP3 Player User Instructions User instructions for the Dyzeryk MP3 Player, covering button navigation, supported formats for music, videos, radio, pictures, recordings, ebooks, settings, and troubleshooting.
	User Manual of MP3 Player This user manual provides comprehensive instructions for operating the MP3 Player, covering basic functions, music playback, radio operation, recording, Bluetooth connectivity, settings, tools, and troubleshooting.
	X20 Digital MP3 Player User Manual - Features, Operation, and Troubleshooting Comprehensive user manual for the X20 Digital MP3 Player, covering its features, basic operations, music playback, video, photos, e-books, FM radio, recording, settings, computer connection, and common troubleshooting questions.



User Manual

[Vandlion X19 Digital Media Player User Manual](#)

Comprehensive user manual for the Vandlion X19 digital media player, covering features, operation, troubleshooting, and technical specifications. Learn how to use music playback, video, e-books, voice recording, FM radio, and more.



[Denver MP-1820MK2 Portable Media Player User Manual](#)

Comprehensive user manual for the Denver MP-1820MK2 portable media player, detailing features, operation, safety guidelines, and support contact information for various regions.



MAJESTIC

DE INTERVIEW



LIBRETTO DI ISTRUZIONI

Modello BT-8057R MP4
Data: 01/2014
© 2014 Majestic
CE

[Majestic BT-8057R MP4 Player User Manual and Specifications](#)

Comprehensive user manual and technical specifications for the Majestic BT-8057R MP4 player, covering features, operation, music playback, video playback, recording, image viewing, text reading, settings, Bluetooth connectivity, troubleshooting, and warranty information.