

DUSONLAP E6

DUSONLAP E6 Open Ear Earbuds User Manual

Model: E6 | Brand: DUSONLAP

1. INTRODUCTION

Thank you for choosing the DUSONLAP E6 Open Ear Earbuds. These wireless headphones are designed to provide a comfortable listening experience while keeping you aware of your surroundings. Featuring Bluetooth 5.4 for stable connectivity, HiFi stereo sound, ENC call noise reduction, and IPX7 waterproofing, the E6 earbuds are ideal for daily use, sports, and commuting.

This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance and longevity.

2. PACKAGE CONTENTS

Please check the box for the following items:

- Open-ear headphones (Left & Right) x 2
- Quick charging case x 1
- USB-C fast charging cable x 1
- User Manual x 1

How to wear?

Step 1



Simply remove the headphones

Step 2



Hang the headphones on your ear bone for a perfect fit.

Step 3



Turn the earphones and slide it behind the ear.

Step 4



Adjust ear hook, wear and pulldown ear hook for secure fit.

Figure 2.1: Package Contents

3. PRODUCT OVERVIEW

3.1 Earbud Components

The DUSONLAP E6 earbuds feature an ergonomic ear hook design for secure and comfortable wear. Each earbud contains a 14mm large driver unit for high-fidelity audio and a built-in microphone for clear calls.



Figure 3.1: Earbud Internal Structure

3.2 Charging Case

The compact charging case not only protects your earbuds but also provides extended battery life. It features a digital display to show the remaining battery percentage of the case and the charging status of each earbud.



Figure 3.2: Earbuds in Charging Case

4. SETUP

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case. Ensure the charging contacts align.
2. Connect the USB-C charging cable to the charging port on the case and the other end to a USB power adapter (not included).
3. The digital display on the case will show the charging progress. A full charge takes approximately 1.5 hours.

The earbuds offer up to 8 hours of playtime on a single charge, and the charging case provides an additional

24 hours, totaling up to 32 hours of use.



Figure 4.1: Charging the Earbuds and Case

4.2 Bluetooth Pairing

The earbuds utilize Bluetooth 5.4 for quick and stable connections.

1. Open the charging case. The earbuds will automatically power on and enter pairing mode. The indicator light on the earbuds will flash.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "E6" in the list of available Bluetooth devices and select it to connect.
4. Once connected, the earbud indicator lights will turn off, and your device will confirm the connection.

The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

One-Step Pairing , Instant Access



Open

Auto power on and connect



Close

Auto disconnect and power off

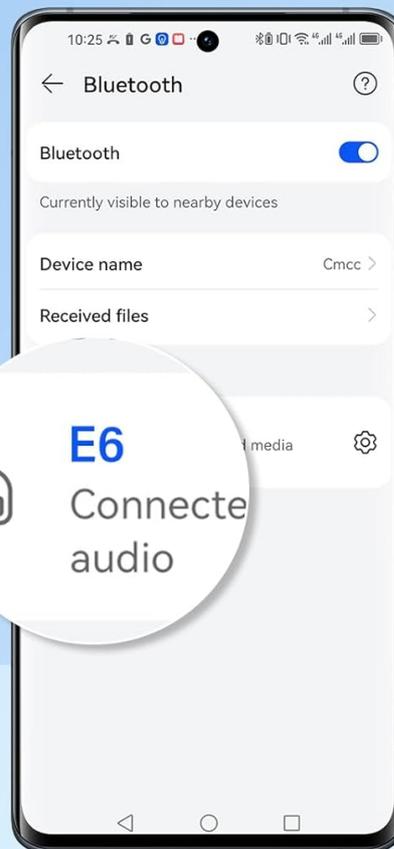


Figure 4.2: Bluetooth Pairing Process

5. OPERATING INSTRUCTIONS

5.1 Wearing the Earbuds

The E6 earbuds are designed for an open-ear fit, resting comfortably on your ear without inserting into the ear canal.

1. Simply remove the headphones from the case.
2. Hang the headphones on your ear bone for a perfect fit.
3. Turn the earphones and slide it behind the ear.
4. Adjust the ear hook, wear, and pull down the ear hook for a secure fit.

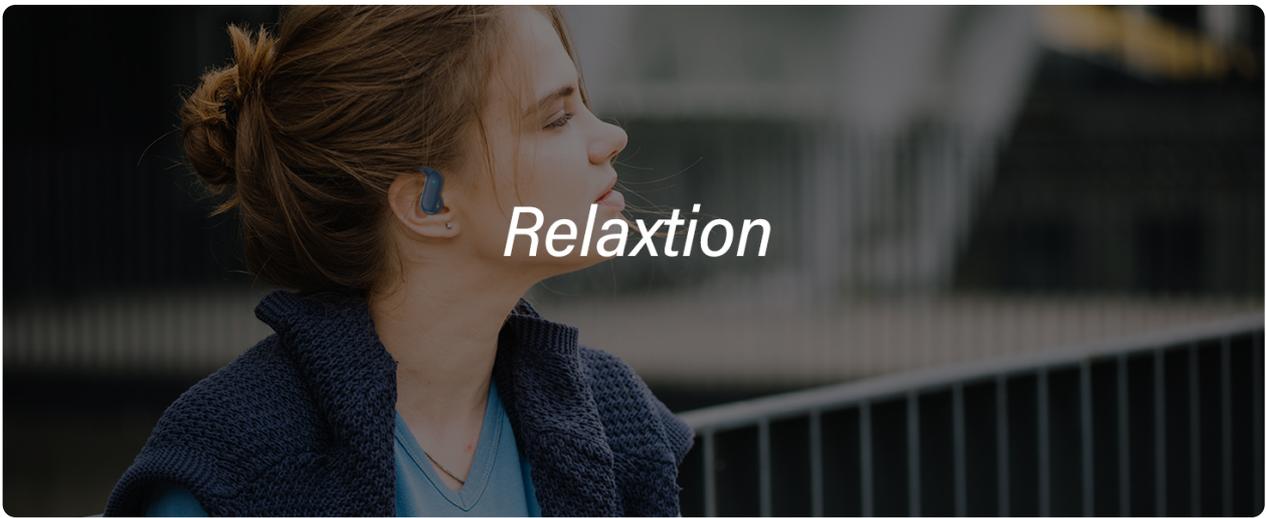


Figure 5.1: How to Wear the Earbuds

5.2 Touch Controls

The earbuds feature intuitive touch controls on the outer surface of each earbud.

Action	Left Earbud	Right Earbud
Play/Pause	Double Tap	Double Tap
Volume Up	Single Tap	N/A
Volume Down	N/A	Single Tap
Next Track	Press and Hold (2s)	N/A
Previous Track	N/A	Press and Hold (2s)
Answer/End Call	Double Tap	Double Tap
Reject Call	Press and Hold (2s)	Press and Hold (2s)
Activate Voice Assistant	Triple Tap	Triple Tap

Enjoy Up to 32 Hours Playtime with Charging Case

Stay informed with the intuitive smart display on the charging case, keeping you updated on battery levels at a glance.



Figure 5.2: Earbud Touch Controls

5.3 Calling Functions

The built-in ENC microphone technology helps isolate your voice and filter out background noise for clear calls, even in noisy environments.

- **Answer/End Call:** Double tap either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

5.4 Music Playback

Enjoy rich, immersive HiFi stereo sound with the customized 14mm large driver units.

- **Play/Pause:** Double tap either earbud.
- **Volume Control:** Single tap the left earbud for Volume Up, single tap the right earbud for Volume Down.
- **Next Track:** Press and hold the left earbud for 2 seconds.
- **Previous Track:** Press and hold the right earbud for 2 seconds.

6. MAINTENANCE

6.1 Cleaning

Regular cleaning helps maintain the performance and hygiene of your earbuds.

- Wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Ensure the charging contacts on both the earbuds and the case are clean and dry to prevent charging issues.

6.2 Storage

When not in use, store the earbuds in their charging case to protect them from dust and damage.

- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

6.3 Water Resistance (IPX7)

The DUSONLAP E6 earbuds are IPX7 rated, meaning they are protected against temporary immersion in water (up to 1 meter for 30 minutes). This makes them resistant to sweat, rain, and splashes.

- Do not intentionally submerge the earbuds in water for extended periods or use them for swimming.
- Ensure the earbuds are completely dry before placing them back into the charging case to prevent damage to the charging contacts.

One-Touch Control, Smart and Convenient



Figure 6.1: IPX7 Water Resistance

7. TROUBLESHOOTING

If you encounter any issues with your DUSONLAP E6 earbuds, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Earbuds not pairing	Bluetooth off on device; earbuds not in pairing mode; interference.	Ensure Bluetooth is on. Place earbuds in case, close, then open to re-enter pairing mode. Move away from other wireless devices.
Only one earbud working	Earbuds not properly connected to each other; low battery.	Place both earbuds back in the case, close the lid, wait a few seconds, then open again. Ensure both earbuds are charged.

Problem	Possible Cause	Solution
No sound or low volume	Volume too low on device/earbuds; earbuds not connected; dirty sound outlet.	Increase volume on both device and earbuds. Reconnect earbuds. Clean the earbud sound outlet gently.
Charging issues	Dirty charging contacts; faulty cable/adapter.	Clean charging contacts on earbuds and case. Try a different USB-C cable and power adapter.
Connection unstable	Distance from device; interference.	Keep earbuds within 15 meters of your device. Avoid strong electromagnetic interference.

If the issue persists after trying these steps, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	E6
Connectivity Technology	Wireless (Bluetooth 5.4)
Ear Placement	Open-Ear / On Ear
Driver Size	14mm
Playtime (Single Charge)	Up to 8 hours
Total Playtime (with Case)	Up to 32 hours
Charging Time	Approx. 1.5 hours (earbuds & case)
Water Resistance Level	IPX7
Control Type	Touch Control
Microphone	Built-in with ENC Noise Reduction
Compatible Devices	iOS, Android, Windows devices with Bluetooth
Item Weight	4.2 ounces
Package Dimensions	3.74 x 3.43 x 1.34 inches

9. WARRANTY AND SUPPORT

DUSONLAP E6 Open Ear Earbuds come with a two-year warranty from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

For customer service, technical support, or warranty claims, please contact DUSONLAP customer service

through the retailer where you purchased the product or visit the official DUSONLAP website for contact information.

Please retain your proof of purchase for warranty validation.